

Safety Recall 610572 Rev. 1



631 West 11th Street • P.O. Box 310 • Winamac, IN 46996

(574) 946-4139 • 1-800-THE-LIFT • www.braunability.com

May 2025

NHTSA Recall No.: 26V280

Warranty Topic: Recall / 26V280 / Repair

Applicable for 2025 and 2026 Dodge Promaster

Labor Time: 1 Hour

Installation Kit: 610822KS

Retain All Mounting Hardware

Tools Required


3/4" Deep Well Socket • 5/16" Hex Socket • 17mm Deep Well Socket • 9/16" Deep Well Socket
Impact or Ratchet



1. Remove seat cushion and disconnect harness (if present). See Photos A through C.


2. Repeat on opposite seat.

Seat Harness
Connector

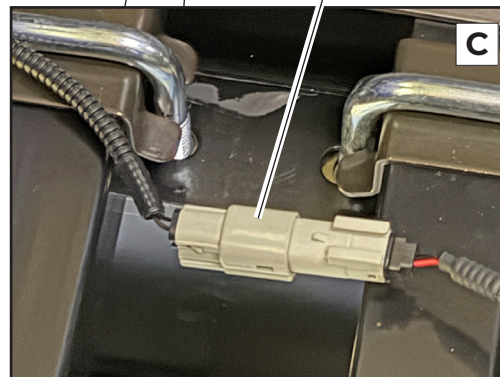




3. Using a 3/4" socket, remove U bolt Nuts. See Photos D through F.

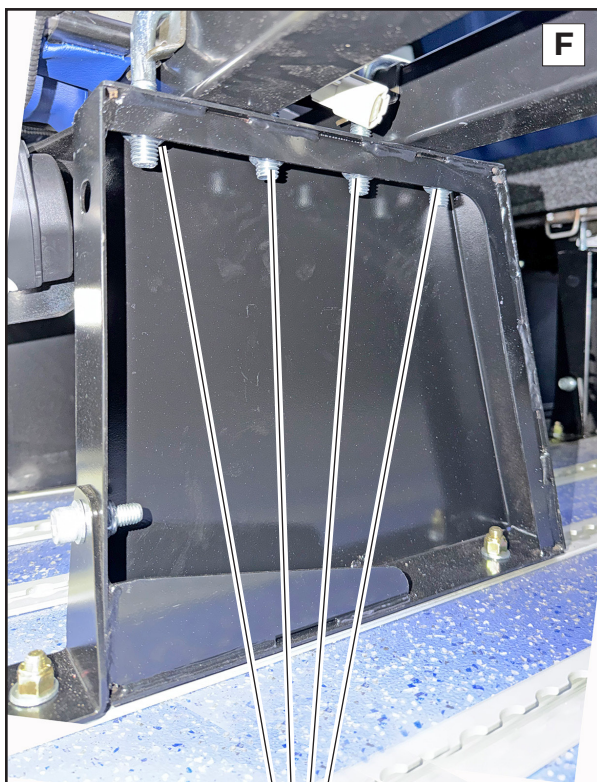


4. Remove U bolts and U bolt saddles. See photo G.

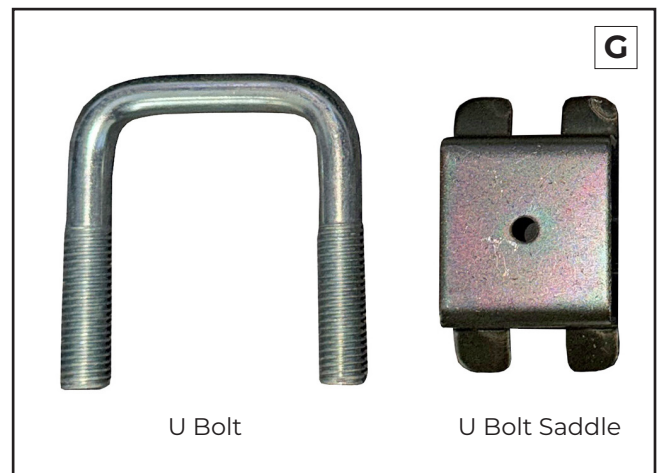



Right Seat Base

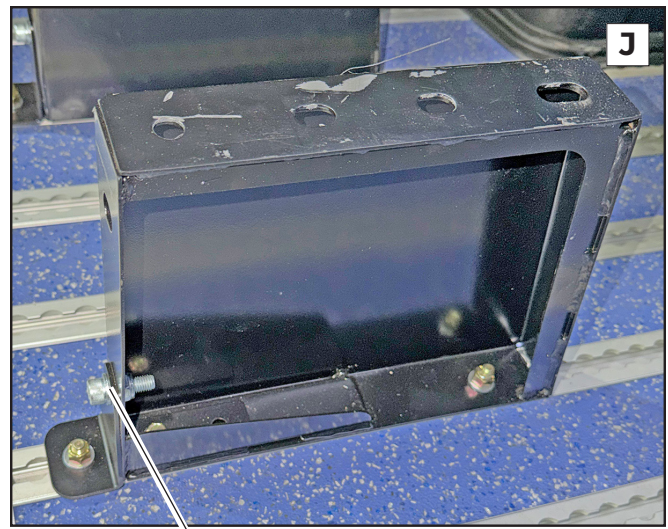


Hex Head Bolt

5. Remove seat. See photo H.

6. Remove right seat base. Refer to Photo H.


- a) Remove bolt shown using 5/16" hex socket and 17mm deep well socket. See Photo J.
- b) Remove track bolt nuts using a 9/16" deep well socket. See Photo K.
- c) Remove seat base and track bolts.

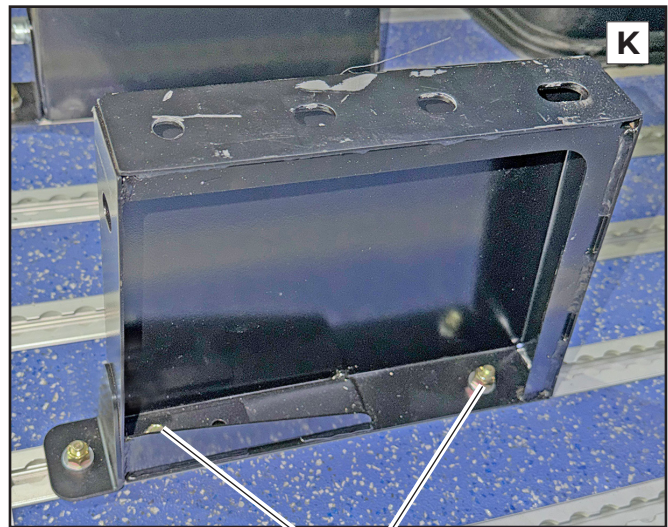

Track Bolts

7. Reinstall seat base one track to the right by performing Step 6 in reverse. Ensure seat base is in the correct position on the track. See Photo L.

Torque all bolts to 35 ft·lbs.

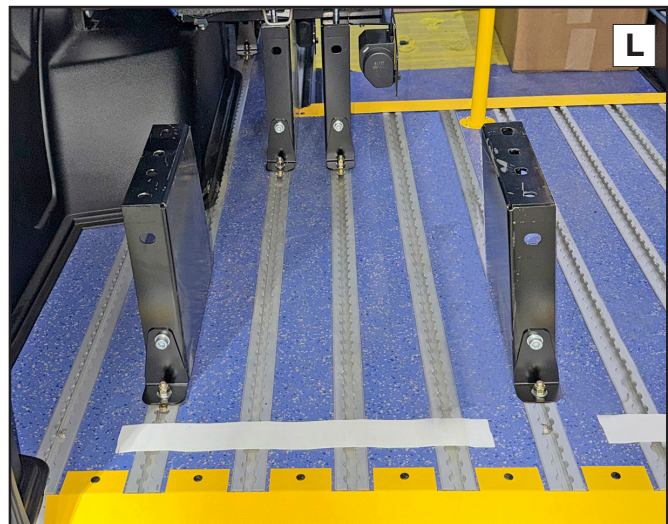

8. Install two seat bases, in kit, using mounting hardware contained in kit. Ensure the open faces of the two new seat bases are oriented to the center. See Photo M.

Torque all bolts to 35 ft·lbs.




9. Install eight U bolts and U bolt saddles, using hardware contained in kit, by performing Steps 3 and 4 in reverse. See Photo N.

Torque all bolts to 35 ft·lbs.




10. Reinstall seat cushions.

Ensure seat cushion base engages hooks on seat frame when reinstalling.

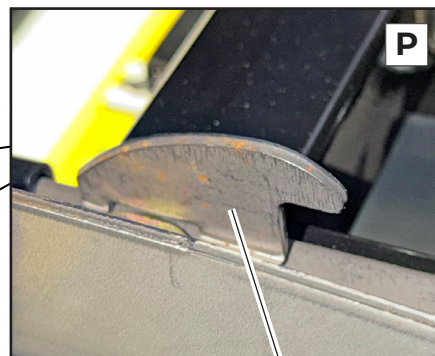

Seat Hook

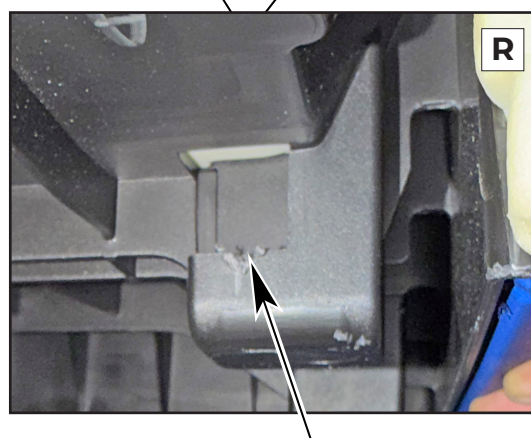

Hooks Engage Here