

## **SP12-924 SECURING THE SPLASH GUARD - H SERIES**



THE SPLASH GUARD MOUNTING BOLTS MAY COME LOOSE IN NORMAL BUS OPERATION. ISSUES ON PRODUCTION VEHICLES AND ON VEHICLES IN SERVICE HAVE BEEN RAISED. CONCERNS H SERIES VEHICLES.


### SECURING THE SPLASH GUARD - H SERIES

ON THE SPLASH GUARD - FRONT OF TRANSMISSION

ADD BLUE LOCTITE **680038** TO BOLTS MOUNTED ON TAG AXLE CASTING.

LOWER BOLTS ON TRIANGULAR STIFFENERS LEFT AND RIGHT ALREADY HAVE LOCTITE

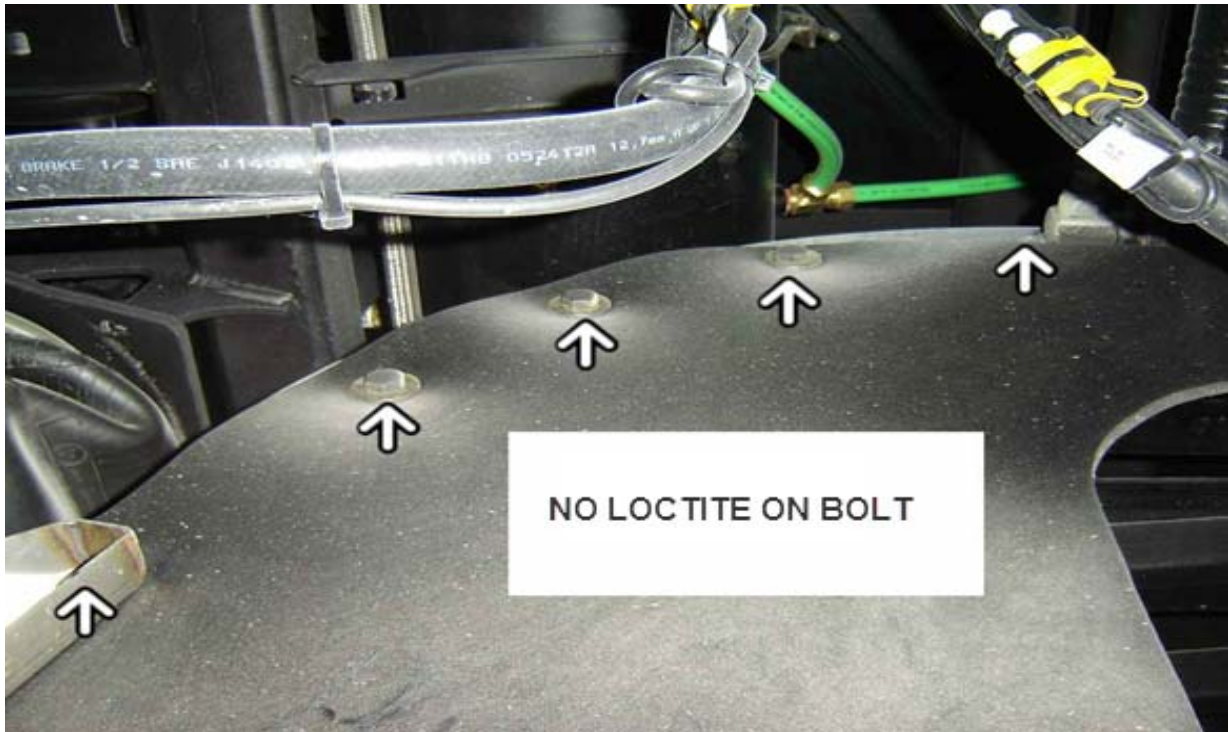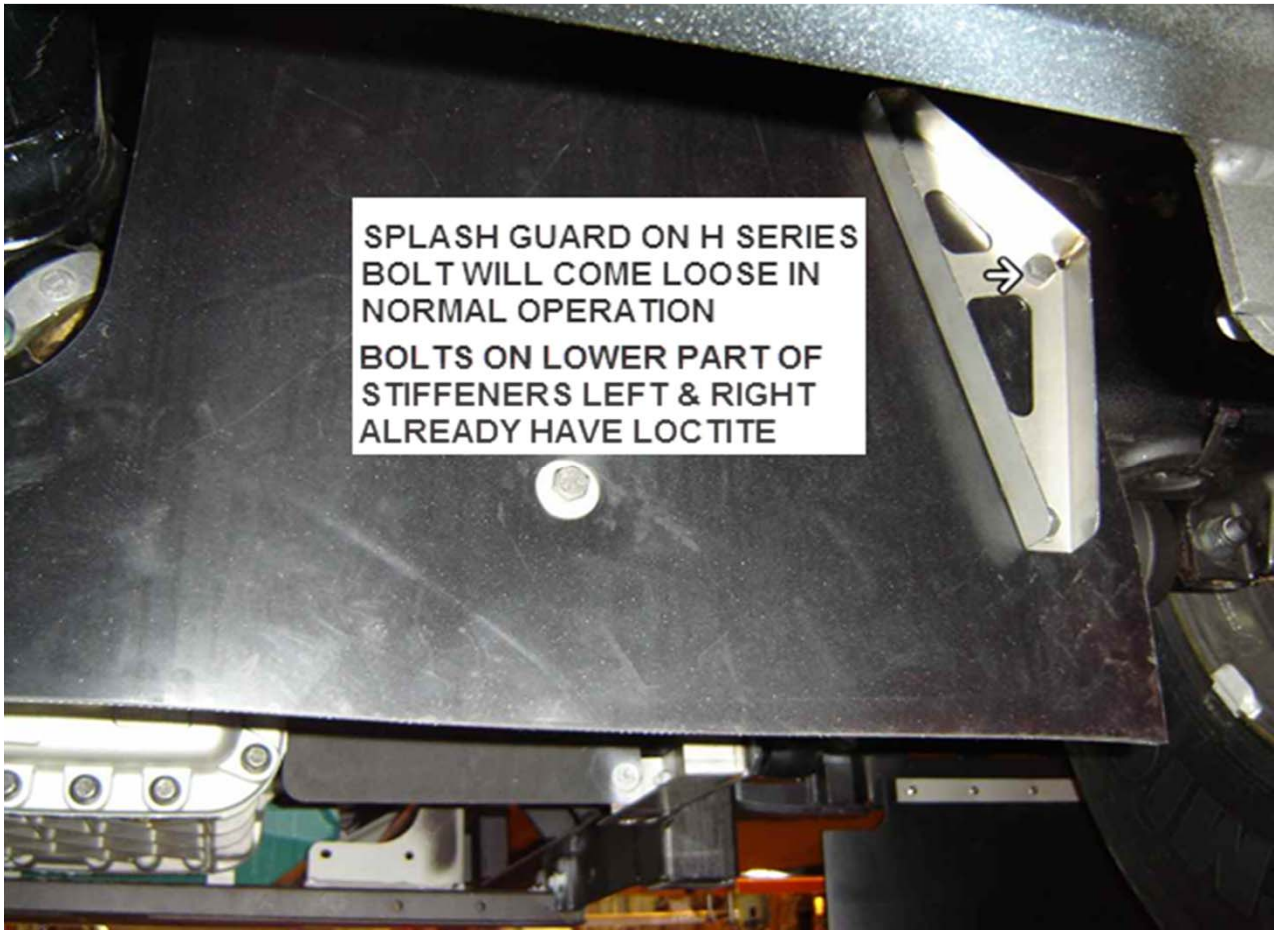

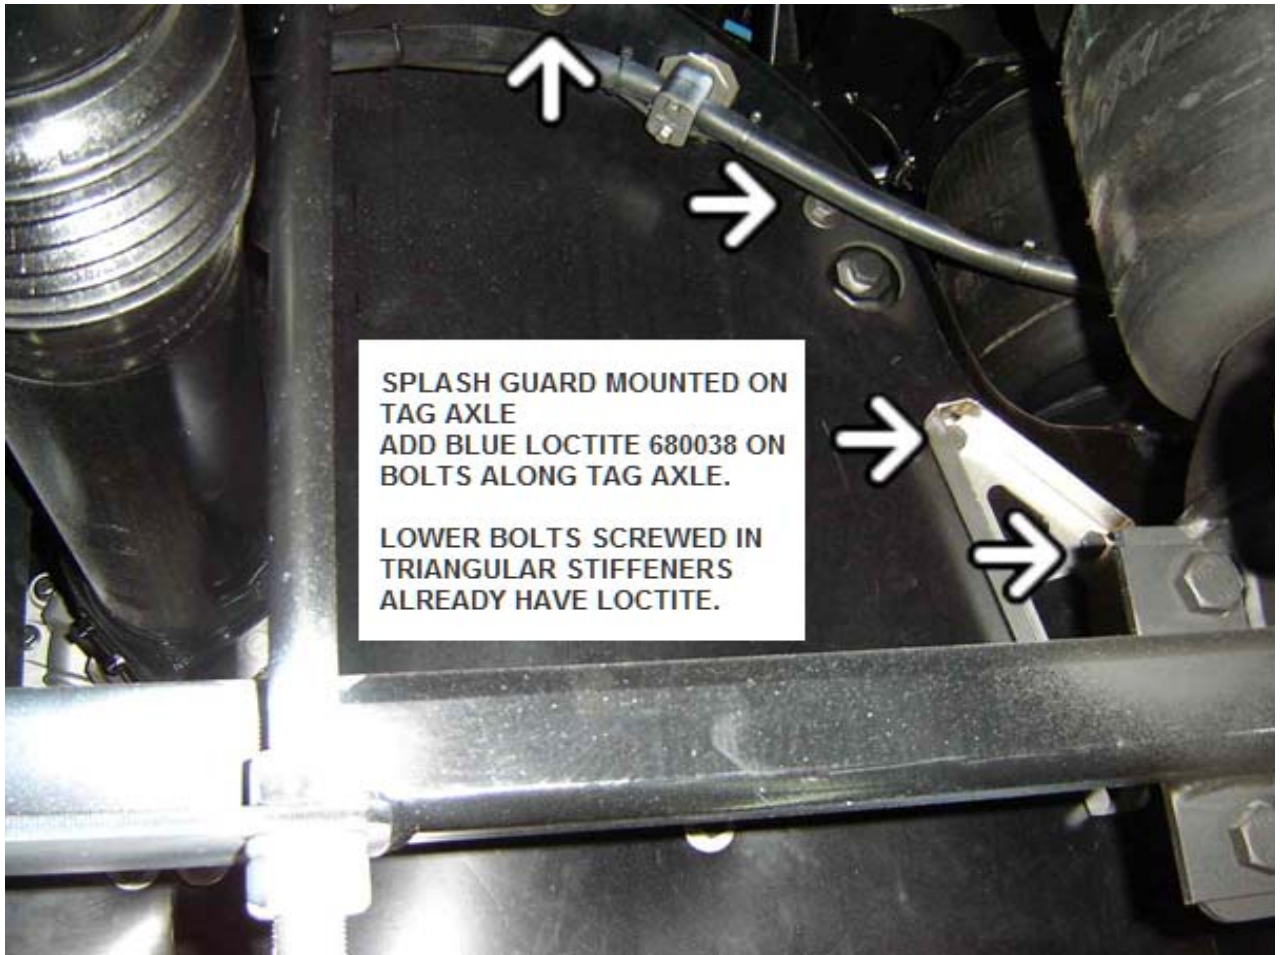

SPLASH GUARD MOUNTED ON  
TAG AXLE  
ADD BLUE LOCTITE 680038 ON  
BOLTS ALONG TAG AXLE.

LOWER BOLTS SCREWED IN  
TRIANGULAR STIFFENERS  
ALREADY HAVE LOCTITE.