



Service Bulletin

File in Section: -

Bulletin No.: PI0476A

Date: September, 2012

PRELIMINARY INFORMATION

Subject: Revised Installation Instructions for Accessory Windbreak

Models: 2011-2013 Chevrolet Corvette Convertible with Accessory Windbreak

This PI is being revised to add the 2013 model year and update the Condition/Concern.
Please discard PI0476.


Condition/Concern

The installation steps for the Accessory Windbreak have been revised for model year 2011-2013 vehicles. An update to the trim bezel fastening system will require new steps to fit the existing components to the 2011-2013 vehicles.

Recommendation/Instructions


Use the following steps along with the existing instruction information (instruction sheet packed with the kit) to install the windbreak kit.

1. In step # 3a, the Torx fastener has been eliminated and replaced with a trim clip. Skip steps # 3a and # 3b, proceed to step # 4a.
2. After step # 8b, perform the following revision to the left and right trim bezels.

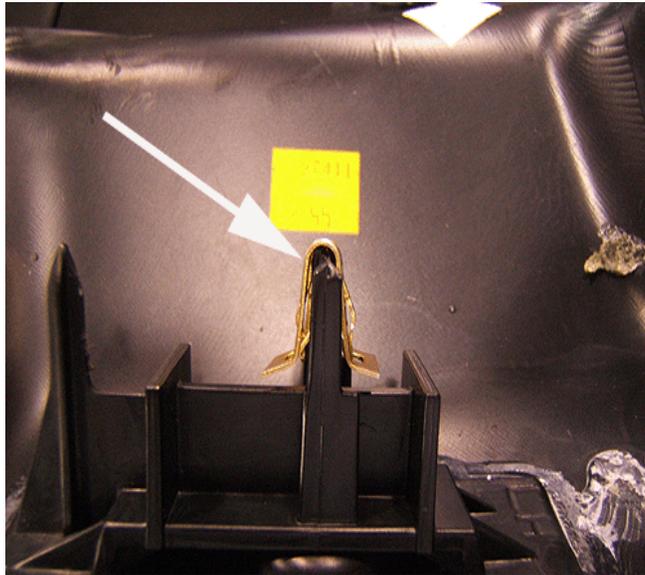

2661162

- Remove the metal retainer from the trim panel fastener on the trim bezel.

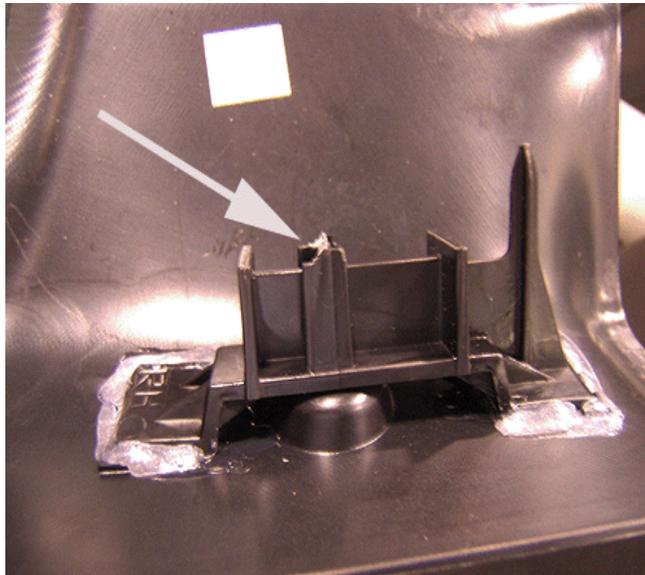

2661163

- Using a pair of side cutters, cut the fin off of the trim panel fastener as shown.



2661166

- Find the center of the depression in the trim bezel and mark for drilling.



2661167

- Using a 5/16" drill bit, drill a hole in the trim bezel and through the trim panel fastener as shown. Use care to drill through the center of the trim panel fastener. If the hole is off center, use the drill to adjust the hole to the center.

3. Proceed to step # 9a.