




Step light wiring routing and info for Toyota Amerivan's

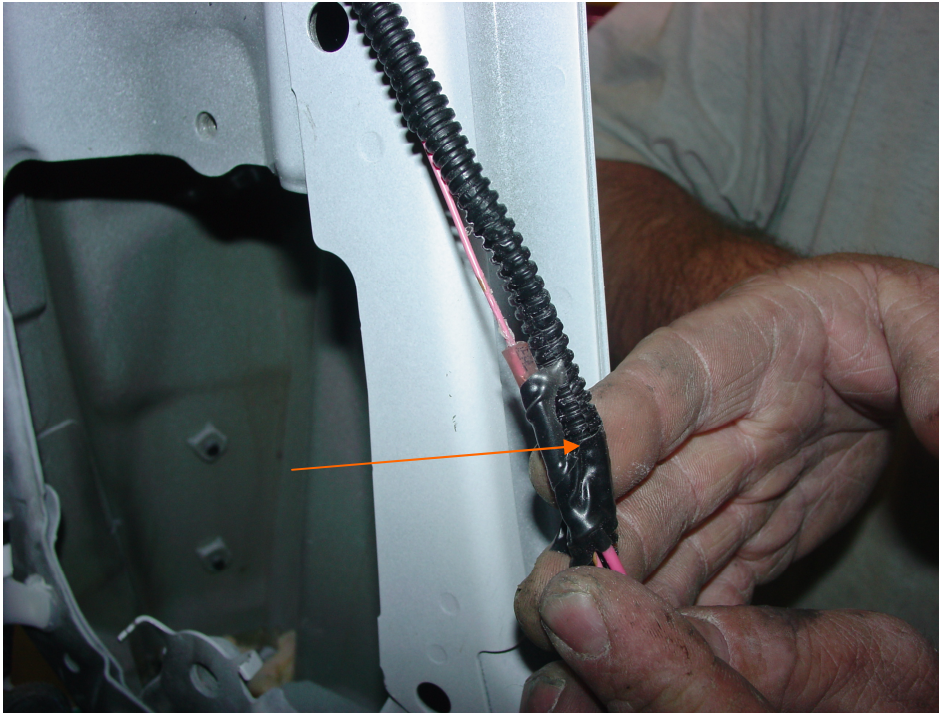

Driver side b-pillar, find the OEM pink wire coming from the door ajar switch, splice the ENC pink wire off ENC harness 0035052 into this OEM pink wire.

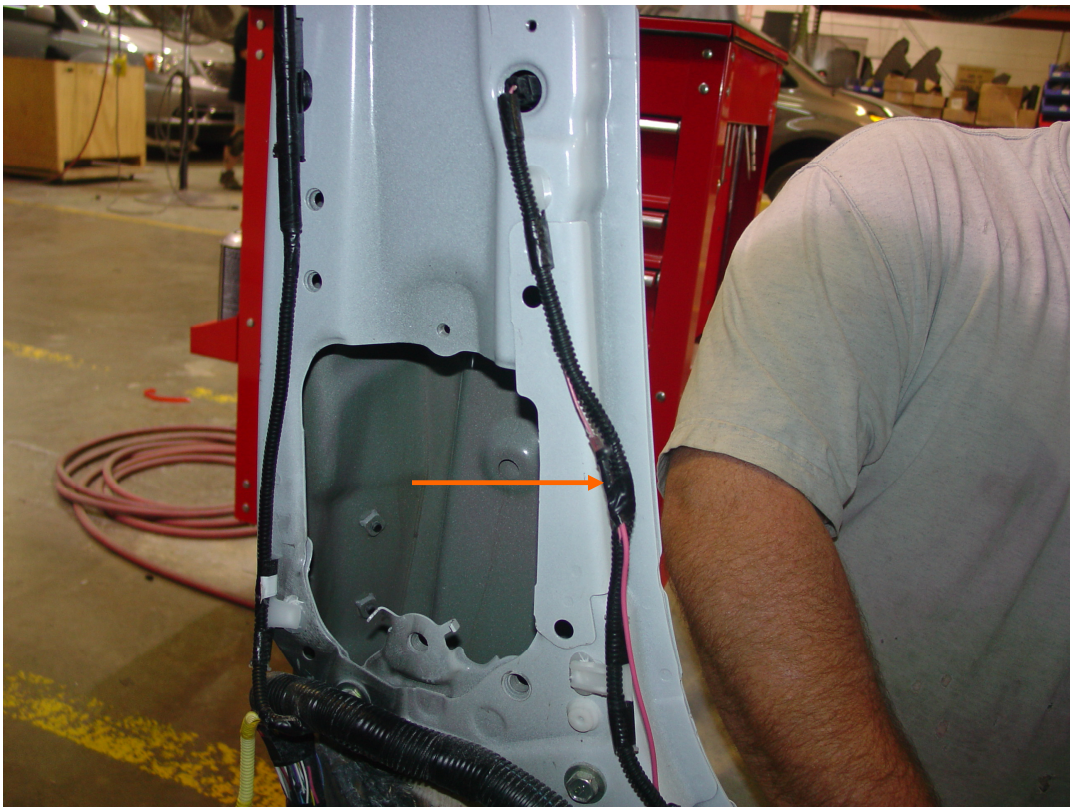


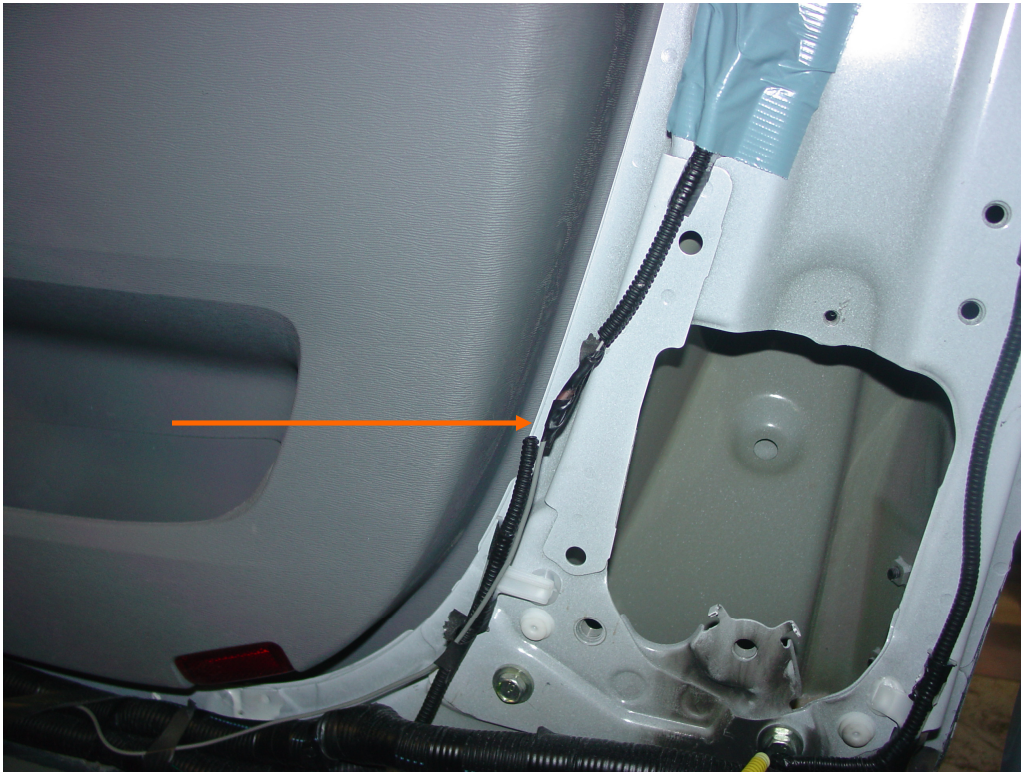

Passanger side b-pillar, find the OEM gray wire coming form the door ajar switch, splice the ENC gray wire off ENC harness 0035052 into this OEM gray wire



The two yellow wires

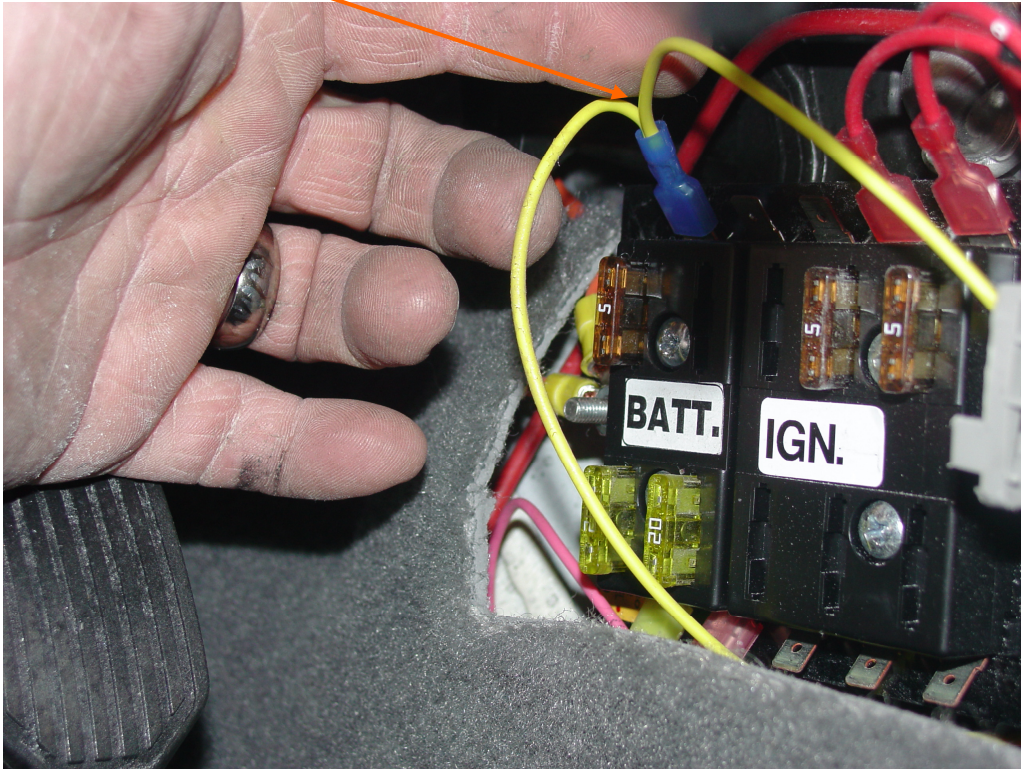

The wire routing is shown by the red lines show, ENC fuse block

