



Countries:
Availability:
Major System: COOLING
Current Language: English
Other Languages: NONE
Viewed: 45

Document ID: IK0900088
Revision: 0
Created: 10/4/2013
Last Modified: 10/8/2013
Author: Bob Ford

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 0	 0

Title: RE Model IC Bus Surge Tank De-Aeration Hose Installation

Applies To: RE Model School and Commercial Bus with 2010 EPA MaxxForce DT

DESCRIPTION





Below diagram outlines the correct installation of the de-aeration hoses on the RE Model Bus, School and Commercial, with 2010 MaxxForce DT.

SYMPTOMS

Intermittent low coolant warning, SPN 111 FMI 1, with coolant level maintained above sensor location.

REPAIR PROCEDURE

De-aeration hose installation should be confirmed when diagnosing low coolant warning concerns. Corrections to hose installation should be made at surge tank eliminating any hose replacement.

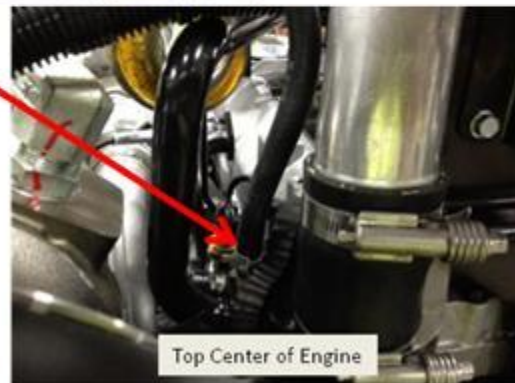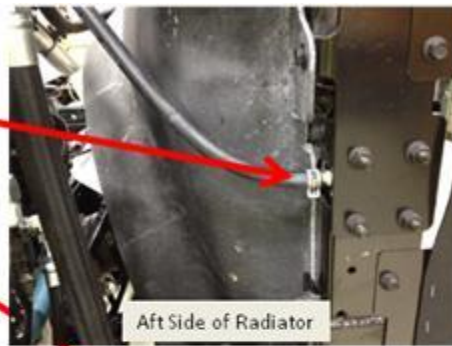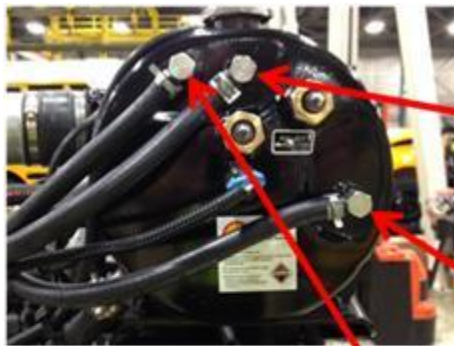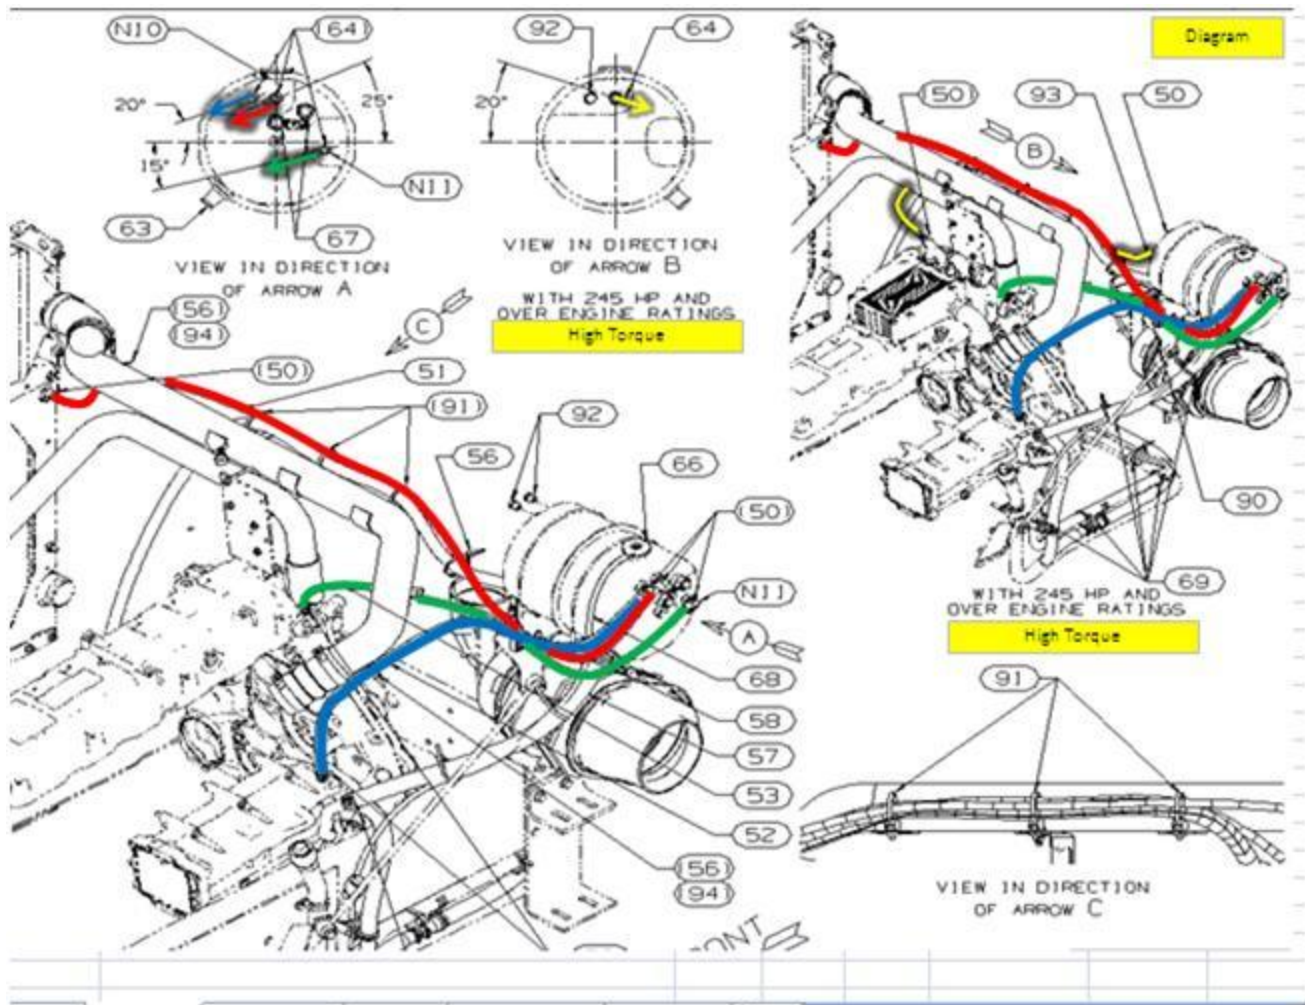

[Hide Details](#)**Feedback Information**

Viewed: 44

Helpful: 0

Not Helpful: 0

No Feedback Found

Copyright © 2013 Navistar, Inc.