


# Front Wheel Opening Extension Pad Installation During PDS

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA

Scion Supports ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2013	iQ EV	

## Introduction

The front wheel opening extension pad set (right and left front wheel opening extension pads, 4 screw clips) is loaded in the luggage compartment at the assembly plant to avoid damage in transit. Install the front wheel opening extension pads to the vehicle during Pre-Delivery Service (PDS).

## Warranty Information

OP CODE	DESCRIPTION	TIME	OPF	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-


## Installation Procedure

1. Remove the 2 tapping screws from the engine under cover, and remove the 2 screw clips from the front bumper and the fender liner.

### HINT

- Do NOT dispose of the screws, they will be reused.
- The clips can be disposed of, they will not be reused.

Figure 1.

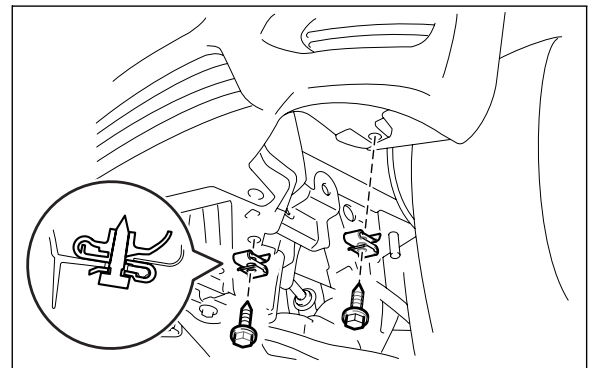

## Front Wheel Opening Extension Pad Installation During PDS


### Installation Procedure (Continued)

2. Install the new screw clips to the front bumper cover and the fender liner.

**HINT**

Be sure to install the extension pads using the new clips supplied.

Figure 2.

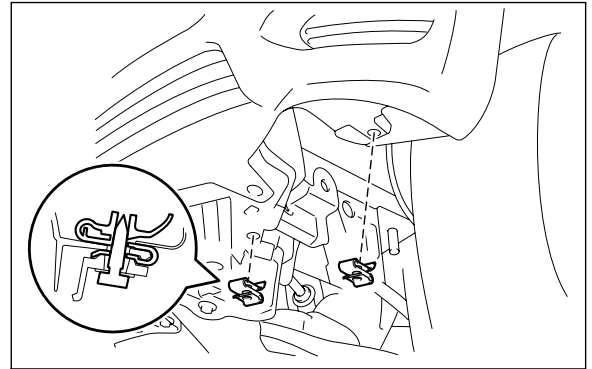


3. Align the front wheel opening extension pad holes with the screw clips and secure it with 2 tapping screws.

**HINT**

There is a distinguishable mark on each pad.

Figure 3.

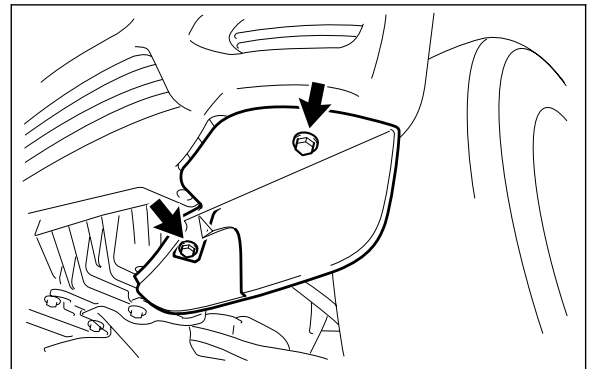

4. Repeat steps 1 – 3 to install the other front wheel opening extension pad.