



Countries:	CANADA, UNITED STATES	Document ID:	IK1600026
Availability:	ISIS	Revision:	4
Major System:	CAB / SLEEPER / HOOD	Created:	4/25/2007
Current Language:	English	Last Modified:	8/13/2013
Other Languages:	Français , Español ,	Author:	Patrick Gotschall
Viewed:	472		

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 229	 85

Title: CF- CityStar 500 - 600: Mud, Water and Debris Collecting In Driver's and /or Passenger Door

Applies To: CF, CityStar 500, 600

Condition:

Mud, water and other debris may have entered through the openings (holes) in the bottom of the driver's and / or passenger's door.

Resolution:

To seal bottom side of doors with tape to protect speakers from road splash:

1. Make any repairs caused by the mud, water or debris inside door.
2. Clean all mud and debris from the inside of the door.
3. Make sure the two lower drain hole shown in Photo 1 are open and clean.
4. Completely dry the inside of the door.
5. If the interior door trim was removed Install clear tape 3M part number 75-3470-1910-3 on inside of door covering holes just above the cab step see Photo 1.
6. Clean and dry the bottom edge of the door.
7. Cut the 14" tape from (2596245C91) into two (2) 7" pieces or cut two (2) 7" strips off roll (3672943C1).
8. Install clear tape on outside of door covering holes just above the cab step. TAPE LOWER HOLES ONLY.

9. DO NOT tape over the two lower drain holes. These must remain open.

Parts

Part Number	Description	Quantity
3672943c1	TAPE, ADHESIVE 3m clear	1 Roll

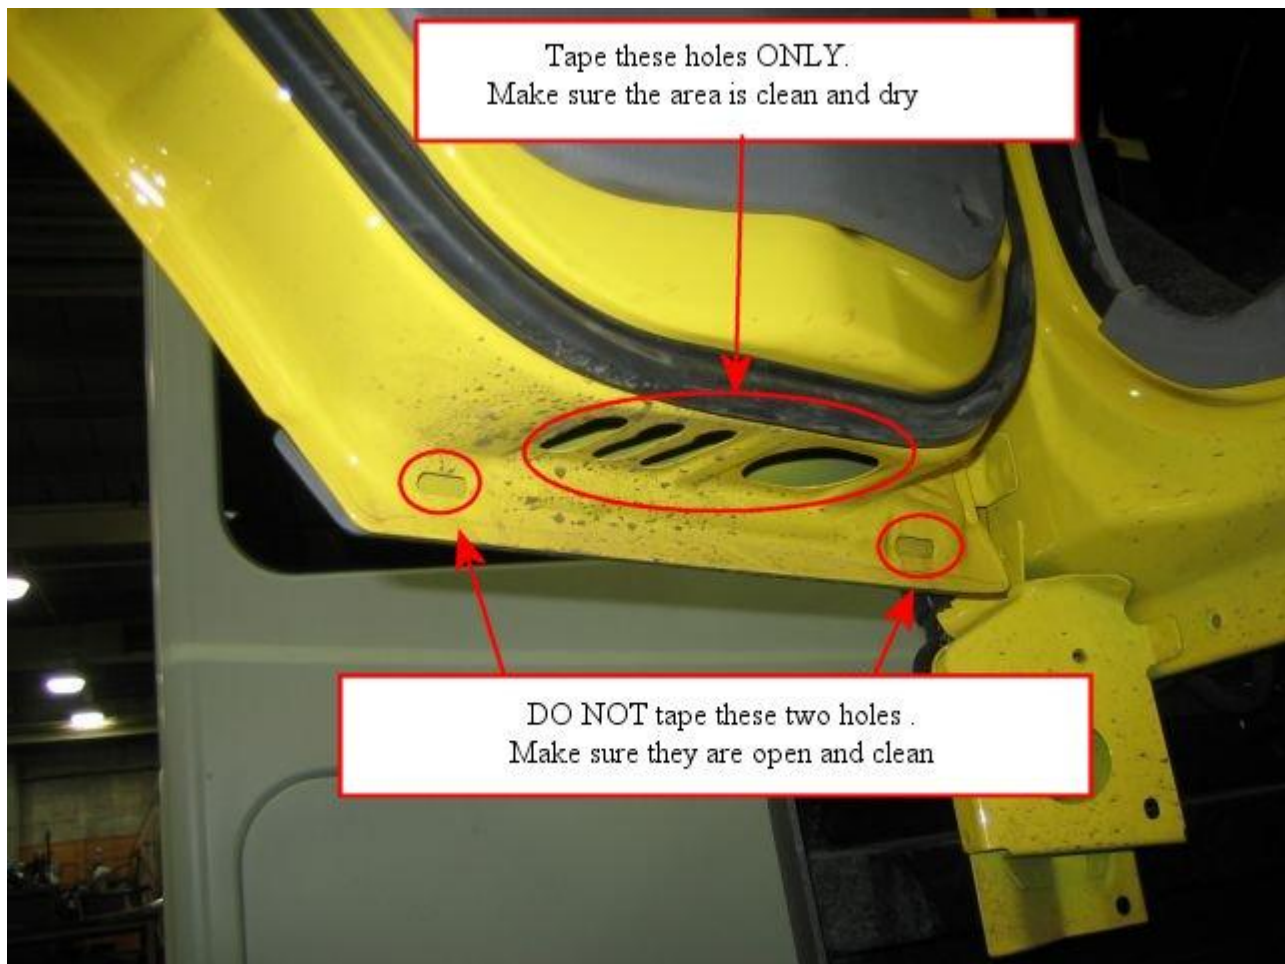


Photo 1 Tape holes shown

10. Replace non-functioning speaker with the speaker provided in the kit (2596245C91) or clean functional speaker per [TSI 06-08-04](#) Low Current Circuits.

References : [TSI 07-16-03](#) Corroded Door Speakers on CF 500 and CF 600.

Viewed: 471

Helpful: 229

Not Helpful: 85

No Feedback Found

Copyright © 2013 Navistar, Inc.