



Instructions Specifically Developed  
For Installation by Dealer Technicians

Description: Wolfsburg Edition Badge

Part Number: 561071008FXC

Vehicles: 2014 Passat Wolfsburg model number A32WS6 and  
A32WZ6

Revised : 07/30/2013



**Warning**

- Read entire instructions thoroughly before starting
- Improper installation procedures can cause serious personal injury
- Installation should be performed only by a qualified technician
- Beware of sharp edges
- Always wear safety glasses to help protect eyes
- Use caution when using hand tools

© 2013 Volkswagen of America, Inc. All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen of America, Inc., its affiliated companies and its licensors.


All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopy, recording or otherwise, nor may these materials be modified or reposted to other internet sites, with the expressed written permission of the publisher



## Instructions Specifically Developed For Installation by Dealer Technicians



**Step 1:** Clean area with 91+% isopropyl alcohol and a clean microfiber towel.

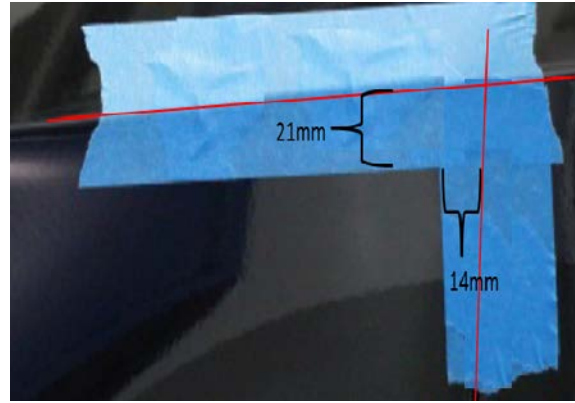

**Step 2:** Measure 21mm down from fender line shown above. Measure 14mm from fender/door edge. Use easy release tape to mark off the area.



**Step 3:** Remove protective film from adhesive strip. Install badge and evenly apply 15lbs of pressure to seat the tape.



**Step 4:** Remove protective film from front side of emblem. Repeat steps 1-4 on opposite site.