

Subject		Market
Key Code Registration Techstream Clarification		USA
Service Category	Section	
Vehicle Interior	Theft Deterrent/Keyless Entry	
Applicability		
2013 Scion FR-S		

APPLICABLE VEHICLES

2013

FR-S

CONDITION


After replacing the Main Body ECU key code registration is required. The following steps will assist with the key code registration process with Techstream versions 8.00 and earlier.

RECOMMENDATIONS

1. Label all of the keys that are registered to the vehicle - 1, 2, and 3.

Note: This Tech Tip will not work without all of the keys that are currently registered to the vehicle.

2. Turn IG ON with key #1.
3. Begin the Key Registration in Techstream
4. Proceed through the normal steps to verify all three keys.
5. After key #3 is inserted and turned to the IG ON position, the following caution message will appear.

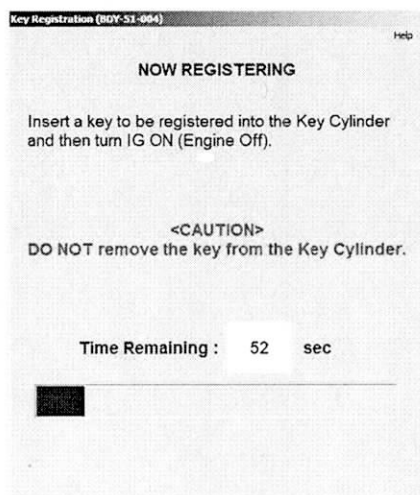

6. Disregard the caution message and REMOVE key #3 then re-insert key #1 and turn the IG ON.
7. Techstream will advance to the next step.

Note: Do NOT press the register button at this time.

Subject	Market
Key Code Registration Techstream Clarification	USA
Applicability	
2013 Scion FR-S	

RECOMMENDATIONS

8. Once Techstream has advanced to the next step, remove key #1.
9. Insert key #2 and turn the IG ON.
10. Remove key #2.
11. Insert key #3 and turn the IG ON.
12. Click the register button on the Techstream and confirm completion screen on the utility.
13. Turn the IG OFF.
14. Disconnect the Techstream.
15. Connect GR8 tester and enter power supply mode to keep battery above 12v.
16. Put a jumper wire in DLC3 connected between TC and CG.
17. Turn IG ON and verify combination meter lights are blinking, indicating the initialization has started.
18. The initialization will take 30 minutes to complete. Do not turn the key off during this initialization process.
19. Turn the IG OFF.
20. Verify the vehicle starts with all keys.

LINK REFERENCES

This Tech Tip does not contain any link references.