

Thor Motor Coach Technical Information Bulletin



TIB # 13-001

Issue: Some Daybreak Class A units need to have brackets installed at the step box.

Released Date: 1/16/2013

TMC Flat rate code: TMCRV30410K

0.50 hours

Items needed:


Model 34XD and 28PD: 2 ea Support Brackets TMC Item number 0272080
8 ea 2" self tapping screws
8 ea 2" lag bolts

Model 32HD: 2 ea Support Brackets TMC item number 0272081
12 ea 2" self tapping screws
4 ea 2" lag bolts

Brackets may be ordered through TMC at no charge.


Instructions:

1. Measure 3-1/2" from the front edge of the step box and draw a line.
2. Line the front edge of the new bracket up with this mark.

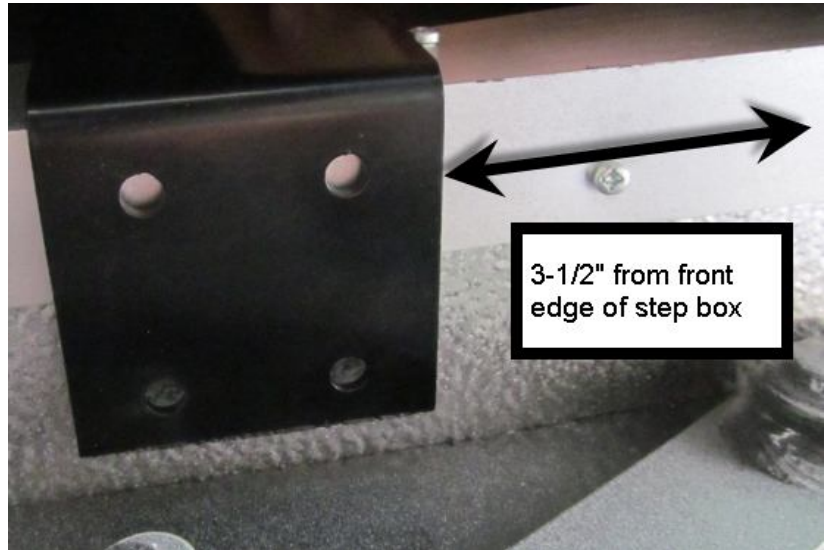

3. Attach the bottom of the bracket to the bottom of the step box using 2 2" self tapping screws and 2 2" lags as illustrated:

Note: The self tapping screws go into the holes closest to the step box. The lags go into the holes farthest away from the side of the step box.


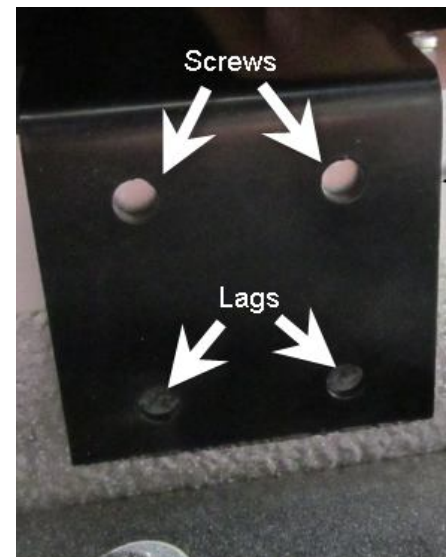


Once the bottom of the bracket has been secured, fasten the top of the bracket as directed below. Please note the instructions are different for the 32 HD models.

4a. For Model 34XD and 28PD:

Secure the top of the bracket to the floor as illustrated below:

Note: The self tapping screws go into the holes closest to the step box. The lags go into the holes farthest away from the side of the step box.

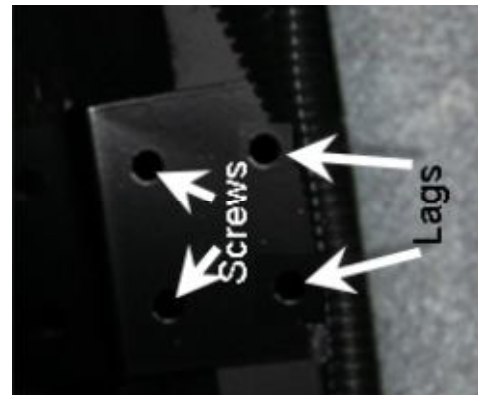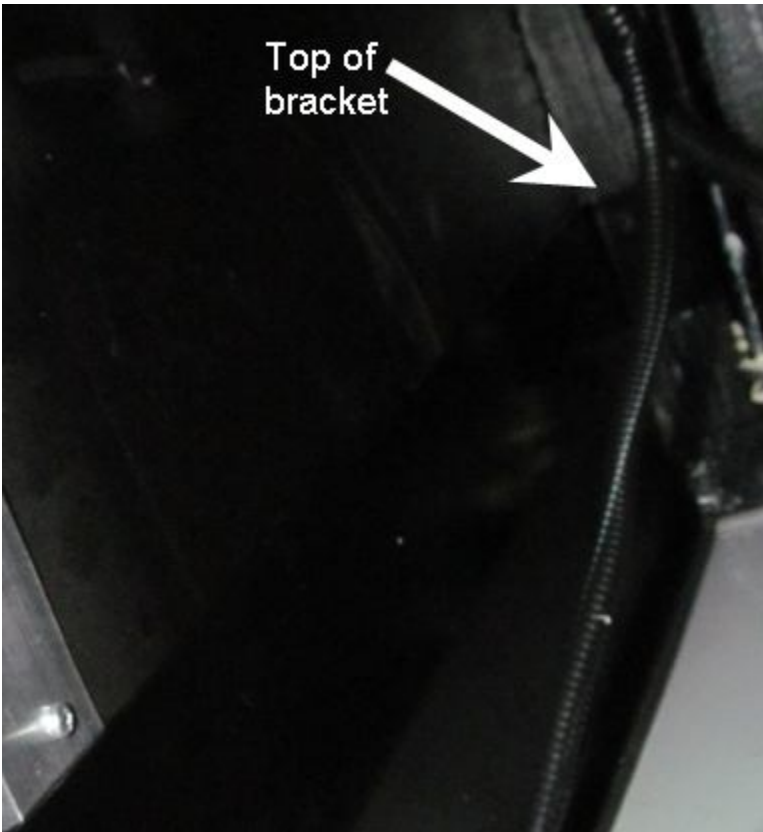



WARNING: BE CAREFUL TO AVOID ANY HOSES AND/OR WIRES WHEN ATTACHING THE TOP OF THE BRACKETS TO THE FLOOR.

5a. Repeat the procedure for the opposite side of the step box.

4b. For Model 32HD:

Secure the top of the bracket to the truss as illustrated below:

WARNING: BE CAREFUL TO AVOID ANY HOSES AND/OR WIRES WHEN ATTACHING THE TOP OF THE BRACKETS TO THE TRUSS.

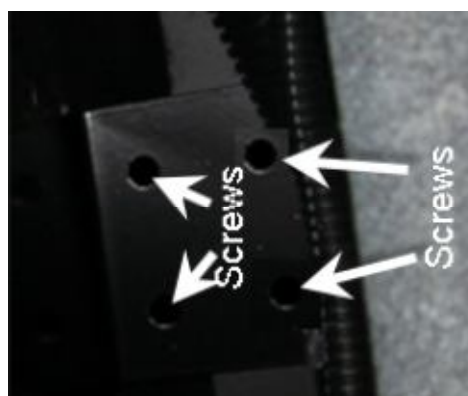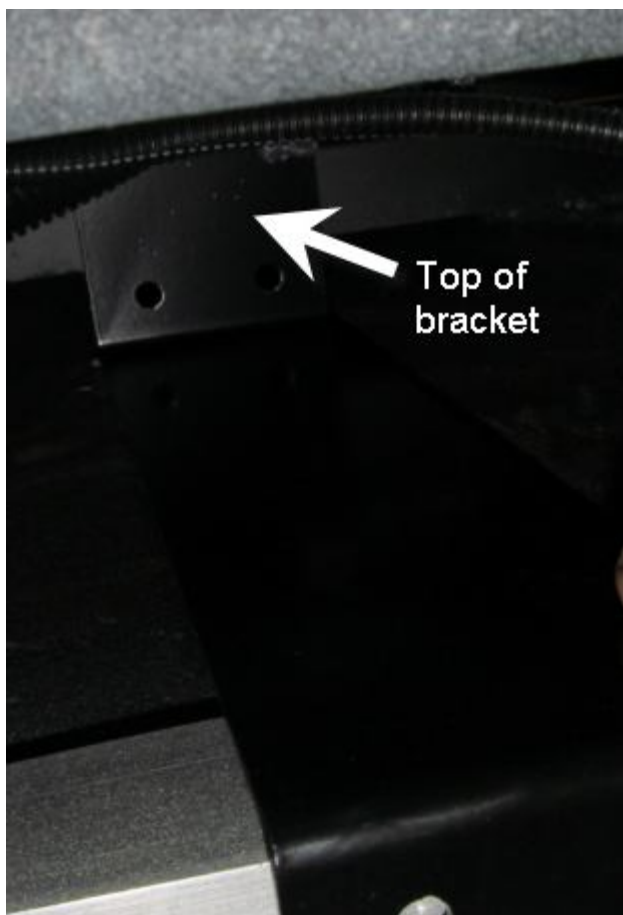

5b. Repeat the procedure for the opposite side of the step box.

6b. **32HD Only:** Open the luggage doors on either side of the entry door and grind off any screw ends that may be coming through the trunk box.

AFFECTED UNITS

1F66F5DY1D0A02239	1F65F5DY7D0A03990
1F66F5DY2D0A02699	1F65F5DY7D0A04394
1F66F5DY5D0A01028	1F65F5DY8D0A04162
1F66F5DY5D0A02700	1F65F5DY8D0A04386
1F66F5DY5D0A03040	1F65F5DY9D0A03814
1F66F5DY6D0A02009	1F65F5DYYD0A04177
1F66F5DY6D0A02477	1F66F5DY0D0A03608
1F66F5DY7D0A04366	1F66F5DY0D0A03611
1F66F5DY9D0A02859	1F66F5DY0D0A04399
1F66F5DYXD0A01252	1F66F5DY1D0A03617
1F66F5DYXD0A04636	1F66F5DY3D0A03604
1F65F5DY0D0A02681	1F66F5DY4D0A03269
1F65F5DY0D0A04172	1F66F5DY5D0A03619
1F65F5DY0D0A04379	1F66F5DY6D0A04634
1F65F5DY1D0A04391	1F66F5DY7D0A02696
1F65F5DY3D0A04165	1F66F5DY8D0A03615
1F65F5DY3D0A04618	1F66F5DYXD0A03602
1F65F5DY5D0A03986	1F66F5DYXD0A04183