

	GROUP Electrical	MODEL 2015MY Sedona (YP) L, LX & EX Models
	NUMBER PS349	DATE November 2014
 		
SUBJECT: BATTERY REPLACEMENT – FILLER FOAM PAD INSTALLATION		


When replacing the OE battery on 2015MY Sedona (YP) (L, LX and EX trim levels ONLY), the replacement battery (P/N 37110 24001U) height is slightly different than the OE battery. A filler foam pad (P/N A9087 ADU00) will be necessary to close the gap between the battery top and upper L bracket of the hold down clamp. Follow the procedure outlined below to install the pad.

Service Procedure:


1. Remove the OE battery.
2. Install the replacement battery and OE insulation jacket.
3. Temporarily re-install the upper L bracket and use a paint marker to create alignment marks on either side of the bracket, as shown below.



4. Remove the protective film from the bottom of the foam pad.
5. Use the alignment marks created on step 3 to adhere the foam pad to the battery surface, as shown below. **Note: make sure to clean the battery surface prior to installation and align the edge of the foam pad with the edge of the battery.**

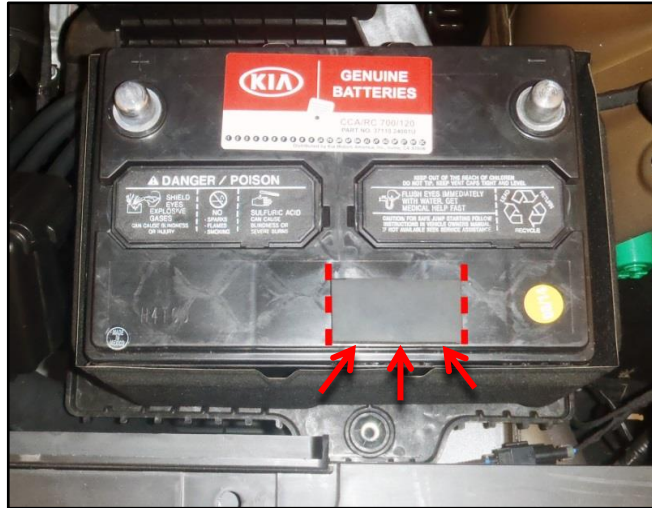

6. Install the upper L bracket and torque the bolt to 7.2 ~ 8.7 lb-ft.

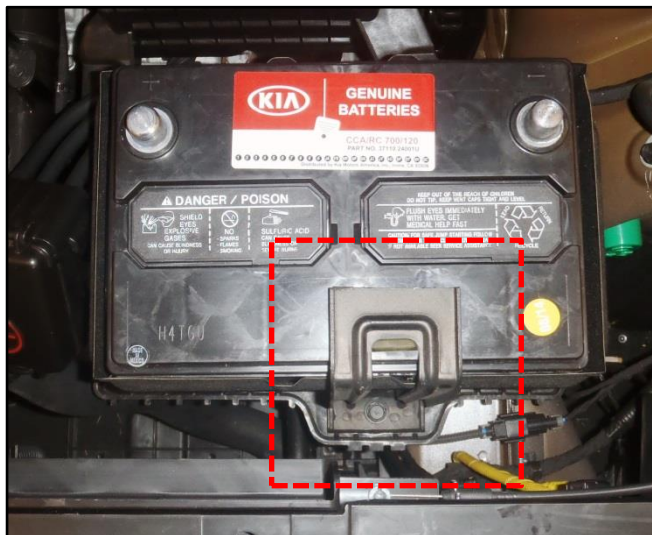

Note: 15MY Sedona (YP) SX and SXL trim levels will NOT require this additional part as the replacement battery dimensions for those are the same as the OE battery.