

REFERENCE:	Nova Bus Manuals
SECTION:	09: Hydraulic system, T-Drive
RS N°:	MQR 7621-549
EFFECTIVE IN PROD.:	L765 (2013JN)

APPLICATION DEADLINE: 2015MR31
CLAIM REFERENCE NUMBER: WB-3102

SUBJECT:	Hydraulic tank bushing
JUSTIFICATION:	Hydraulic tank bushing is cracking

LEVEL	DESCRIPTION	DIRECT CHARGES		TIME
		LABOUR	MATERIAL	
1	Replace the hydraulic tank bushing with new bushing N66349	Nova Bus	Nova Bus	20 min
2	–	–	–	–

MATERIAL

QTY	PART N°	REV.	DESCRIPTION	REPLACES PART N°
LEVEL 1				
6	N34792	–	Oversized washer M8	N21101
4	N11173	–	Washer M8	–
4	N66349	–	Bushing	N56735
LEVEL 2				
–	–	–	–	–

Materials will be available within 10 days. To order, please contact Prevost Parts by phone at 1-800-771-6682, by fax at 1-888-668-2555 or by email at prevostparts.commandes@volvo.com. Specify document number, quantity of parts required and shipping address.

DISPOSAL OF PARTS

REMOVED PARTS ARE:	DISCARDED *	RETAINED	* Dispose of the unused parts and the defective parts in accordance with local environmental standards in effect.
	Yes	–	

REVISION HISTORY

REV.	DATE	CHANGE DESCRIPTION	WRITTEN BY
NR	2014MR21	Initial release	Luc Carignan

APPROVED BY:

Daniel Theriault

Digitally signed by Daniel Theriault
DN: cn=Daniel Theriault, o=Nova Bus,
ou=Publication,
email=daniel.theriault@volvo.com, c=CA
Date: 2014.03.21 16:40:46 -04'00'

PAGE 1 OF 4

CLIENT	ORDER	ROAD NUMBER		VIN (2NVY/4RKY...)		QTY
		FROM	TO	FROM	TO	
New York City Transit - New York	L608	8000	8014	L82U6B4000047	L82U0B4000061	15
New York City Transit - New York	L620	8015	8074	L82U2B4000062	L82U7B4000123	60
New York City Transit - New York	L621	8075	8089	L82U9B4000124	L82U9B4000138	15
New York City Transit - New York	L643	5895	5895	S92U1B4000143	S92U1B4000143	1
New York City Transit - New York	L670	5771	5770	S92U9B4000147	S92UXC4500061	125
New York City Transit - New York	L681	5896	5283	S92U2C4500023	S92U9C4500195	122
New York City Transit - New York	L692	5284	5363	S92U3C4500158	S92U3D4500274	80

**WARNING**

Follow your internal safety procedures.

PROCEDURE

- 1.1. Open the rear engine access door.
- 1.2. Install a mobile support under the hydraulic reservoir.
- 1.3. Remove the anchor bolts and hardware (bushing and washer) from the hydraulic reservoir. Retain the bolts and nuts.
- 1.4. Install two oversized washers N34792, one washer N11173 and one bushing N66349 on each lower support and fix them with the retained bolts and nuts. See Figure 1 for the position of the hardware and the torque value.
- 1.5. Install one oversized washer N34792, one washer N11173 and one bushing N66349 on each upper support and fix them with the retained bolts and nuts. See Figure 1 for the position of the hardware and the torque value.
- 1.6. Remove the mobile support and close the rear engine access door. ❖

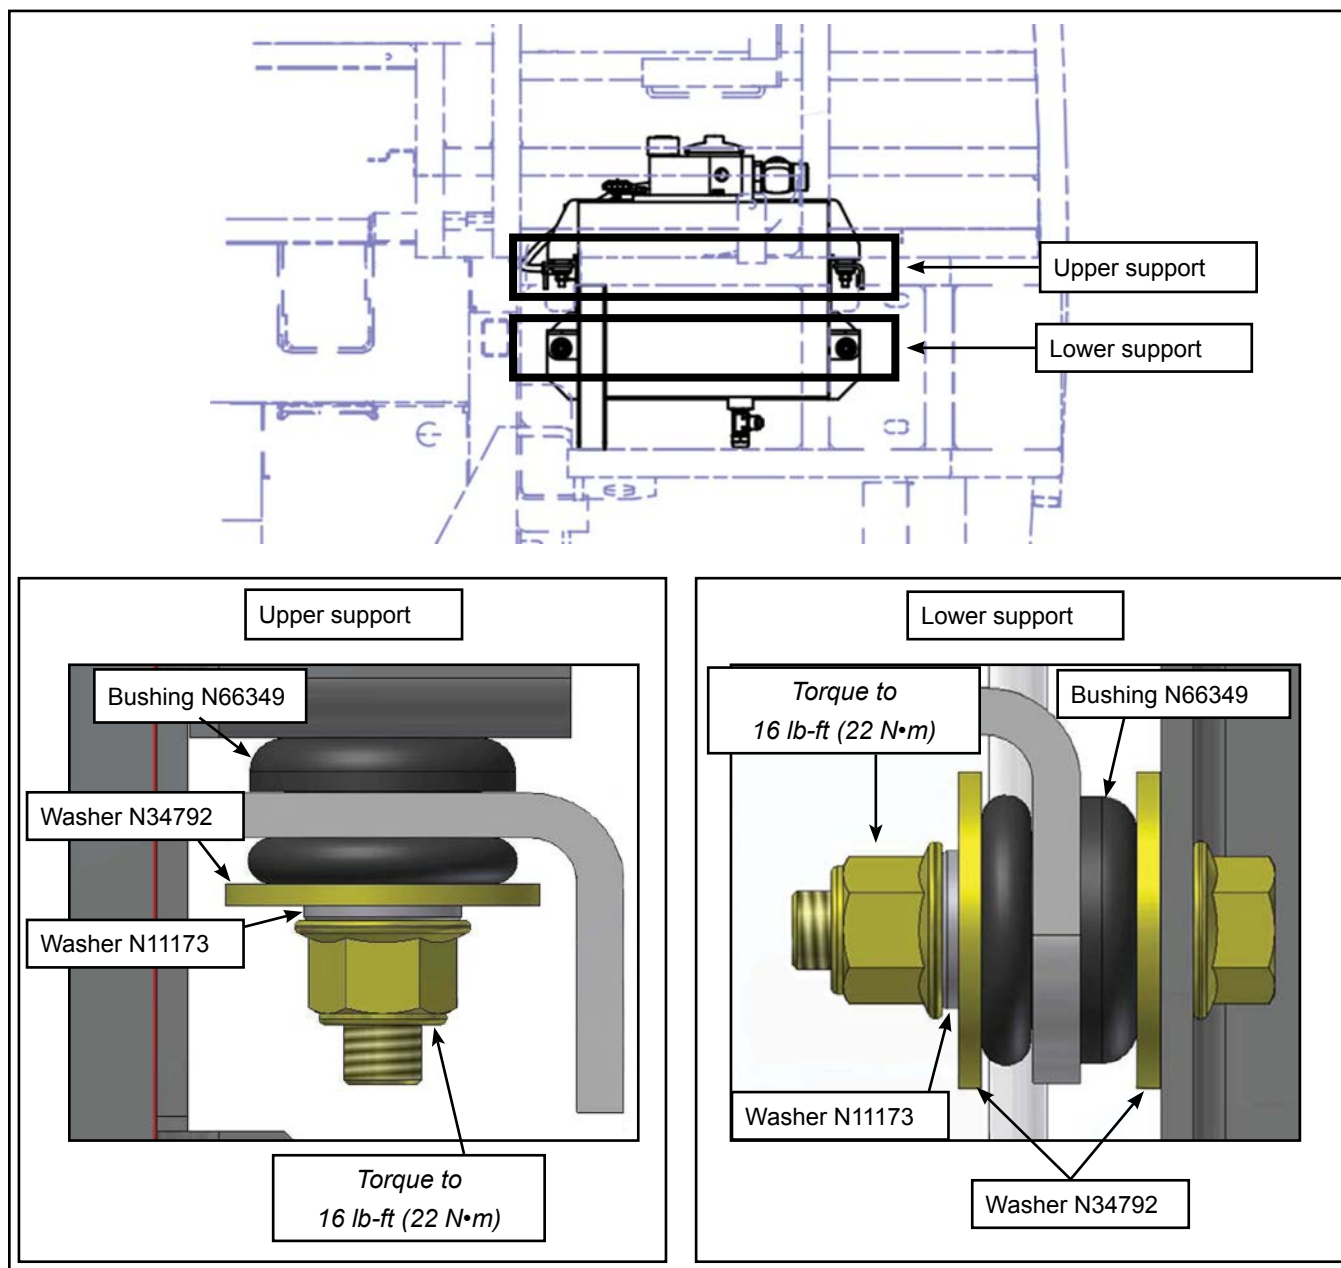


Figure 1 - New Hydraulic Reservoir Anchor Hardware