



Quick tip

Version 1.0


Date: Month 5-11, 2014

Title: RMT 300 quick install instructions.



Kit contents: 1 radio.

Additional parts required: Adaptor harness 7L0051445A, Antenna adapter 000051541B, wire terminal 000979133E, splice connector 000979943.

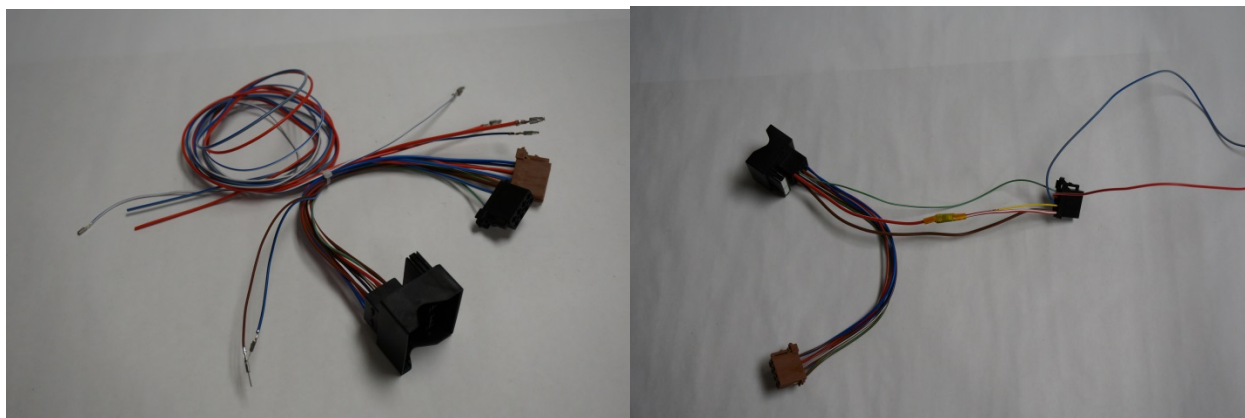

Adapter harness set up:

Red/white wire	Pin 7
Brown wire	Pin 8
Red wire	Pin 4
Green/grey	Pin 2
Grey/blue	Pin 6
Yellow	Pin 5

Note: Yellow wire must be added to harness (000979133E) and spliced to the red/white wire, splice the Red wire fused 15 power circuit (12V power point), splice Grey/blue wire to the illumination 58d circuit.



Step 1: Connect adapter harness to vehicle harness. Connect antenna adaptor the antenna cable.



Step 2: Install radio and reinstall trim turn ignition on and enter theft lock code. Test all features of the radio (see owner's manual for features and operation)