




Quick tip

Version 1.0


Date: Month 27-8, 2014

Title: Sound box 000051419 installation

MIB 1 (Golf MK7 and GTI MK7)

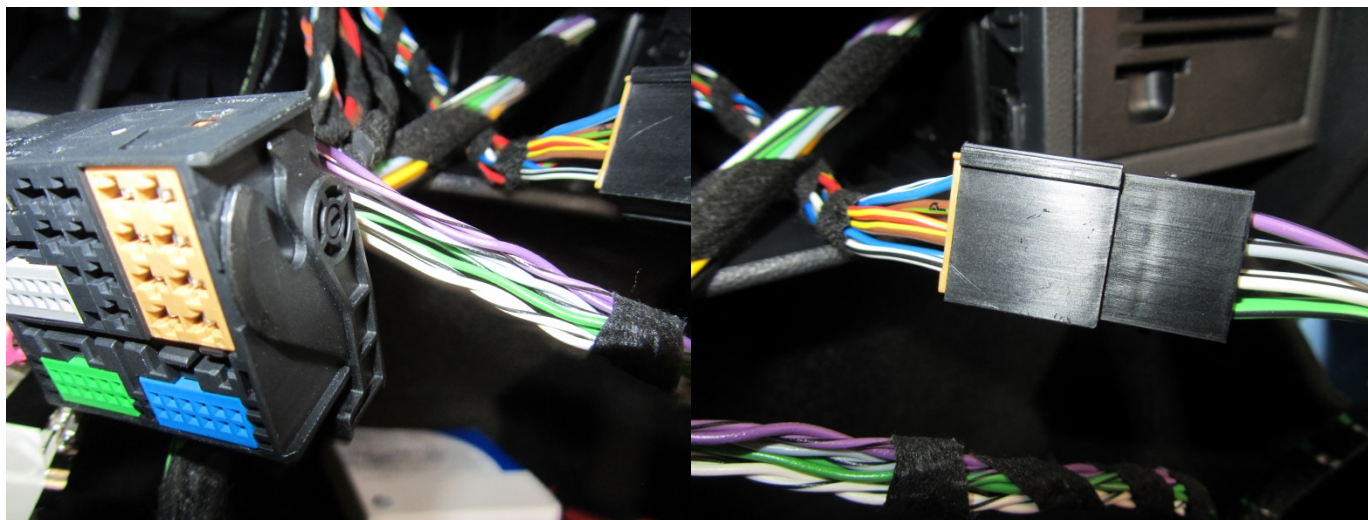


Remove the brown connector from the quad lock connector and insert into the sound box harness connector. Insert the brown connector from the sound box harness back into the quad lock connector.

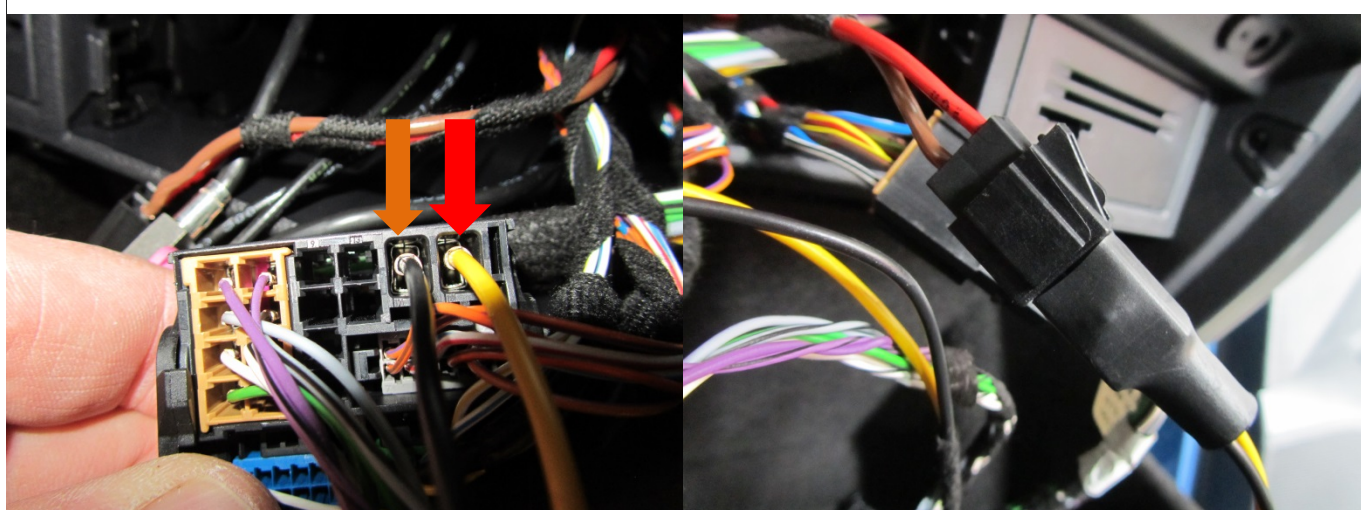


Remove the red and brown wire from the quad lock connector. Insert the red and brown wires into the sound box harness connector. Red to yellow and brown to black (see above). Insert the yellow wire into the position the red wire was removed from and the black in to the position the brown was removed from. (see above).



All other radio's

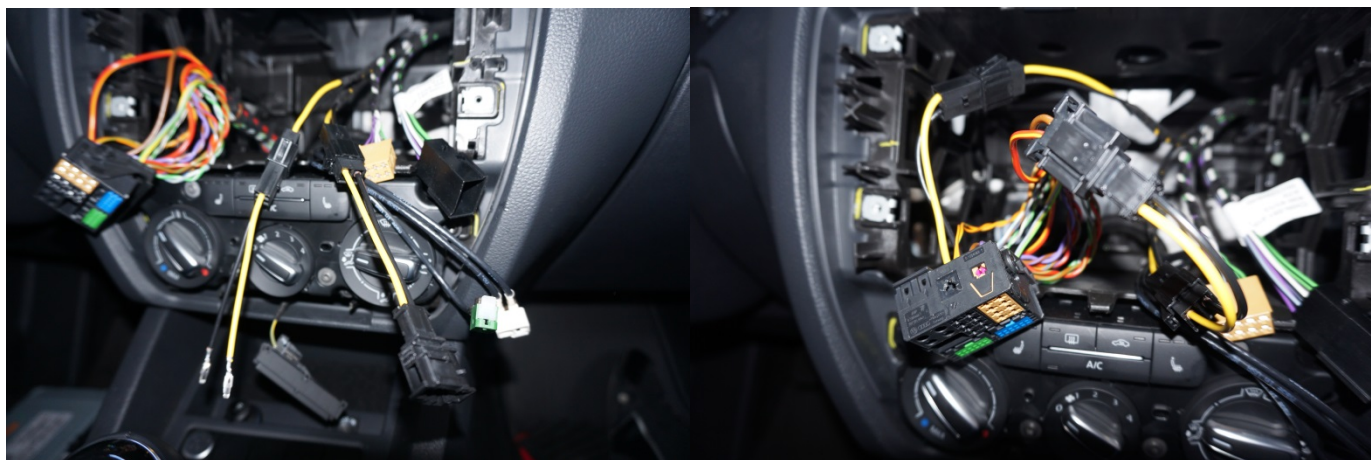

The two adaptor harnesses provided in the kit are required for this design.

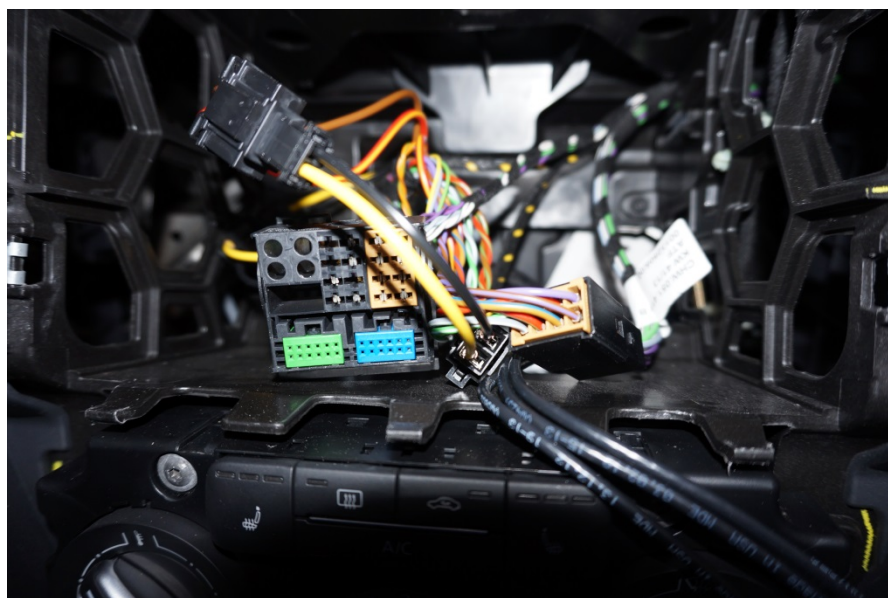

Push the brown connector out of the quad lock. Insert the brown connector from the sound box harness back into the quad lock connector. Insert the brown connector from the factory harness into the black connector in the sound box harness.