



NUMBER: 08-090-14

GROUP: Electrical

DATE: October 17, 2014

This bulletin is supplied as technical information only and is not an authorization for repair. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise, without written permission of Chrysler Group LLC.

SUBJECT:

Road Noise Inside The Vehicle Cabin

OVERVIEW:

This bulletin involves installing inboard subwoofer speaker covers.

MODELS:

2014 ZD Viper

NOTE: This bulletin applies to vehicles built on or after November 27, 2013 (MDH 1127XX) and on or before March 29, 2014 (MDH 0329XX) equipped with the SRT High Perf Audio, 18 Speakers (sales code RCA) or SRT High Perf Audio, 12 Speakers (sales code RC5).

SYMPTOM/CONDITION:

The inboard 6 in. X 9 in. subwoofer speakers are missing covers which may contribute to addition road noise inside the cabin. The speaker cover also helps protect the speakers from environmental elements.

DIAGNOSIS:

If the customer describes the symptom, perform the Repair Procedure.

PARTS REQUIRED:

Qty.	Part No.	Description
2	05035339AA	Cover, Speaker Opening, Back Cover

REPAIR PROCEDURE:

1. Disconnect and isolate the negative battery cable.
2. Remove the bulkhead quarter trim panel. Refer to the detailed service procedures available in DealerCONNECT> TechCONNECT under: Service Info> 23 - Body> Interior/PANEL, Bulkhead Trim Coupe> Removal.
3. Remove the mounting fasteners from the inboard subwoofer speakers (1) ([Fig. 1](#)).
4. Disconnect the electrical connector (2) from the inboard subwoofer speakers (1) ([Fig. 1](#)).
5. Remove the inboard subwoofer speakers (1) from the vehicle ([Fig. 1](#)).

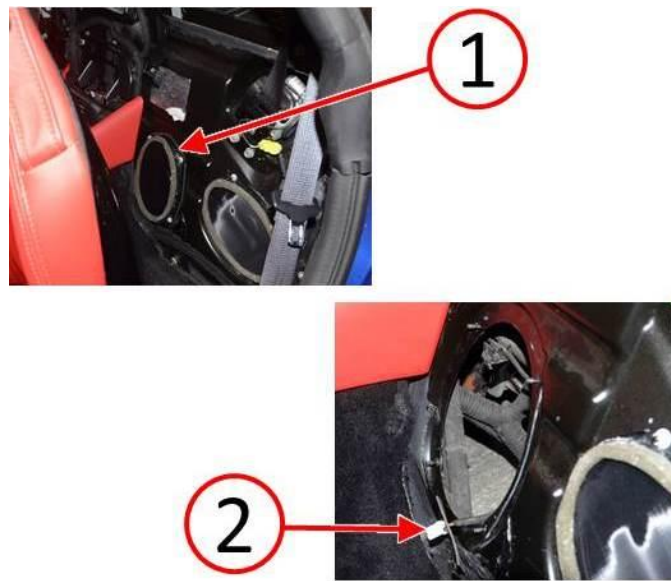


Fig. 1 Remove Inboard Speakers

- 1 - Inboard Subwoofer Speakers
- 2 - Speaker Electrical Connector

-
6. Install speaker covers (1) onto the inboard subwoofer speaker mounting studs with the electrical harness opening facing down ([Fig. 2](#)).
 7. Insure that the speaker electrical connector (2) is routed through the opening in the speaker cover ([Fig. 2](#)).

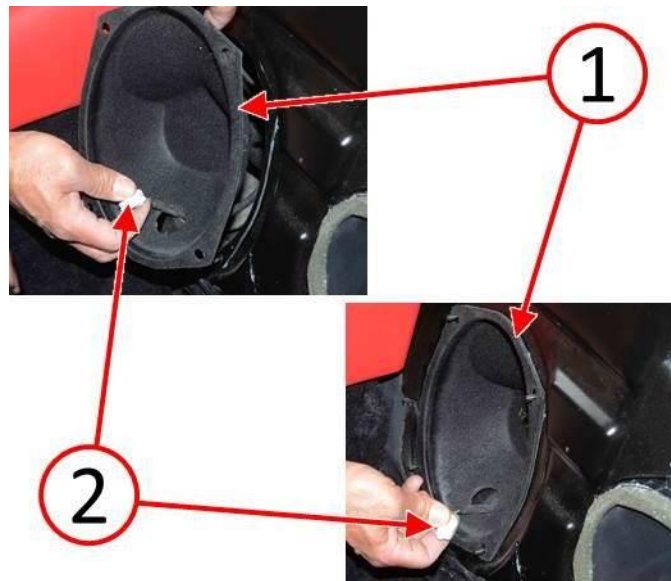


Fig. 2 Install Speaker Covers

- 1 - Speaker Cover
- 2 - Electrical Connector

-
8. Connect the electrical connector (2) to the inboard subwoofer speakers (1) ([Fig. 3](#)).
 9. Install the inboard subwoofer speakers (1) to the mounting studs ([Fig. 3](#)).
 10. Install the inboard subwoofer speaker mounting fasteners and tighten to 6 N·m (50 in. lbs.).

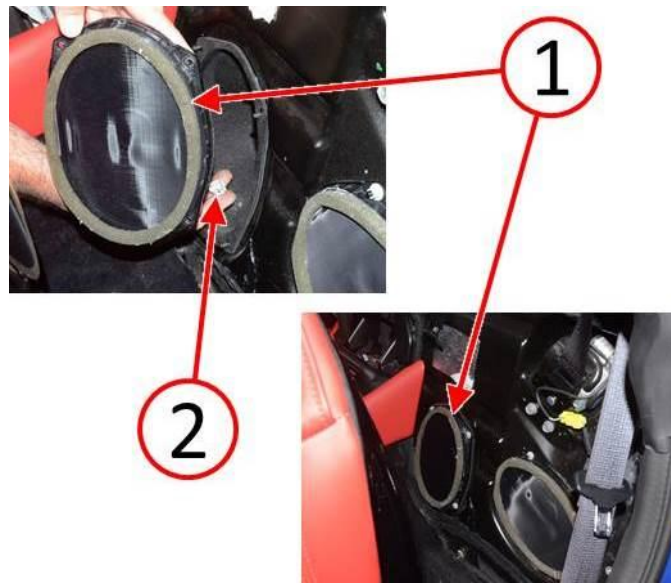


Fig. 3 Install Inboard Speakers

1 - Inboard Subwoofer Speakers

2 - Electrical Connector

11. Install the bulkhead quarter trim panel. Refer to the detailed service procedures available in DealerCONNECT> TechCONNECT under: Service Info> 23 - Body> Interior/PANEL, Bulkhead Trim Coupe> Installation.
12. Connect the negative battery cable.

POLICY:

Reimbursable within the provisions of the warranty.

TIME ALLOWANCE:

Labor Operation No:	Description	Skill Category	Amount
08-60-70-97	Install Inboard Subwoofer Speaker Covers (1 - Semi-Skilled)	6 - Electrical and Body Systems	1.0 Hrs.

FAILURE CODE:

ZZ	Service Action
----	----------------