

Securing Exhaust Tip and Pipe on RED models

Tiffin Motorhomes, Inc.

Effective Date: 23 May 2014

Work Instruction Number:

Revision: 00

WI-266

Page 1 of 2

Purpose: To provide instructions on how to properly secure the exhaust components on RED models.

TOOLS NEEDED:


- 1- Electric Drill
- 1- 5/16" Hex Head Bit

PARTS NEEDED:

- 3 - #10-16x1" Self Tapping Screws

Procedure:

- 1) Using 1 #10-16x1" Self Tapping Screw, connect the exhaust pipe to the muffler by installing screw through the exhaust pipe and muffler.

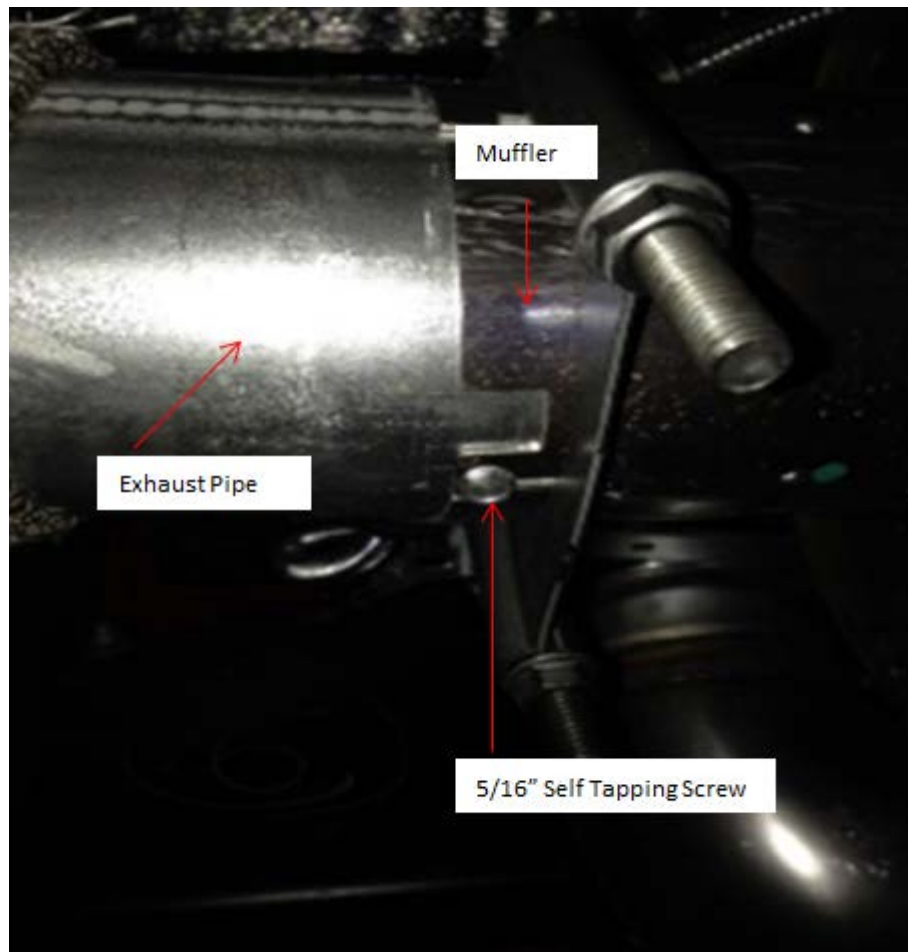

Securing Exhaust Tip and Pipe on RED models

Tiffin Motorhomes, Inc.

Effective Date: 23 May 2014

Work Instruction Number:

WI-266

Revision: 00

Page 2 of 2

- 2) Using 2 #10-16x1" Self Tapping Screws, secure the exhaust pipe to the exhaust tip by installing 2 screws through the band clamp. Make sure the screws go through each component.

