



HYUNDAI | NEW THINKING.
NEW POSSIBILITIES.

Technical Service Bulletin

GROUP	NUMBER
CAMPAIGN	14-01-057
DATE	MODEL
DECEMBER 2014	GENESIS SEDAN(DH)

SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

Description: This bulletin provides the procedure to add a foam pad to the rear combination lamp to improve sealing and prevent water intrusion/condensation.

★ IMPORTANT

*****DEALER STOCK ONLY*****

Dealers must perform this Service Campaign on all affected vehicles prior to customer retail delivery.



When a vehicle arrives at the Service Department, access Hyundai Motor America's "Warranty Vehicle Information" screen via WEBDCS to identify open Campaigns.



Applicable Vehicles: Certain 2015MY GENESIS SEDAN (DH)

SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

Parts Information:

Part Name	Part #	Qty
Foam Pad	 	2
	92455-B1000QQH	

Warranty Information:

Op Code	Operation	Op Time
40C066R1	Foam Pad addition to the rear combination lamp	0.4


NOTE: Submit claim on Campaign Claim Entry Screen

SERVICE PROCEDURE:

1. Open the trunk (A).

NOTICE


Do not damage, scratch, or contaminate any trim or panel while conducting this procedure.

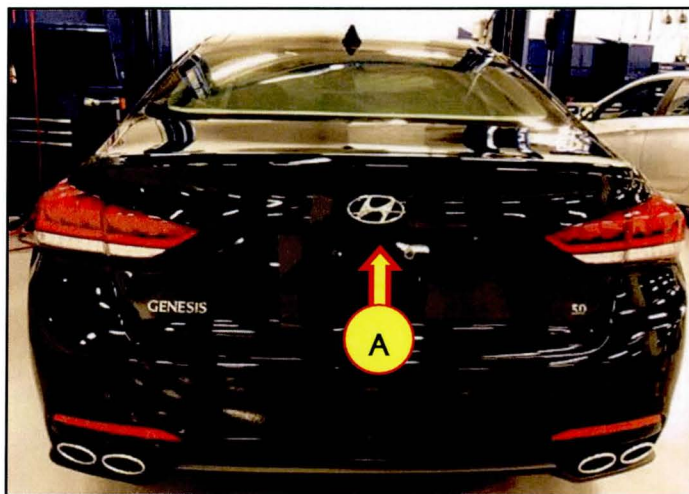

SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)




2. Remove the trunk lid latch cover (B).

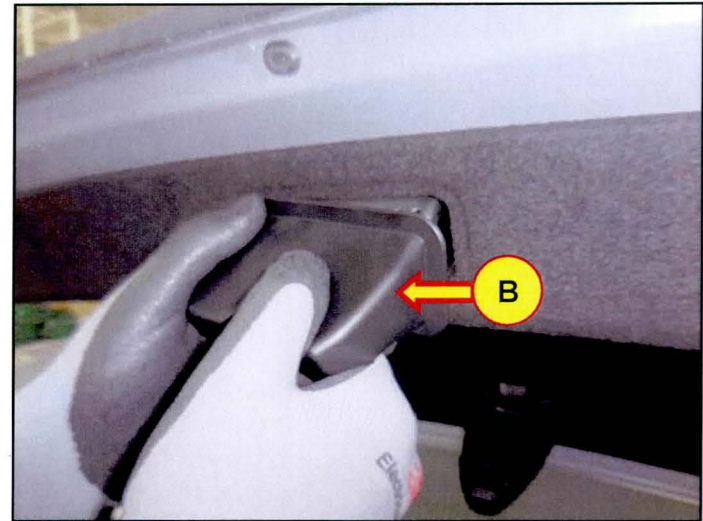

3. Using a flat blade screwdriver carefully separate the trunk lid switch (C) from the trunk lid trim.


Note: If equipped with Power Trunk continue to step 4.

If not equipped with Power Trunk, proceed to step 5.

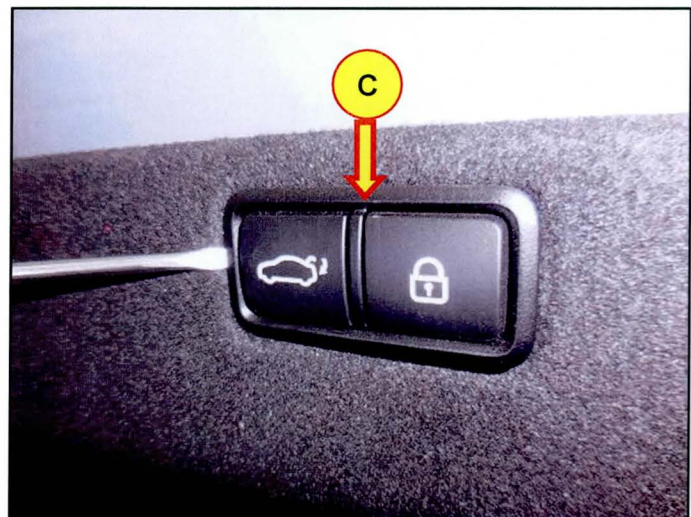


SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

4. Disconnect the switch connector (D) and then remove the trunk lid switch.

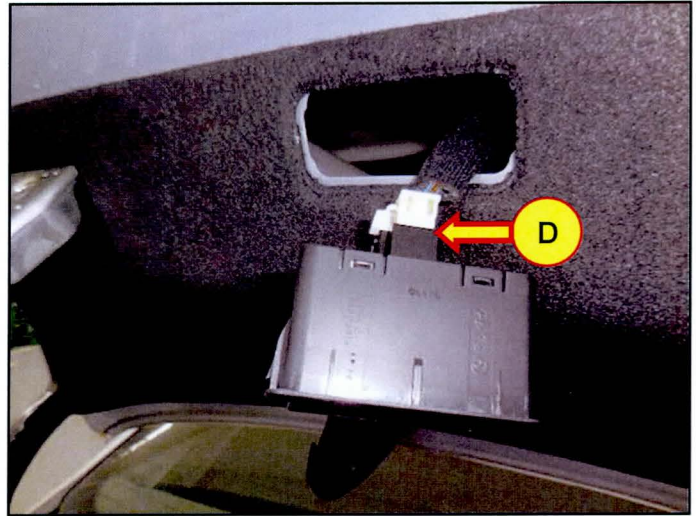

5. Remove the inside handle mounting screw (E).

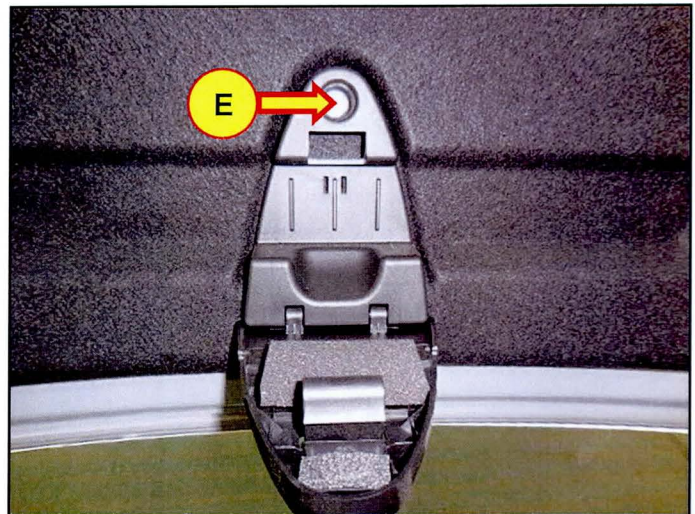


SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

6. Remove the 4 trunk lid trim retainers (F) using a flat headed screwdriver.


NOTE

Red rectangle area on the below picture shows the position of 4 retainers to be removed.

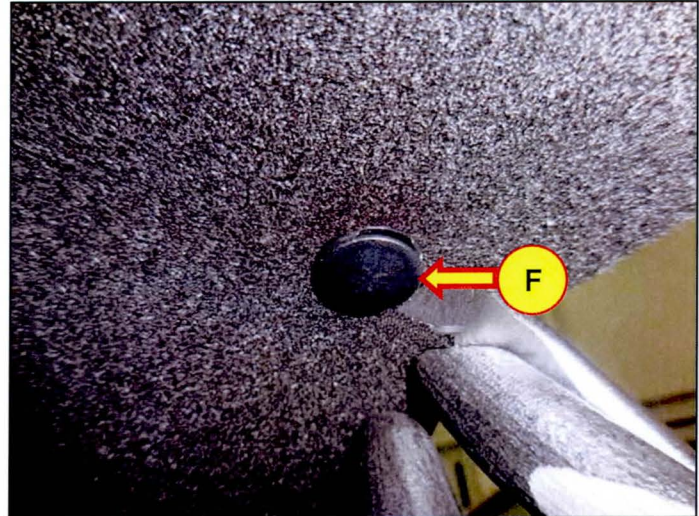


NOTE

When removing the retainer, insert a flat headed screwdriver into the slot and then pry up the pin by turning the screw driver.

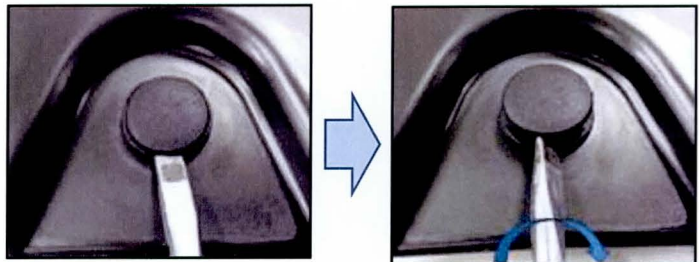


SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

7. Remove the trunk lid trim mounting screw (G).

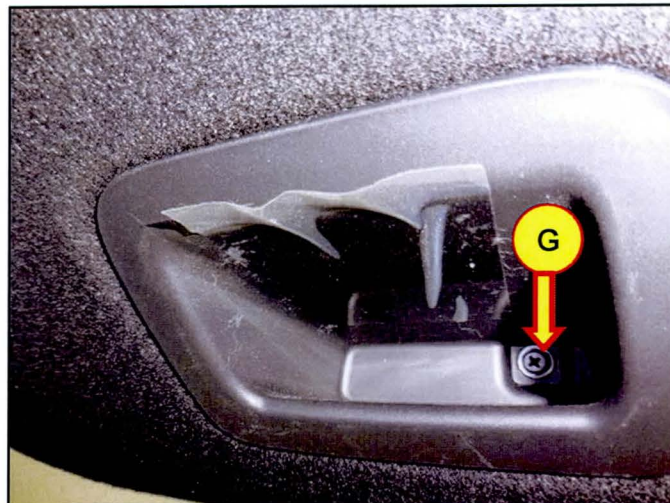

8. Remove the side cover mounting clips (H) on both sides.

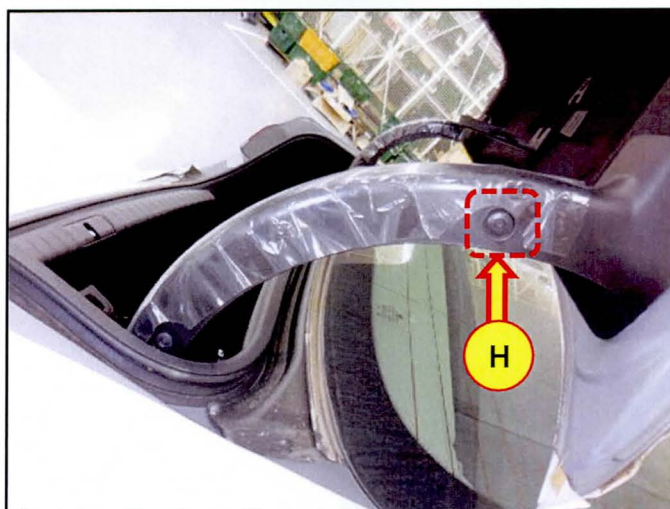


9. Separate the trunk lid trim (I) from the trunk by pulling it down.




SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

NOTE

*Pull down the side cover (J) to the red arrow direction to secure the work space.
Be careful not to damage the trunk lid trim.*

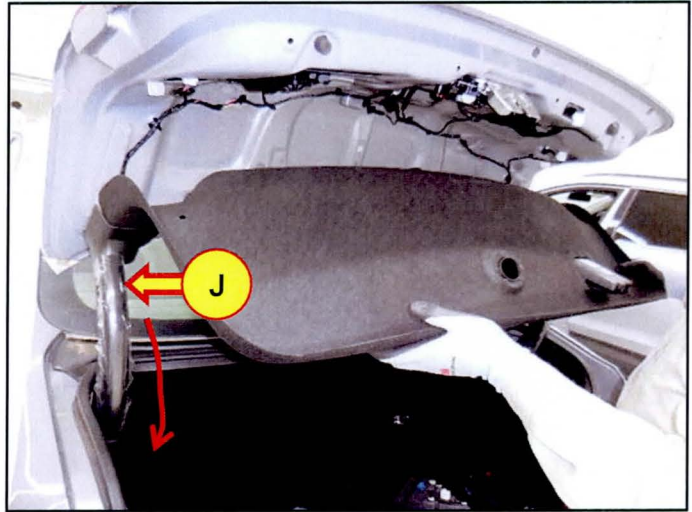


10. Disconnect the rear combination lamp connector (K) on both sides. Then remove the rear combination lamp mounting nuts (L) on both sides using a 10mm socket.

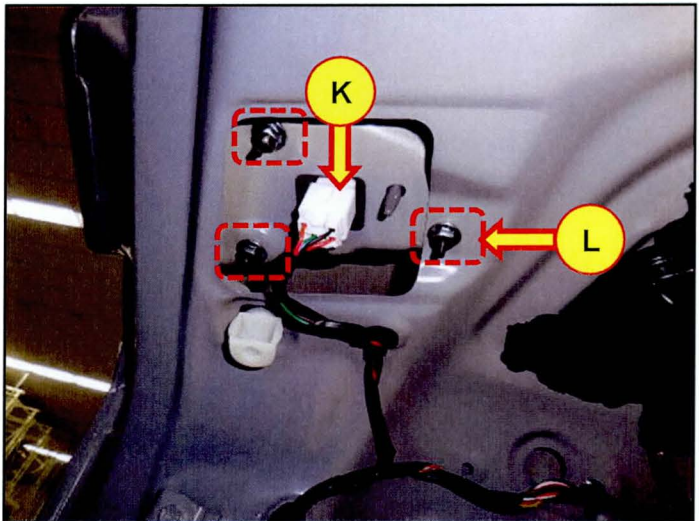


**Nut : 2.0 ~ 4.9Nm (0.2 ~ 0.5 kgf.m,
1.5 ~ 3.6 lb-ft)**

11. Remove the rear combination lamp (M) on both sides.

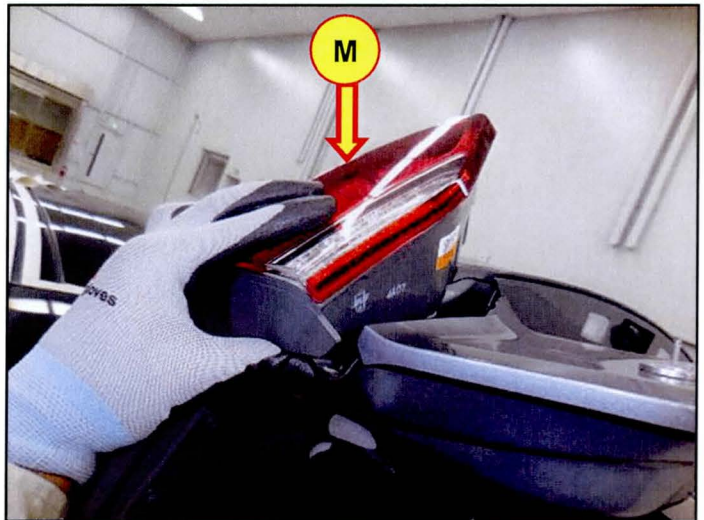


SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

12. Clean the pad addition area (N) with a clean fabric.

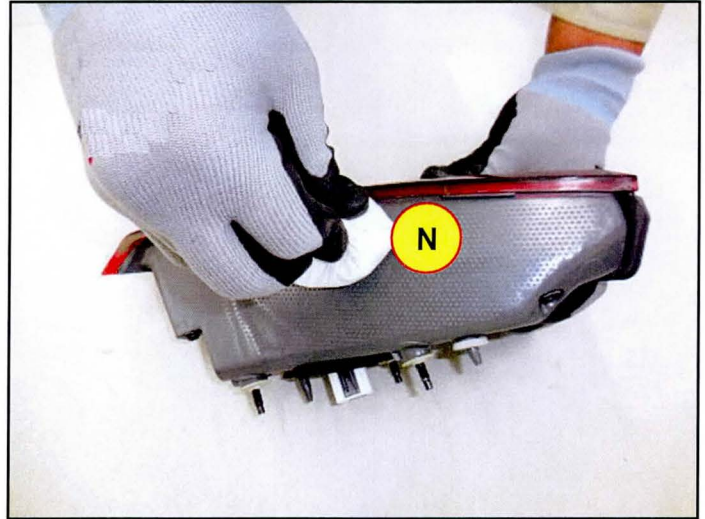

13. - P : Vertical end slope line
- Q : Horizontal end line of the embossment
- Orange rectangle area : Pad addition area

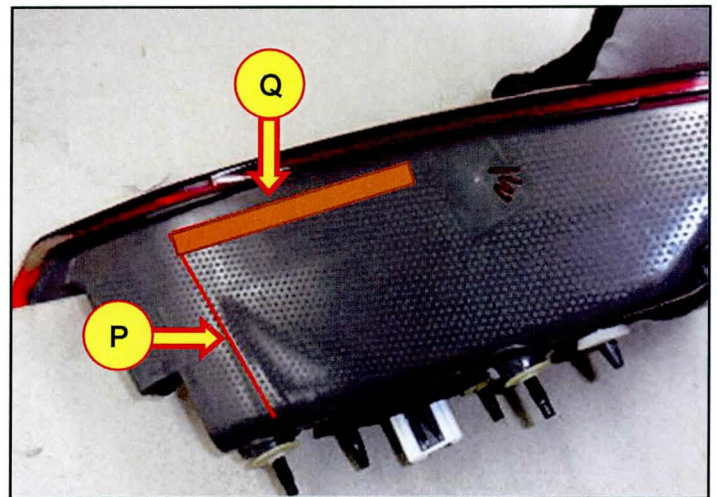

SUBJECT: FOAM PAD ADDITION TO THE REAR COMBINATION LAMP (SERVICE CAMPAIGN TV7)

14. Attach the pad to the rear combination lamp for LH & RH and then reinstall all the removed parts in reverse order of removal.



15. Confirm proper operation of rear combination lamps.