

Tech Tips

TT 44-13-01

Date: June 21, 2013

2011-2014 Touareg – Vibration or Steering Wheel Shimmy at Highway Speeds

March 7, 2014: Update to Information.

The suspension characteristics of the Touareg make it more susceptible to variations in the rim and/or tire. For this reason a diagnostic balancer is necessary to balance, force match and/or select tire placement so that the vibration may be improved.

Note:

Vehicles in dealer inventory should be maintained per the recommended 30 days maintenance procedure to prevent any flat spots forming on tires.

Tip:

For vehicles in dealer inventory the tires should remain at the transportation pressure. Please reference the recommended 30-Day maintenance sheet on ServiceNet.

Tires should be lowered to normal operating pressure before sale or any test drive.

Das Auto.

Service Information

Radial force variation (RFV)

The radial force or wheel load is the force with which a tire is compressed (Figure 1) Tires have softer and stiffer areas along their circumference, which is illustrated using springs (Figure 1, A and B). Figure 1 shows the same tire at different points of rotation (A and B), as it rolls on level road with constant load (radial force).

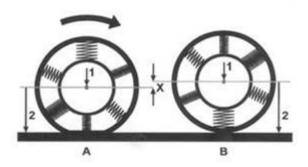


Figure 1. Wheel position (A), wheel position (B), wheel load (1), compressed amount (2), and rise and fall

difference (x).

If this wheel rolls, with constant wheel load / radial force (Figure 1, arrow) the center of the wheel rises and falls on level road because of the different spring hardness of the tire by the amount x. The change by the amount x can be felt in the vehicle as vibration or shaking of the steering wheel. The change of the compression force of the tire is the RFV.

First Harmonic

The wheel force fluctuations during the turn of the wheel can be mathematically divided into individual harmonic vibrations. For an objective assessment of the tire stiffness the first harmonic (the basic vibration) is used. The first harmonic is the share of the radial force fluctuation which causes the strongest vibrations.

Service

1. Test drive vehicle to confirm vibration.

When attempting to duplicate the customer concern, DO NOT exceed the posted speed limit.

- 2. Label the position of the wheels on the vehicle.
- 3. Remove wheels.

© 2013 Volkswagen Group of America, Inc.

Page 2 of 20

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



Note:

Do not remove any wheel weights before attempting balance procedure.

Below you will find the procedures for the 2 balancers (Hunter GSP9700 and John Beam RFV-2000) that Volkswagen recommends. Find your balancer and perform the procedure described.



© 2013 Volkswagen Group of America, Inc.

Page 3 of 20



HUNTER GSP9700 (VAS6230B3/4)


INote:

For most accurate measurements the vehicle should be driven right before measuring tires.

1. Install wheel on balancer using the flange plate with stud kit.



Centering cones or collets should always be installed on the inside of the wheel. Make sure that they fit securely to wheel with no play.

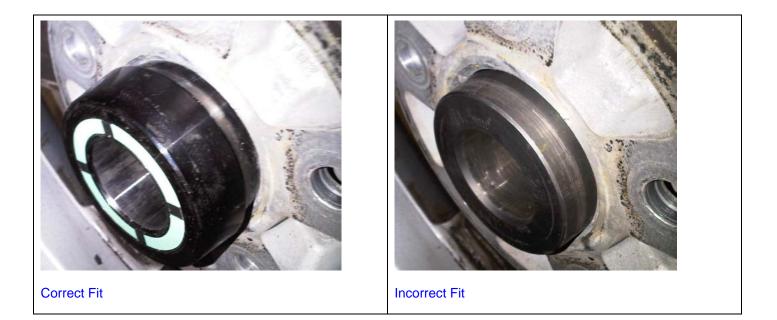


INote:

Performing the centering check is critical to obtaining accurate measurements.

© 2013 Volkswagen Group of America, Inc.


Page 4 of 20



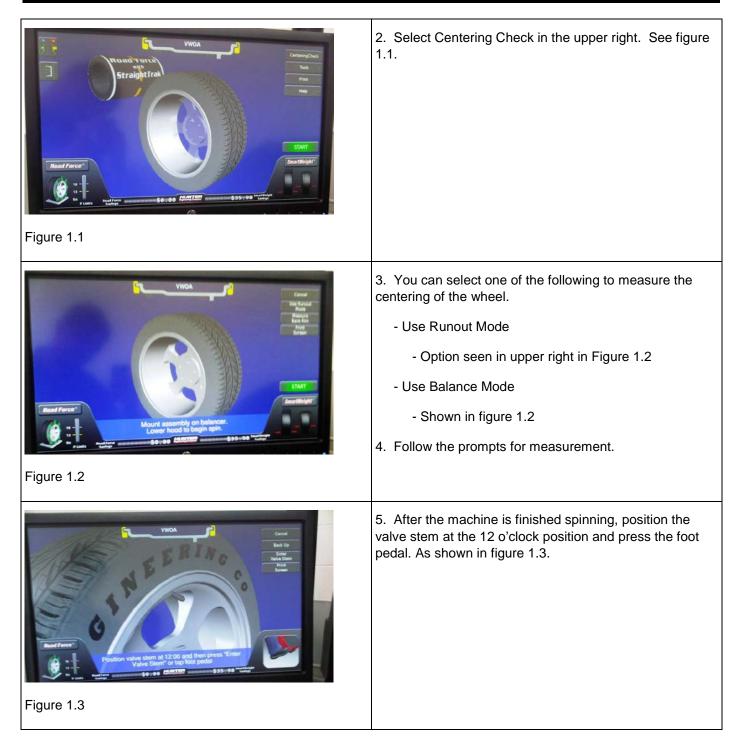

© 2013 Volkswagen Group of America, Inc.



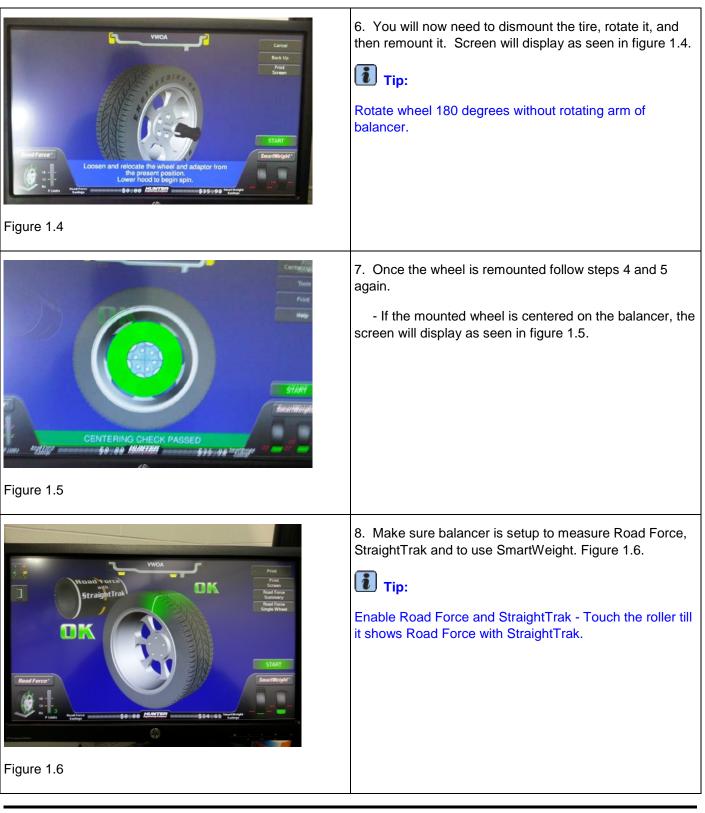

© 2013 Volkswagen Group of America, Inc.


Page 6 of 20





9. Lower hood, set tire pressure and start the measurement.

10. Once the measurement is complete you must perform the following steps to optimize the tire and rim combination.

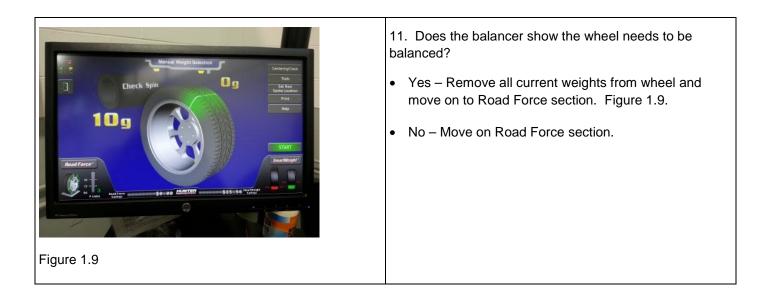

© 2013 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Das Auto.

Service Information


A. Road Force

INote:

Only perform this section if the Road Force is greater than 15 lbs.

Note:

If Road Force Matching is performed please E-mail a picture of the Road Force before and after measurements to VWGoA.Chassis@vw.com.

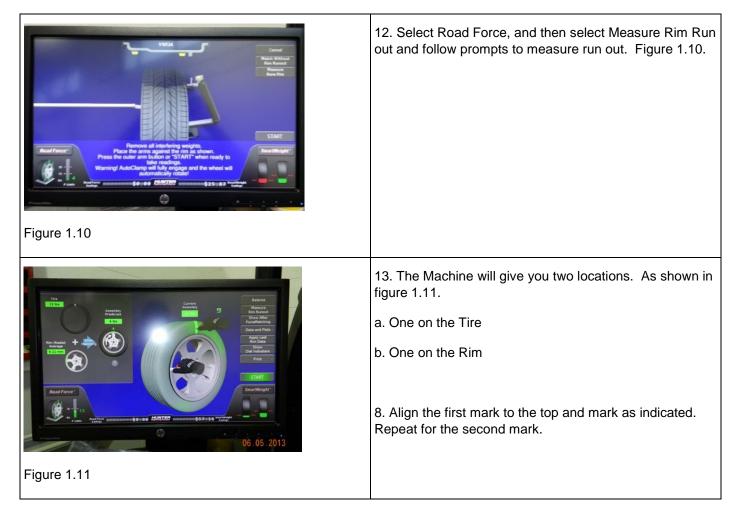

- 14. Dismount tire and using a tire changer break down the tire and rotate it on the rim till the marks line up.
- 15. Reseat tire on the rim and reinstall the wheel on the balancer
- 16. Rerun measurements and proceed to Wheel Balancer section.

© 2013 Volkswagen Group of America, Inc.

Page 8 of 20

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



B. Wheel Balance

- 17. With SmartWeight enabled, install all recommended weights.
- 18. Once all recommended weights are installed, lower hood to run the check spin.
- 19. Add any additional recommended weights and move on to the StraightTrak.

© 2013 Volkswagen Group of America, Inc.

Page 9 of 20



C. StraightTrak



20. Open StraightTrak screen and verify tire is present.


21. If Tire is not present rerun the measurement of balance, Road Force and StraighTrak.

0.....

22. Once you verify tire is present in StraightTrak screen, move on to the next tire.

INote:

DO NOT move to Step 18 until all 4 tires have been through all of the previous steps.

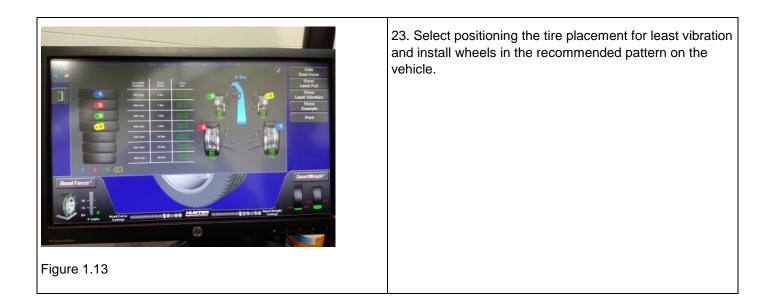

This concludes the Hunter GSP9700 step by step process for reducing tire vibration.

© 2013 Volkswagen Group of America, Inc.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.

Das Auto.

Service Information

Note:

If the Vibration is not reduced to the satisfaction of the customer Please contact the Volkswagen Technical Helpline at 1-800-678-2389.

INote:

If Road Force Matching has been done, before and after measurements must be available upon request.

© 2013 Volkswagen Group of America, Inc.

Page 11 of 20



John Bean RFV-2000 (VAS 6311A)

Note:

For most accurate measurements the vehicle should be driven right before measuring tires.

1. Install wheel on balancer using the flange plate with stud kit.

Tip:

Centering cones or collets should always be installed on the inside of the wheel. Make sure that they fit securely to wheel with no play.



© 2013 Volkswagen Group of America, Inc.

Page 12 of 20





© 2013 Volkswagen Group of America, Inc.

Page 13 of 20



Price 2 Not 2	Press #1 to model by it ings Before a general	Press P3 to solies 10 m/m Ammendia for spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Batteria spanning solies Press P3 to solies 10 m/m Press P4 to solies 10 m/m Press P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Press P4 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m Partial P3 to solies 10 m/m	Press of the selection the descent th				
Press P3 Is select 18 in Press P3 Is select 18 in the select 18 is select 18 in Press P3 Is select 18 in the select 18 in select 18 in Press P3 Is select 18 in the select 18 in select 18 in Press P3 Is select 18 in the select 18 in Press P3 Is select 18 in the select 18 in Press P3 Is select	Press	Press of 2 is to select the optimization of the selection of the selection of the selection optimization optimization of the selection optimization of the selection optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimization optimizati	Arristation Arristation Branch Arristition Branch Arristition Branch Arrition Branch Arristition				
Press	Press F3 las satisfi flam Press F3 las satisfi	Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based); Press #21 is a select 1 flag The of the second and the table (1 is based); The of the second and the table (1 is based);	Research Film benefiting Research Film bene		Optima, E.MA 43.25b		
Failure I houd Fees Nucleirig F1 F2 F1 F5 F6 1146001 1130				option you want to change	Metanarament Set Linge Optime Set Lings Hetwork and Print Counters	The and deterministic users in the Circle barrowskip Winnerscreep and presentations in the circle barrowskip and the same shares) Winnerscreep and the same shares in the first tarbanes) Winnerscreep and the same shares in the first tarbanes) Winnerscreep and the same shares in the first tarbanes with the same shares and the same shares and the same shares and the same shares and the same shares and the same shares and with the same shares and the same shares with the same shares and the same shares and the same shares and the same shares and with the same shares and the same shar	
				(Equivient Ransal Factor Instituting	

- 3. Lower hood and start the measurement.
- 4. Once the measurement is complete you must perform the following steps to optimize the tire and rim combination.



Figure 2.4

6. Go to the Optima screen by pressing F3.

- 7. Does the balancer state force matching will not improve the radial force?
- Yes Proceed to Wheel Balance section.
- No Proceed to the Radial Force section.

© 2013 Volkswagen Group of America, Inc.

Page 14 of 20

5. Does the balancer show the wheel needs to be balanced as shown in Figure 2.4?

- Yes Remove all current weights from wheel and continue to step 6.
- No Continue to step 6.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.




A. Radial Force

Note:

Do not perform this section if the balancer states that force matching will not improve the radial force.


Note:

If Radial Force Matching is performed please E-mail a picture of the Road Force before and after measurements to VWGoA.Chassis@vw.com.

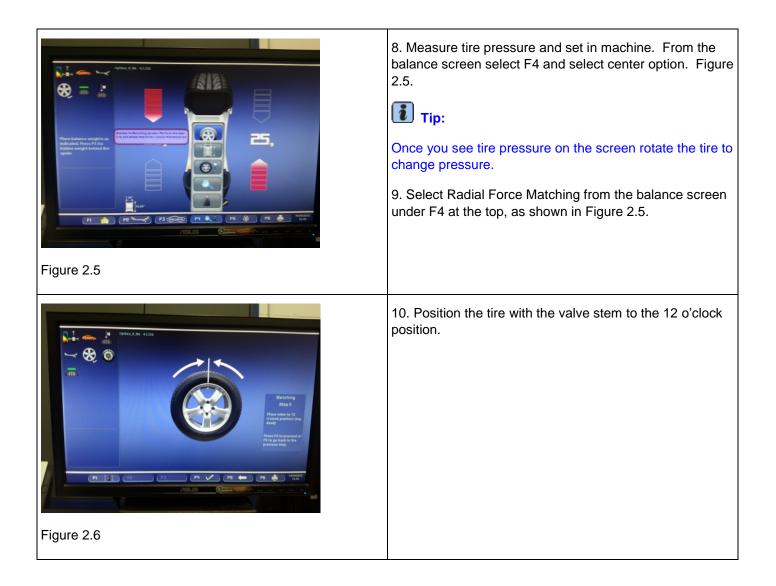

© 2013 Volkswagen Group of America, Inc.



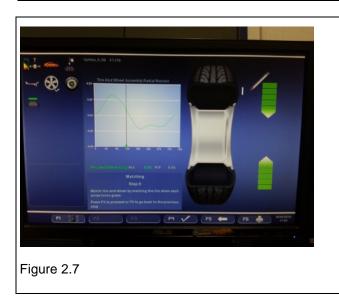

11. Rotate the tire until the arrows on the screen are both green (the machine will lock the tire for a moment) Figure 2.7.

12. Mark the tire on the outer side wall at the 12 o'clock position, Figure 2.7.


13. Dismount tire and using a tire changer, break down the tire and rotate it on the rim till the mark lines up with the valve stem.

- 14. Reseat tire on the rim and reinstall the wheel on the balancer
- 15. Rerun measurements and proceed to Wheel Balancer section.

All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.



B. Wheel Balance

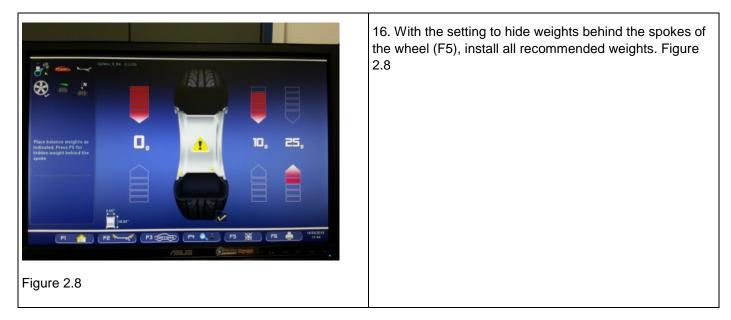

- 17. Once all recommended weights are installed lower hood to run the check spin.
- 18. Add any additional recommended weights.
- 19. Proceed to the Opti-line section



C. Opti-line

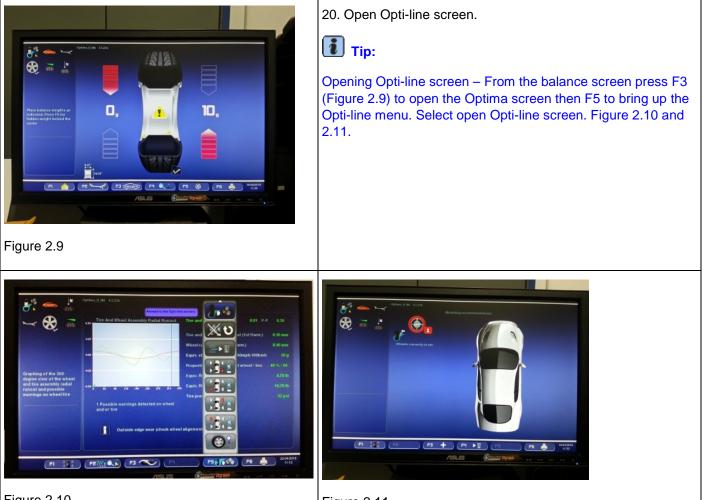



Figure 2.10

Figure 2.11

© 2013 Volkswagen Group of America, Inc.

Page 18 of 20




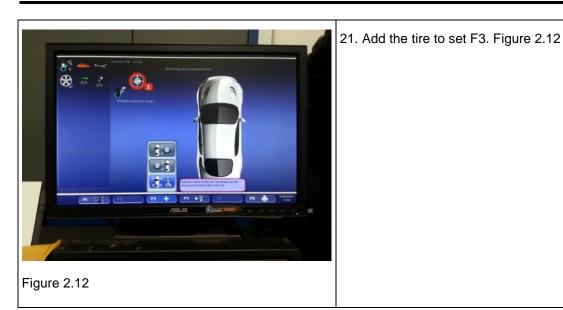

22. Now this tire is complete.

Note:

DO NOT move to Step 23 until all 4 tires have been through all of the previous steps.

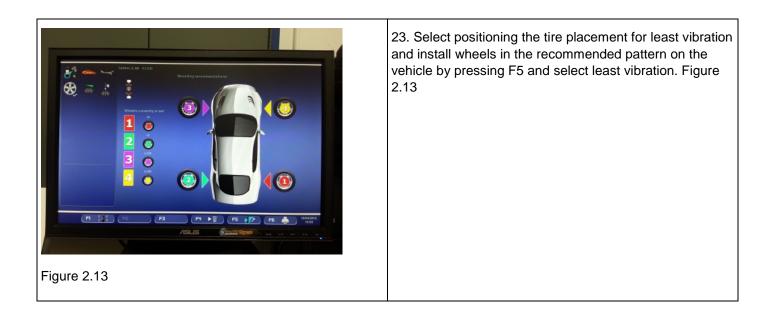

This concludes the John Beam RFV-2000 step by step procedure for reducing tire vibration.

© 2013 Volkswagen Group of America, Inc.



Note:

If the Vibration is not reduced to the satisfaction of the customer Please contact the Volkswagen Technical Helpline at 1-800-678-2389.

INote:

If Radial Force Matching has been done, before and after measurements must be available upon request.

© 2013 Volkswagen Group of America, Inc.

Page 20 of 20