

SERVICE ADVISORY # 14-212

Kodiak Front Bed

It has been determined Kodiak model 220RBSL were built with a fold down front bed which is inadequately supported for its intended use. This service advisory explains how to replace the front bed platform.

Models Included: 2014 Kodiak 220RBSL

Serial Number Range: EK175409 – EK176101

Parts Required:

- (1) - KRV#447965 – Bed – Fold Down
- (6) - KRV#102528 – Screw
- (1) - KRV#407041 – Trim - U-Channel - 1 7/8" x 8' – Black
- (1) - KRV#404879 – Trim - Batten - 3.6mm x 3/4" x 96" - F4Star - LN - Bev 1S - Thoreau Cherry #03

Tools Required:

- Screw Gun with Square bit
- Tape Measure
- 3/8 Drill Bit
- Caulk Gun
- D10 Staple Gun

REPAIR INSTRUCTIONS

ONE: Remove flip-down bed assembly.

Step 1 Locate the front flip-down bed, and open bed. Remove the mattress from the bed and return the flip down bed to the stored position (Figure 1).



Fig. 1

Step 2

Pull the sofa into the 'down' position. Locate and remove the hinge screws from the flip-down bed (Figure 2). Set the screws aside to be used later. Discard the hinge.



Fig. 2

Step 3

Pull the flip-down bed from the cabinet and carefully rest on the sofa. Remove both of the latches from the top of the bed platform (Figure 3). Remove both of the latch catches from the cabinet (Figure 4) and set the latches and catches aside to be used later. Discard the bed platform.



Fig. 3



Fig. 4

Step 4

Measure the base of the cabinet and cut the supplied U-Channel to the measured length. Cut and remove one leg of the U-Channel (making it an L-Channel) to allow the trim to cover the front edge of the base cabinet. Apply silicone to the now L-Channel (Figure 5) and secure it to the base cabinet with the screws removed from the hinge (Figure 6).



Fig. 5



Fig. 6

Step 5

Measure the height of the wardrobe cabinets (Figure 7) and cut a piece of the supplied flat trim for each cabinet. Fasten one piece of trim on the front inside edge of each wardrobe and use putty (Thoreau Cherry) to fill the staple holes (Figure 8).



Fig. 7

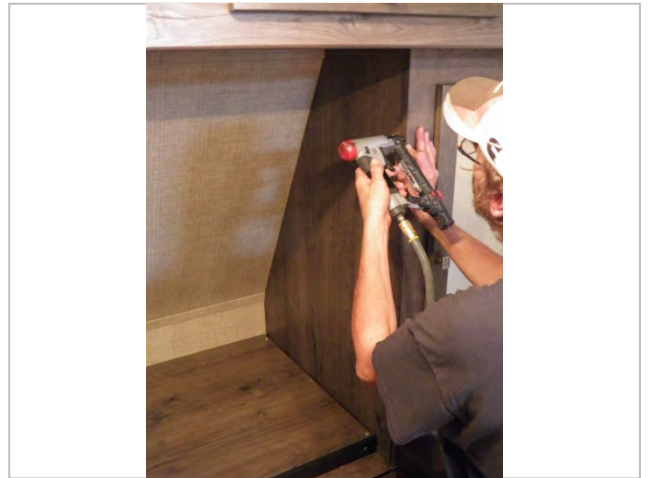


Fig. 8

TWO: **Replace new flip-down bed assembly.**

Step 1 Place the bed platform on the sofa (Figure 9). Center the platform between the sofa arms and spaced 2 1/8" away from the cabinet (Figure 10). Screw the bed platform hinges to the cabinet.

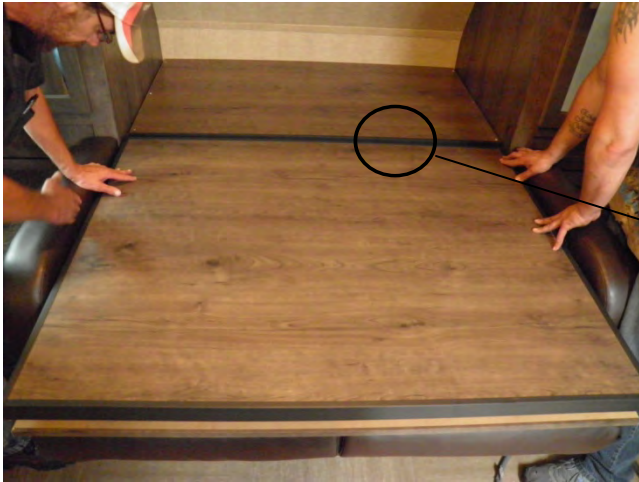


Fig. 9



Fig. 10

Step 2 Aligned the latch and catch assembly with the cabinet face and the bed platform (Figure 11). Secure one latch to the cabinet face then mark the edge of the bed platform to locate the catch (Figure 12). Drill a 3/8 Diameter by 1" deep hole into the edge of the bed platform (Figure 13) to allow the latch to function. Secure the catch plate to the bed platform (Figure 14). Repeat for the other side.



Fig. 11



Fig. 12

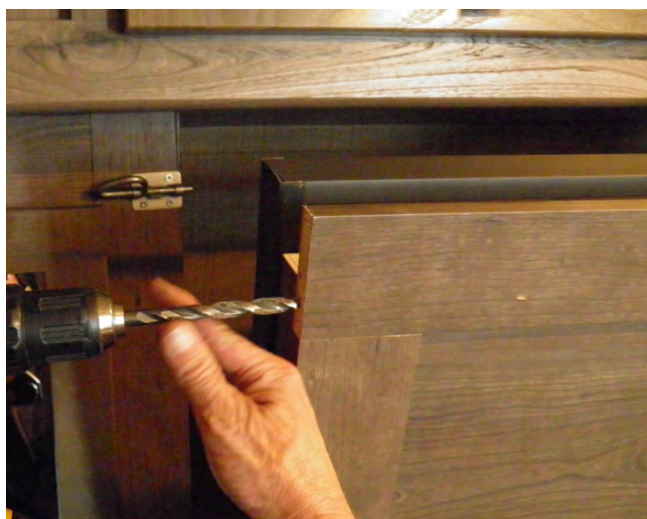


Fig. 13



Fig. 14

Step 3 Verify the new bed platform folds down over the sofa. See Figure 15.



Fig. 15

THREE: WARRANTY REIMBURSEMENT

Submit the claim on Key Express using **Flat Rate Code # 7221242B** with **Service Advisory # 14-212** noted in the customer complaint section of the form. The amount of time authorized for this repair is 1.0 hours.

Please call Keystone Customer Service at **(855) 895-4422** if you have any questions.