




MODEL	BUNKS
KAWASAKI	
STX	25"
YAMAHA	
V1, V1 Sport 2015 VX1 prior to 2015	25"

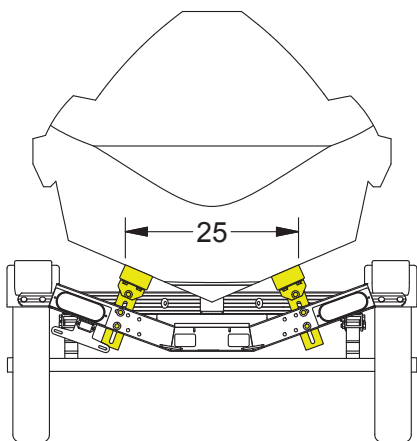


CLEARANCE TO TONGUE GUARD

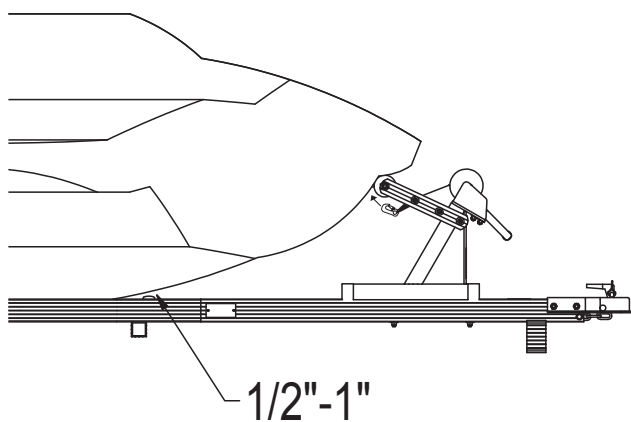

MODEL	BUNKS
SEA-DOO	
SPARK	24"

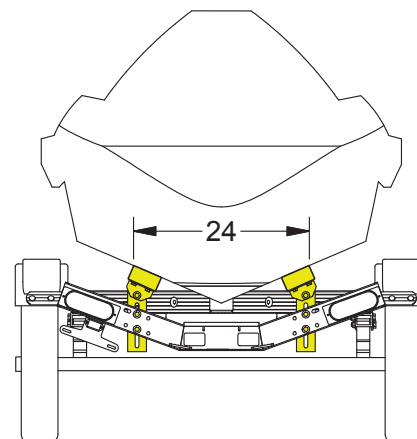

MODEL	BUNKS
SEA-DOO	
GTS, GTR, GTI, WAKE155	27"
RXP	27"
YAMAHA	
VX 2015, VX Cruiser, VX Deluxe	27"

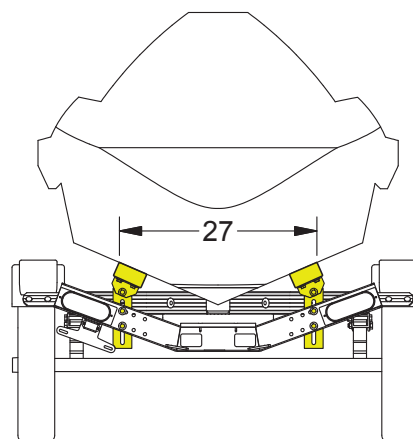

These measurements are meant to be a guide to setup a 2015 Triton Wave. Make sure that the position of the bunks are between the outer chines of the hull. PWC position on the trailer front to back should achieve a tongue weight of 7-10% of the total gross weight of the trailer package for the best towing experience. (gas+gear+PWC's+trailer weight=gross)