

Classification:

Reference:

Date:

BT15-036

ITB15-036

December 14, 2015


2015-2016 QX80; REAR CARPETED FLOOR MAT INSTALLATION

APPLIED VEHICLES: 2015-2016 QX80 (Z62)

SERVICE INFORMATION

Follow the procedure described in this bulletin to ensure a proper fit over the rear floor tunnel when installing a new carpeted floor mat in an Applied Vehicle.

1. Remove the existing fold lines from the new floor mat.
 - a. Place the floor mat rubber-side down.
 - b. Grasp the outer edge (RH or LH) and fold over the floor mat in the opposite direction of the existing fold line. See Figure 1.
 - c. Apply pressure for 20 seconds or until the fold line is no longer visible.
 - d. Repeat the above steps on other side (RH or LH).

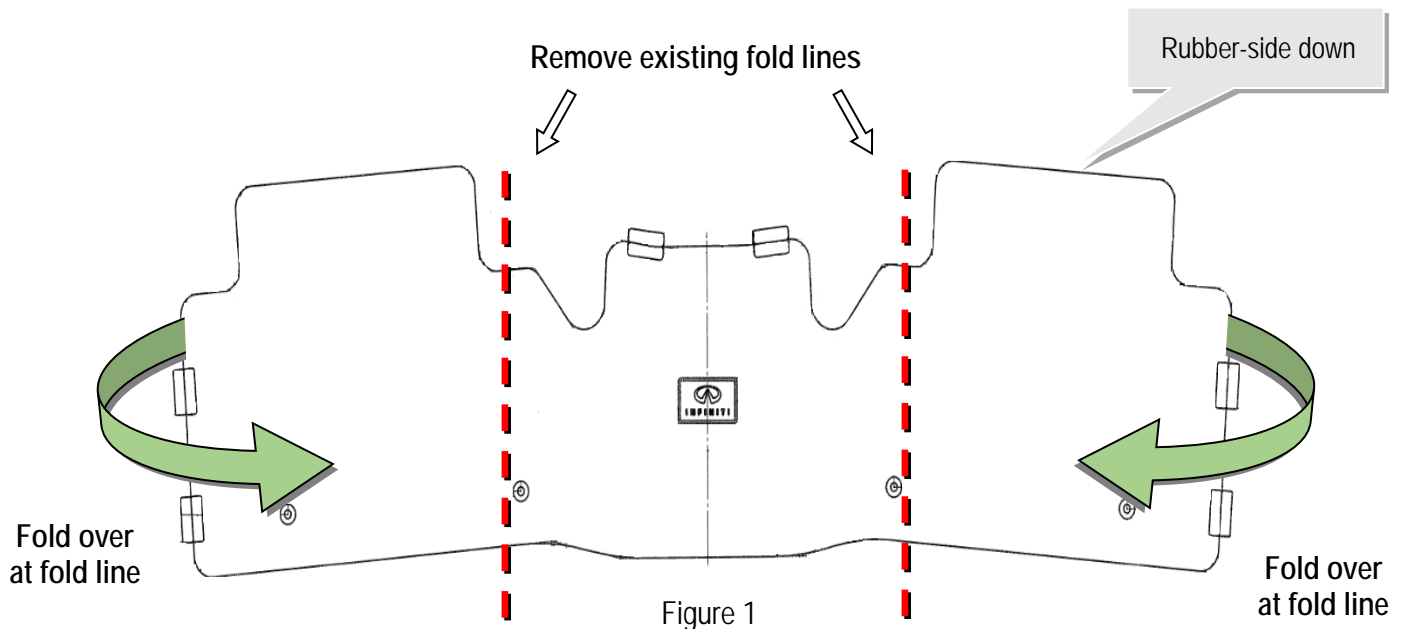

Infiniti Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. **NOTE:** If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Infiniti dealer to determine if this applies to your vehicle.

2. Create new fold lines in the floor mat.
 - a. On a clean surface, place the floor mat rubber-side down.
 - b. Measure approximately 8.2" (209 mm) from the edge of the center Infiniti emblem.
 - c. Fold over the floor mat (carpet surfaces touch) at this measurement to create a crease.
 - d. Apply pressure for 20 seconds or until the fold line is visible.
 - e. Repeat the above steps on other side (RH or LH).

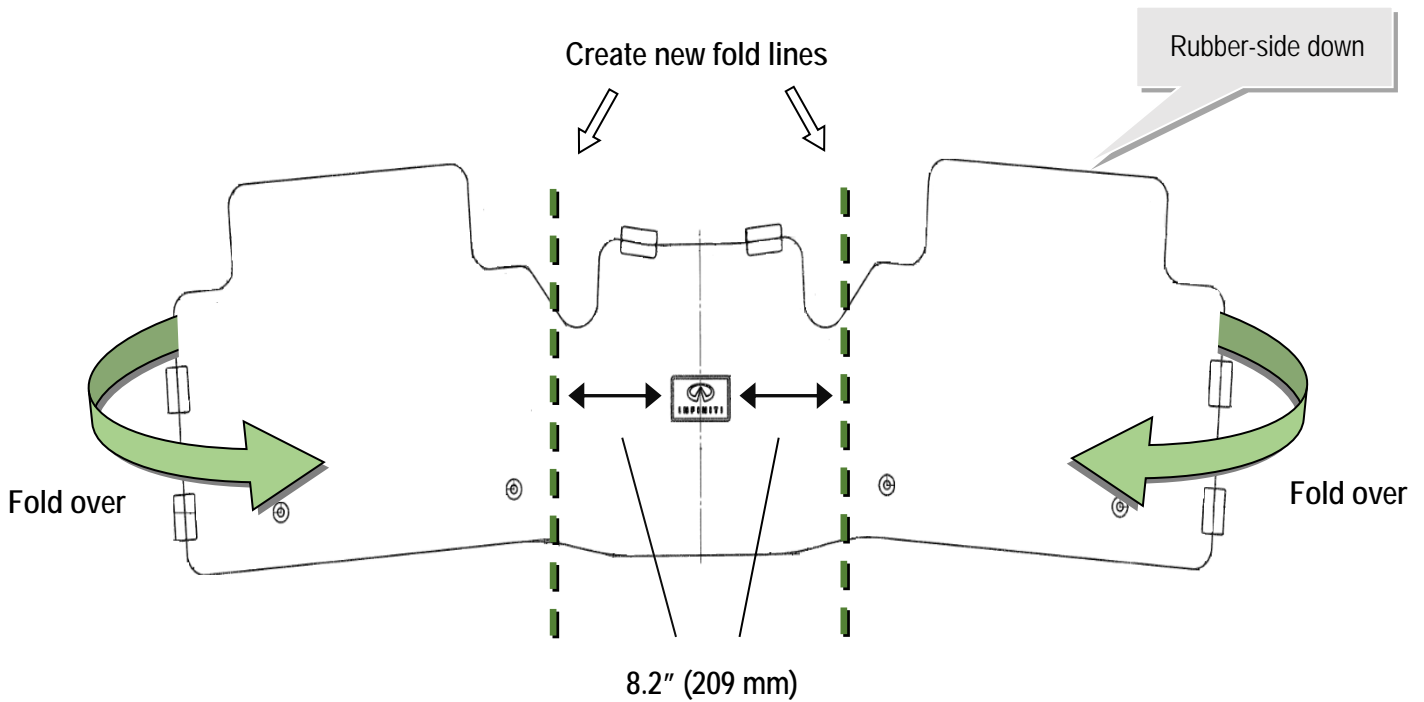


Figure 2

- f. Measure approximately 5.5" (140 mm) from the edge of the center Infiniti emblem.
- g. Use painter's tape to mark this measurement so it is visible on the rubber side of the mat. See Figure 3.

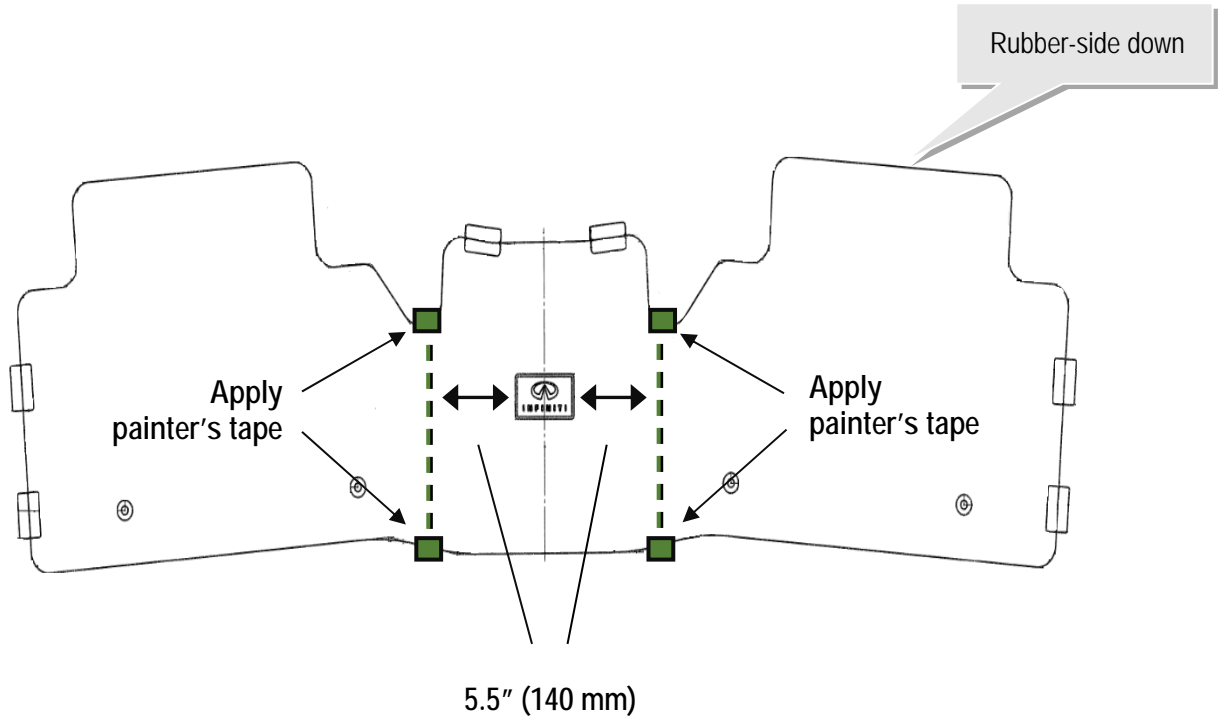


Figure 3

- h. Place the floor mat on a clean fender cover, carpet-side down.
- i. Fold over the floor mat (rubber surfaces touch) at the marked area to create a crease.
- j. Apply pressure for 20 seconds or until the fold line is visible.
- k. Repeat the above steps on other side (RH or LH).

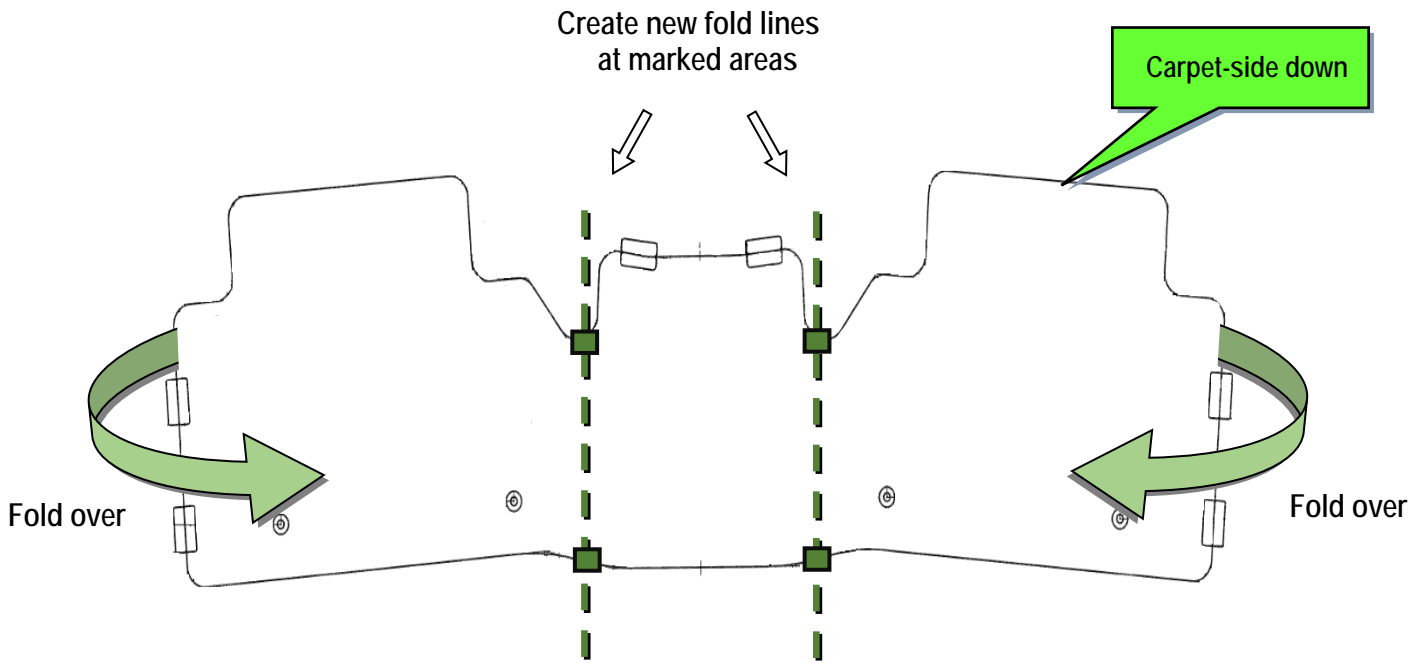


Figure 4

3. Turn over the floor mat and confirm it is clean and all four new fold lines are visible.

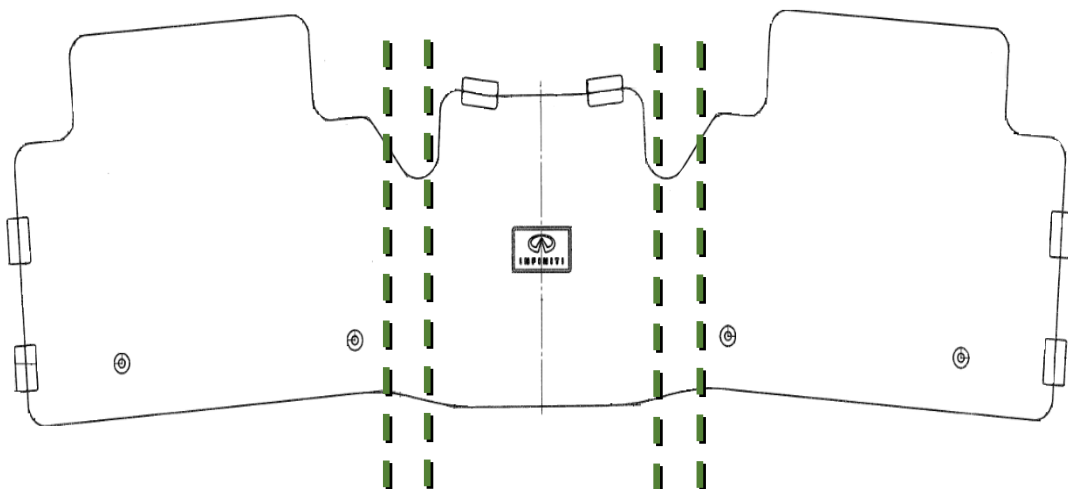


Figure 5

