

SB-10057778-5402



Installing the back Two Screws of the C-85 and C-86 A/C's to the Roof.

MATERIALS NEEDED: 1- Battery Powered Gun

1- 5/16 inch Hex Head Bit

1- 12 inch extension

1- Philips Head Bit

1- Tube of Self Leveling Sealant


2- 12-14X3IN. HWD TEK SCREW

2- #12 NEO Bond Washer (5/8 O/D)

1. Remove the black shroud from the A/C by unscrewing the 4 screws on top of the shroud. Then pull the shroud straight up to remove. See photo below.



2. With the shroud removed the two tek screws with the neo bond washers ran through them can now be installed to secure the A/C to the roof. The location where the screws are run through the A/C's pan is on the right and left side of the motor. There is a screw that holds the metal shroud to the pan in front of this screw is where the tek screws will be placed. After securing the screws cover the heads with self leveling sealant then replace the A/C's shroud. See photo below.

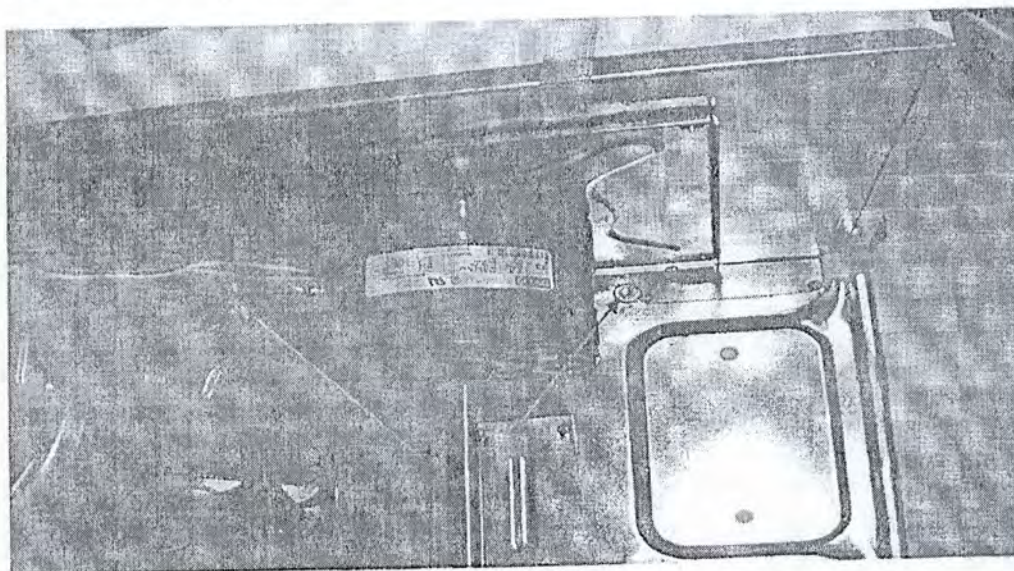



Tiffin Motorhomes, Inc.
105 2nd Street NW
Red Bay, AL 35582
256-356-8661

SB-36

Installing the back two screws of the A/C to the roof

March 8, 2012

Dear Tiffin Customer:

It has come to our attention that two screws were inadvertently left off the air conditioner of approximately twenty units, this unit being one. We are enclosing the two screws needed to make the repair. We ask that you take the unit to one of our dealers or service center of your choice to have this repair done. DO NOT attempt this repair yourself. It is not a safety issue, so if you are coming to Tiffin's anytime in the future, you may wait until then.

Thank you,

Tiffin Motorhomes, Inc.

VIN _____

Dealer or Service Center Address _____

Invoice # _____ Date _____

_____ Pay to Dealer or Service Center

*Note to service center or Tiffin Dealer. Please use code 9936SB00 on warranty claim or invoice.