



Eng/Ops Bulletin

ECN 1416

March 9, 2015

Update

CLARIFICATION: This ECN is only applicable for standard Horton models and will not affect our PE (553 and 603) vehicles.

This ECN is for changing PD box location from cab console OR behind the driver seat to a new standard location in the #2 compartment.

The new location will be on the left side of the #2 compartment under the HOPS close out. With this option the PD box will fit behind a close out with access plate on right side. This design will utilize the rotated HOPS close out option.

Do not locate electrical equipment or any other items that would block access to the PD box. The new PD box close out will be 6" wide and full depth of the compartment. The new location will free space in the cab console and reduce wire box size located behind the driver seat. The new standard location should simplify the PD box design and the install process.

See supplemental drawings & pictures for new PD box location and close out design.


Effective



Immediate (March 9, 2015)

Notes


[Click here to download a PDF of this comm.](#)

Pictures


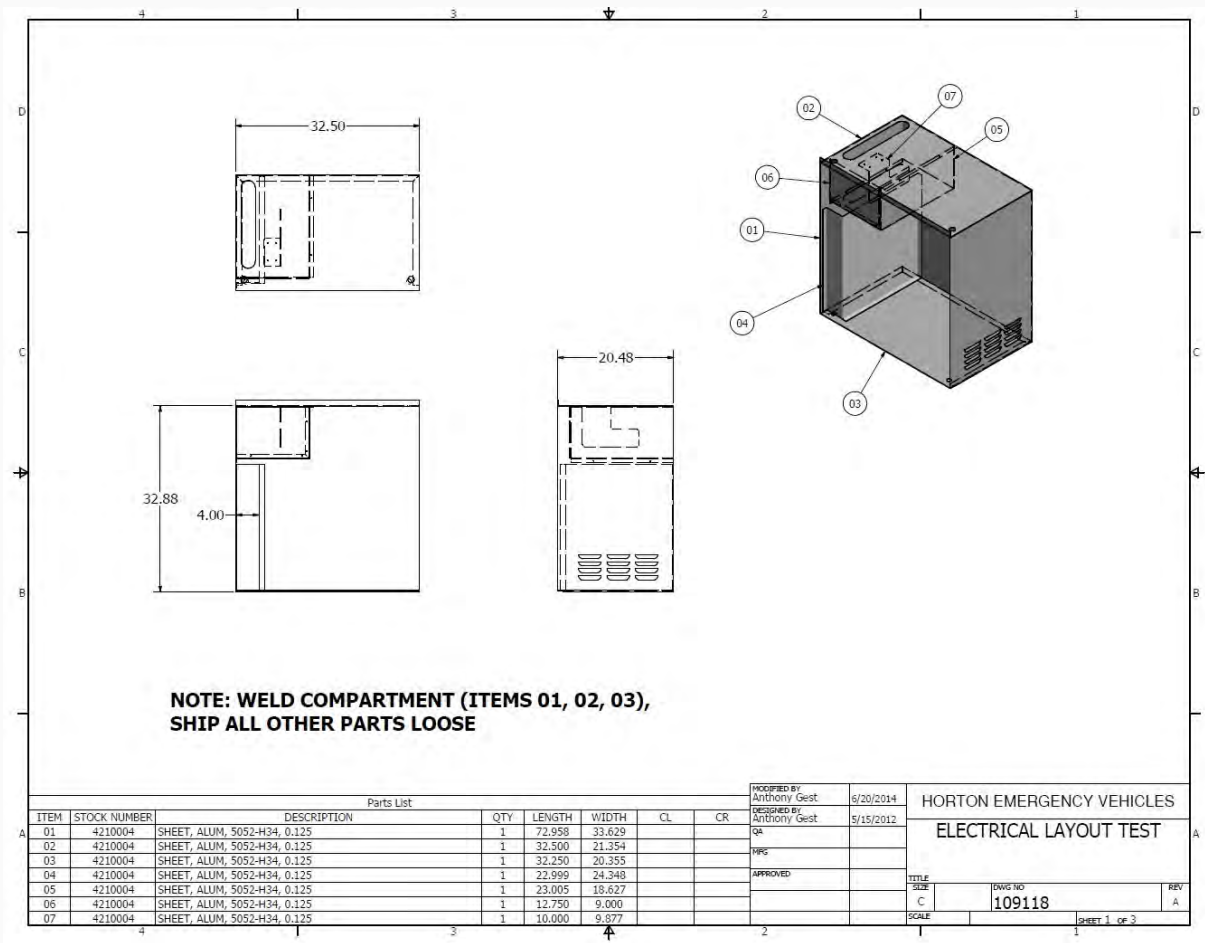


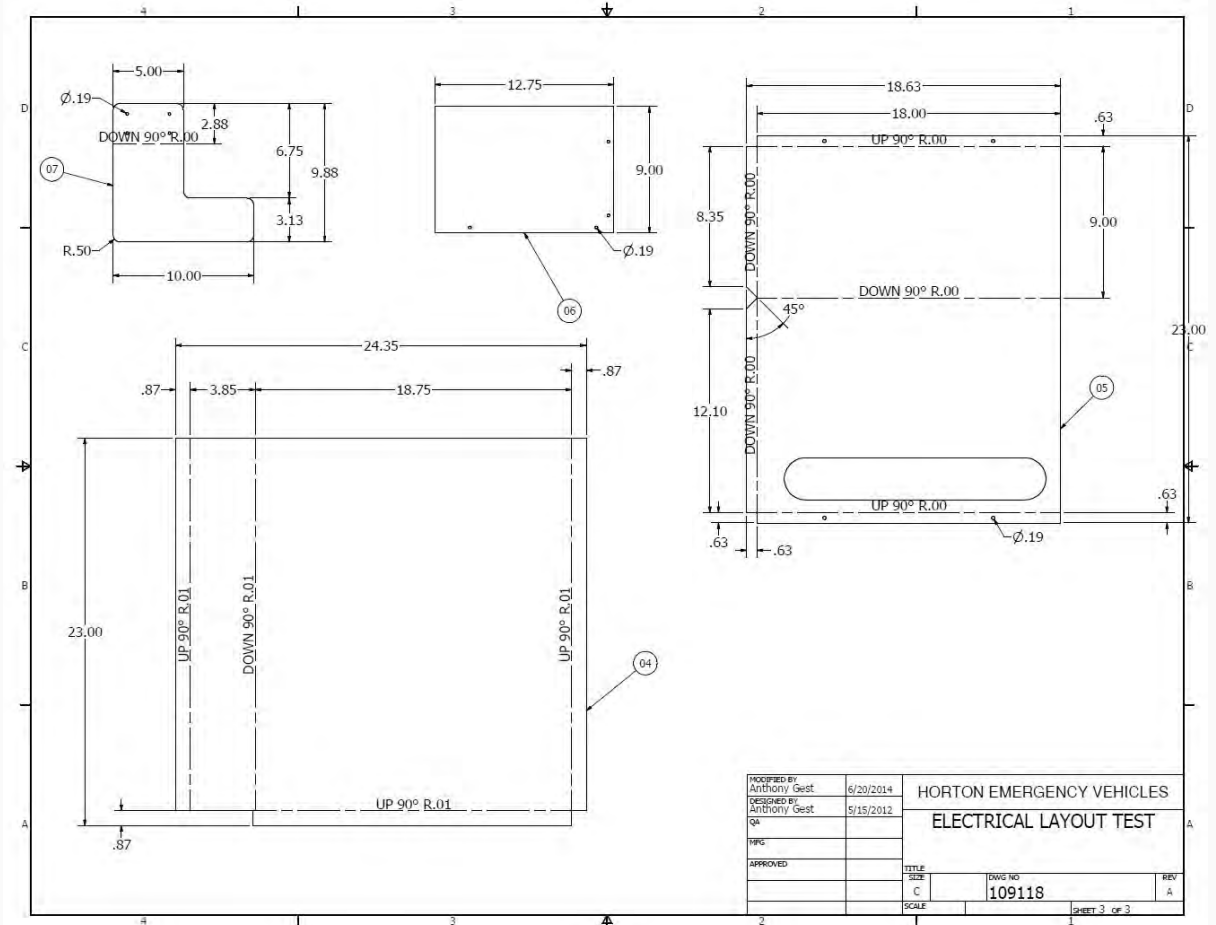
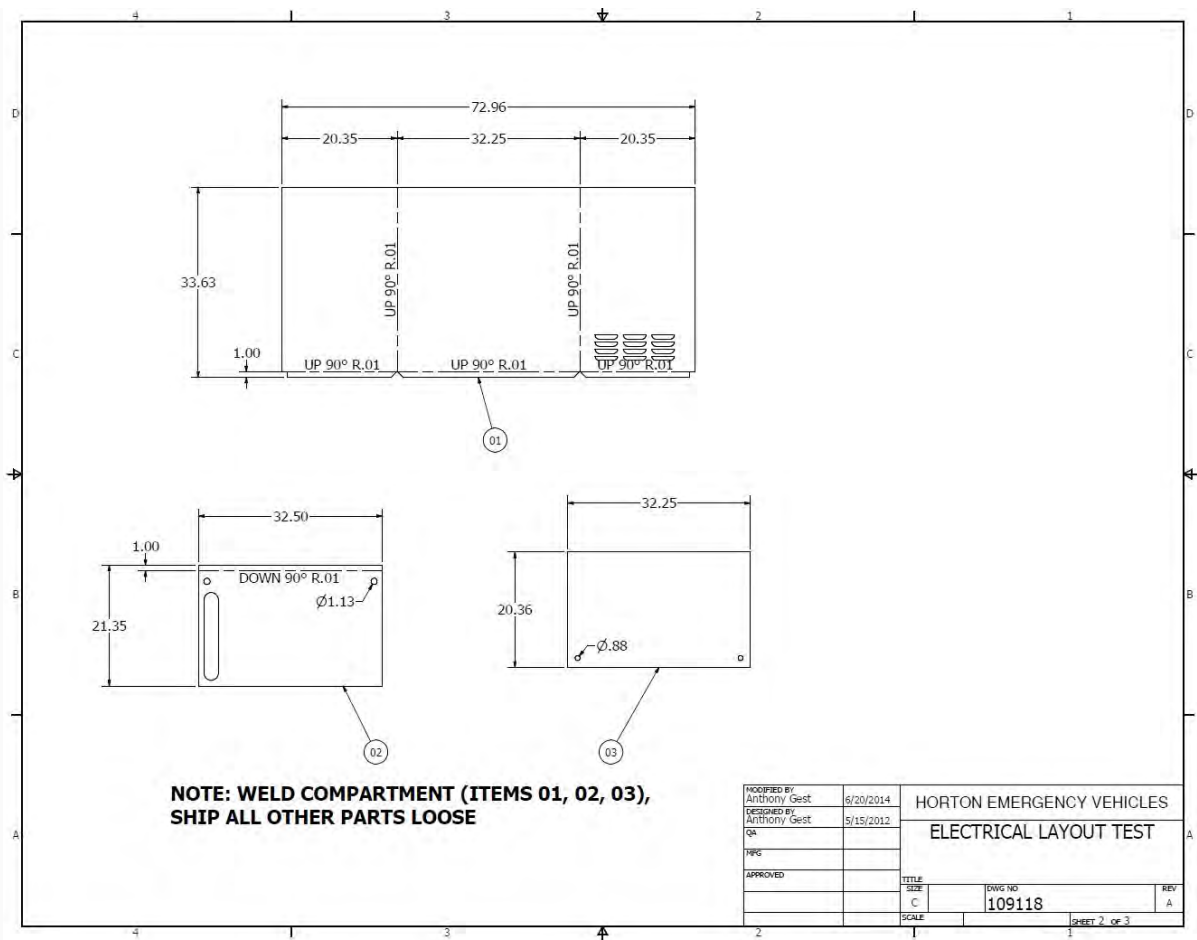




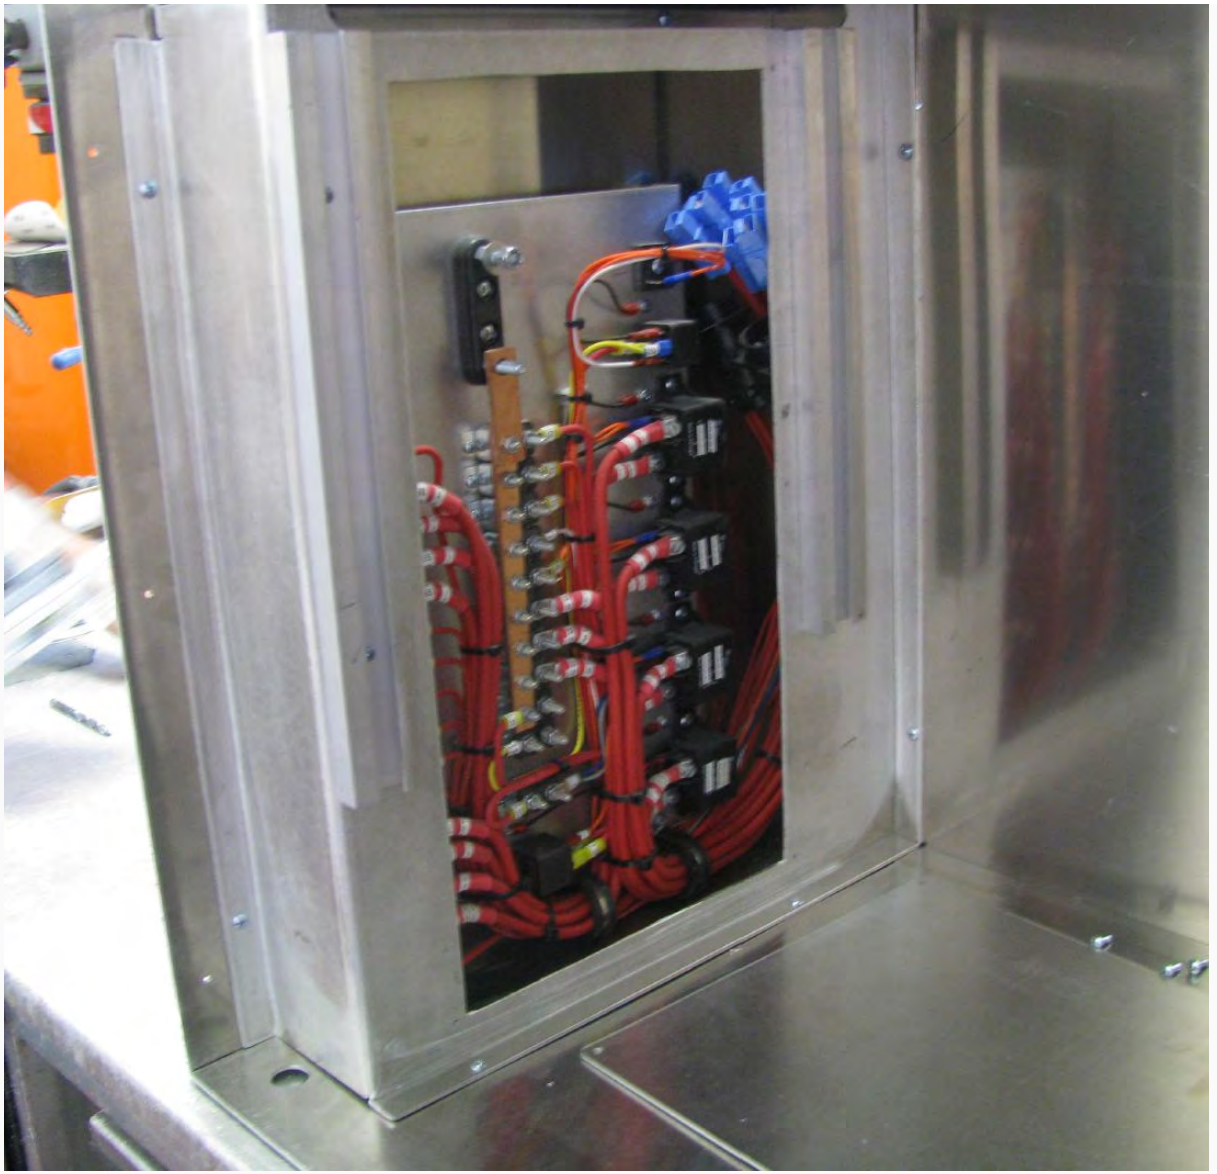



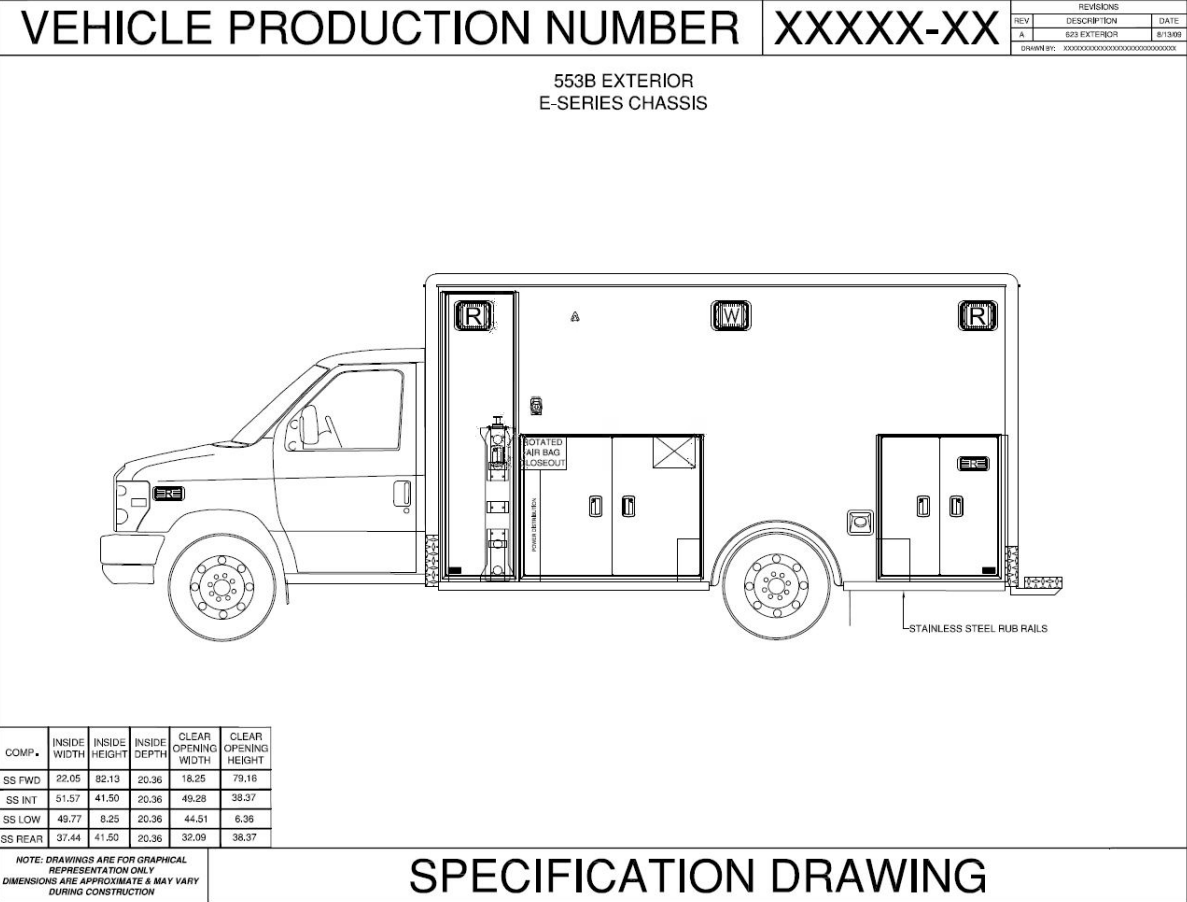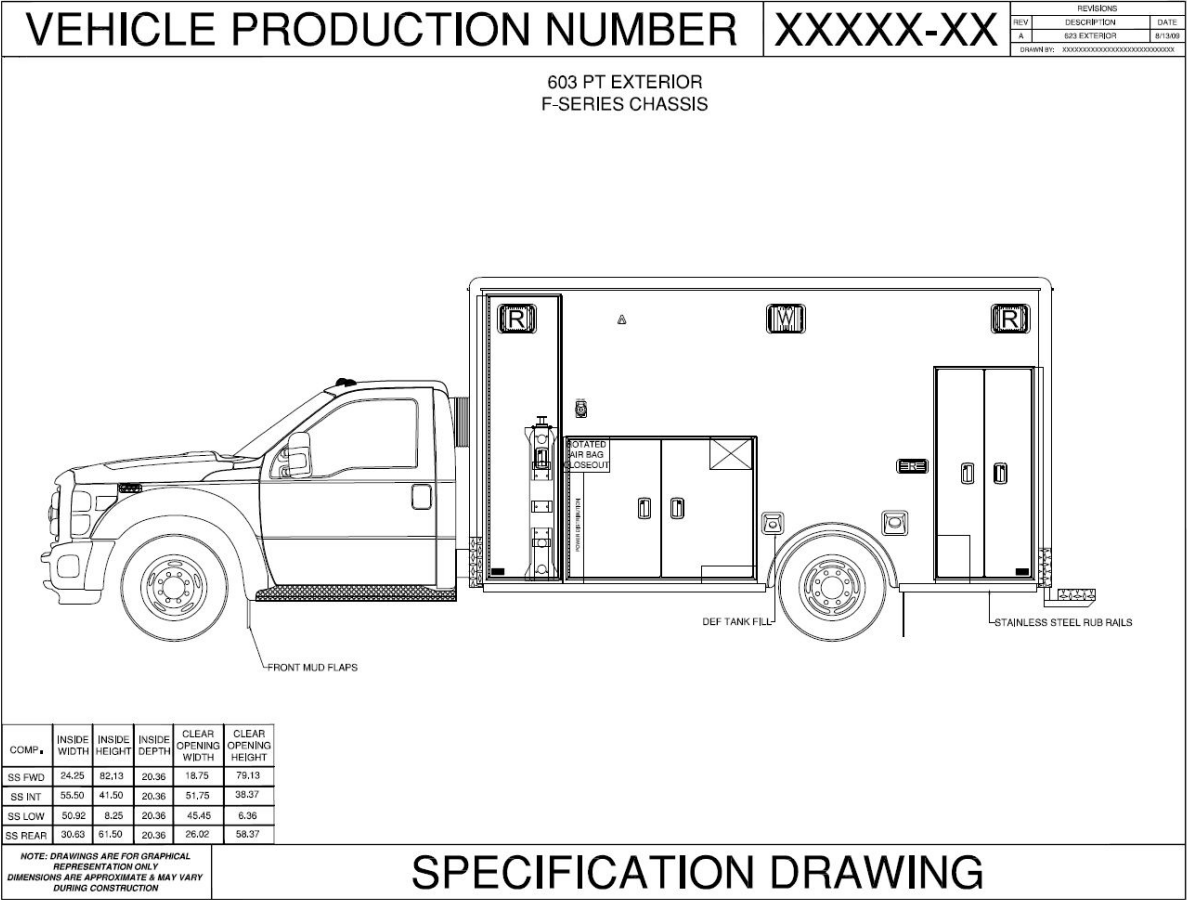

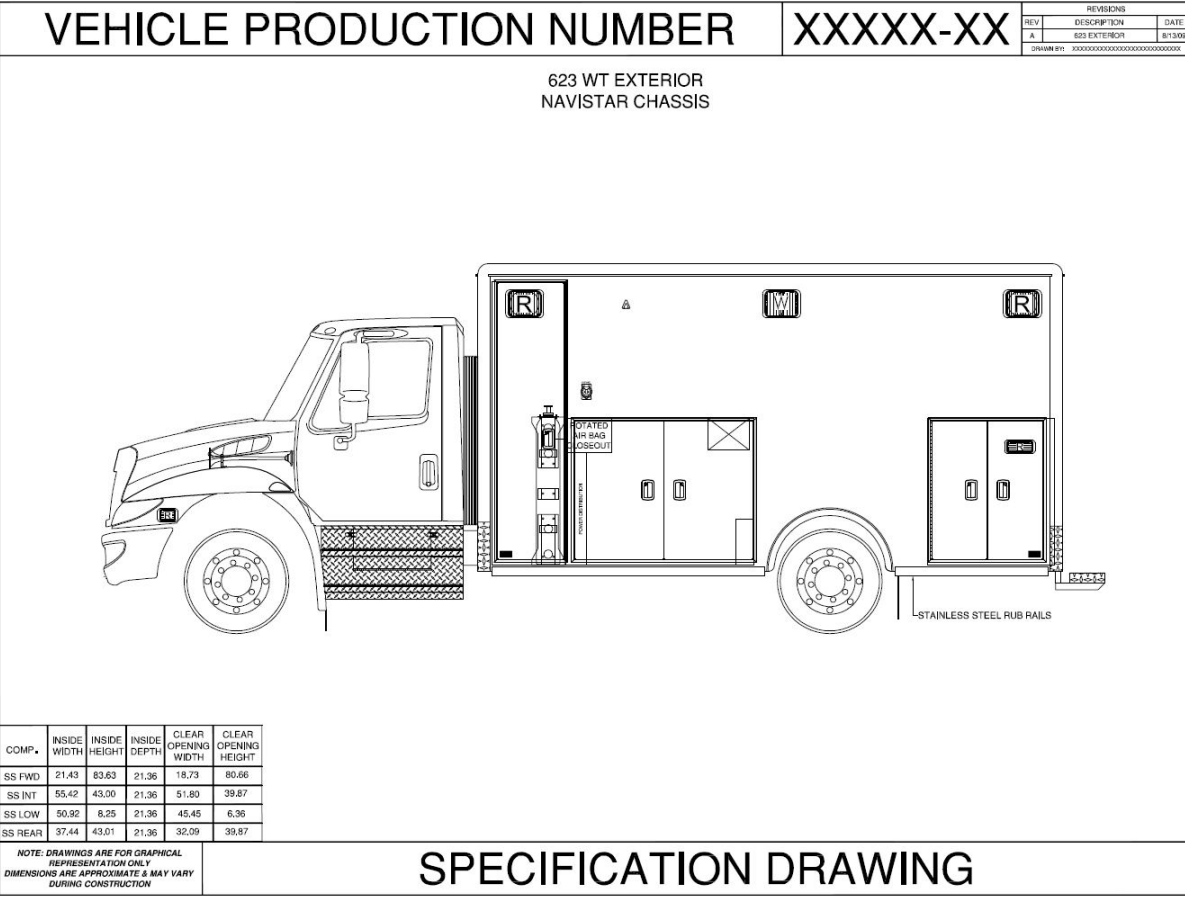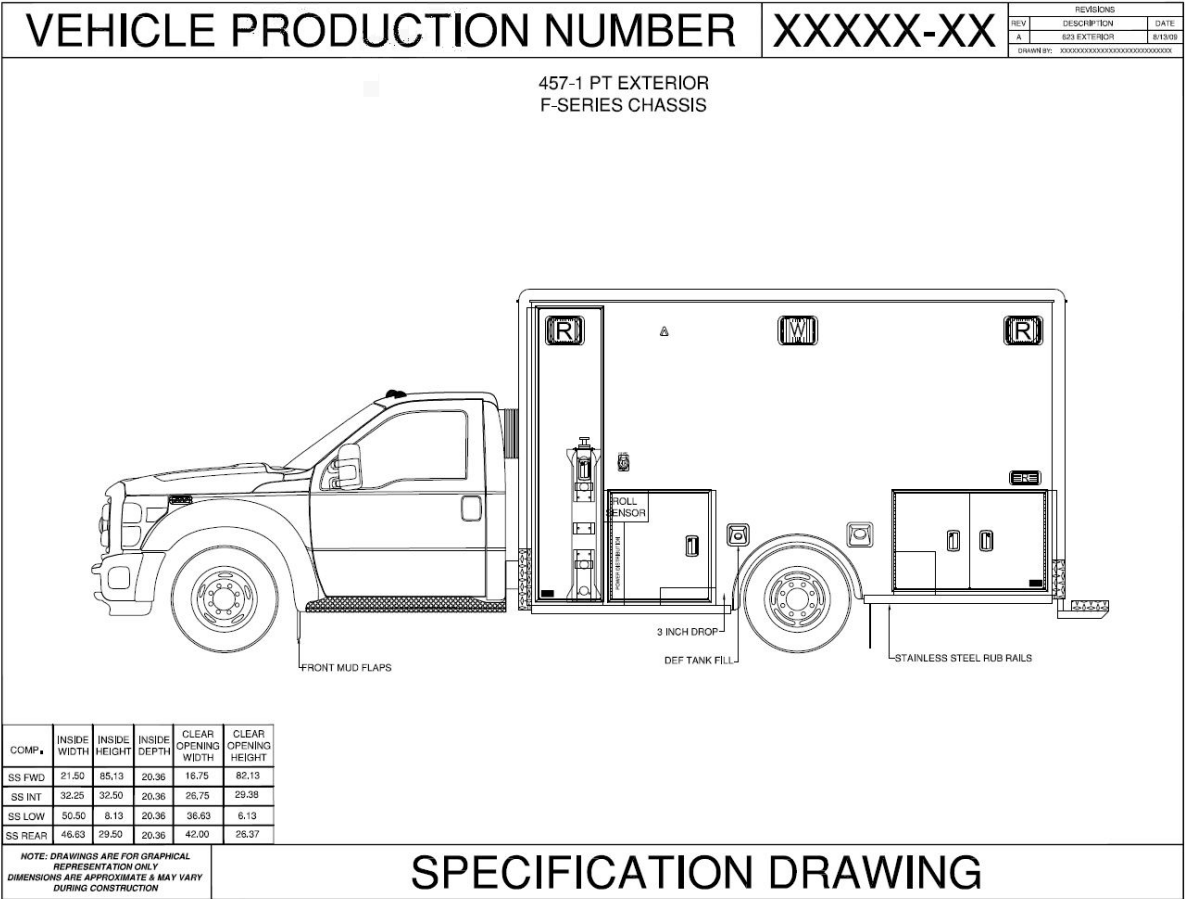

Should you have any questions regarding the engineering update, you may address them to Eric Fisher at eric.fisher@hortonambulance.com.

Copyright © 2015 Horton Emergency Vehicles, All rights reserved.

[unsubscribe from this list](#) [update subscription preferences](#)

MailChimp.