



Quick tip

Version 1.2

11-4, 2016

Title: Passat 1.8T PZEV/SULEV (with secondary air) Without Kessy

Part number: 561065760B

Kit contents




Additional parts required: Key part number 561837202D INF,

Vehicles without fog lights, **BCM MUST** be replaced refer to ETKA for newest part number.



Step 1: Disconnect battery, Remove lower column cover, storage box and lower foot well trim panel.

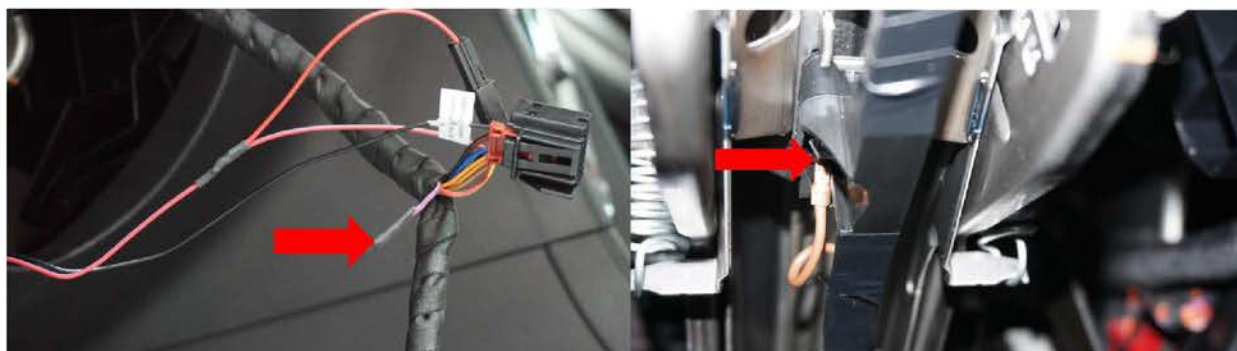

Step 2: J527 Move the wire from location 14 to 7. If there is a wire there already in location 7 insulate the wire that was in location 14. Insert black wire into location 8. Remove wire from location 6. Insert red/black wire back into location. Insert wire that was removed into splice connector. Remove wire from location 1 and insert red/violet wire back into location. Insert the wire that was removed into the splice

Step 3: Remove 8mm nut and add the brown ground wire to the steering column ground location.



Black connector is connector A

White connector is connector B

Brown connector is connector C



Step 4: Remove and insulate wires in locations C31, C14 and B29 (if located in vehicle). Move wire from location B28 and insert into location A3. Insert the red/blue wire into location B14, Insert the red/black wire into location B13, Insert the black wire into location C31.

Step 5: Install new relay into the relay carrier and mount to BCM.



Step 6: Check to see if hood latch micro switch is already installed. If so skip this step, If not remove hood latch and install the micro switch into the hood latch.

Step 7: Re-install all connectors and trim panels removed during work. Re-connect battery.

Step 8 Connect battery charger and scan tool. Perform GFF scan, Adapt all key(s), Adapt remotes, Under software version management select adapting software, perform conversion/retrofit (option 3) and use SVM code 3740D. **Note** If BCM is replaced turn off factory mode, perform SVM then adapt remotes.

Step 9: Perform functionality test on remote start system.

