



Quick tip

Version 1.2

11-4, 2016

Title: Passat 1.8T PZEV/SULEV (with secondary air) With Kessy

Part number: 561065760B


Kit contents



Additional parts required: Additional parts required: Key part number 561837202D INF, Vehicles without fog lights, **BCM MUST** be replaced refer to ETKA for newest part number.



Step 1: Disconnect battery, Remove lower column cover, storage box and lower foot well trim panel.

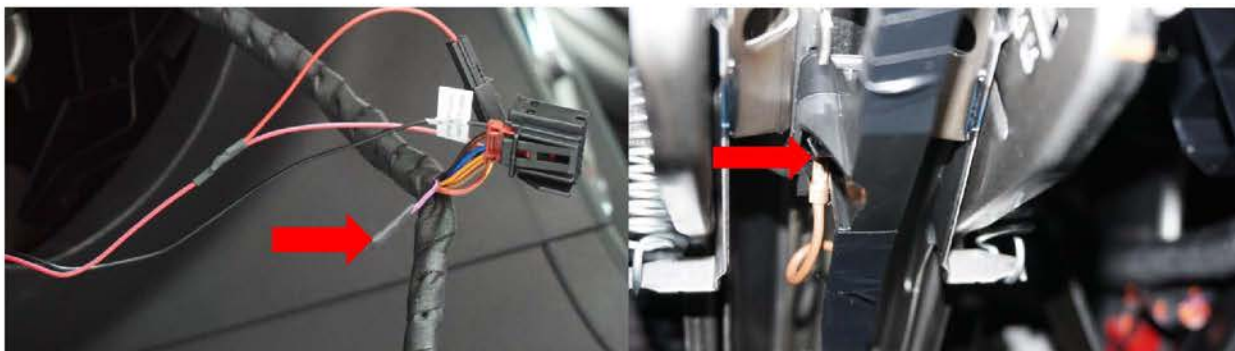

Step 2: J764 steering column lock
Remove the wire from position 8 and insulate. Insert black wire into position 8. Remove wire from position 12 and insert red/black wire. Insert the wire that was previously removed into the splice connector. Remove the wire from position 2 and insert red/violet wire. Insert wire that was previously removed into the splice

Step 3: Remove 8mm nut and add the brown ground wire to the steering column ground location.



Black connector is connector A
White connector is connector B
Brown connector is connector C



Step 4: Remove and insulate wires in locations C31, C14 and B29 (if located in vehicle). Move wire from location B28 and insert into location A3. Insert the red/blue wire into location B14, Insert the red/black wire into location B13, Insert the black wire into location C31.

Step 5: Install new relay into the relay carrier and mount to BCM.



Step 6: Check to see if hood latch micro switch is already installed. If so skip this step, If not remove hood latch and install the micro switch into the hood latch.

Step 7: Re-install all connectors and trim panels removed during work. Re-connect battery.

Step 8 Connect battery charger and scan tool. Perform GFF scan, Adapt all key(s), Adapt remotes, Under software version management select adapting software, perform conversion/retrofit (option 3) and use SVM code 3740D.

Step 9: Perform functionality test on remote start system.