



# Quick tip

Version 1.2

14-4, 2016

Title: Passat TDI with Kessy remote start quick tip

Part number: 561065760A+000065713




**Kit contents:** Relay panel with harness, connectors, micro switch's, cable ties, instructions.



**Additional parts required:** Key part number 561837202D INF, relay part number 4H0951253A, Cable 000065713. Vehicles without fog lights, **BCM MUST be replaced** refer to ETKA for part number



## J764 steering column lock unit

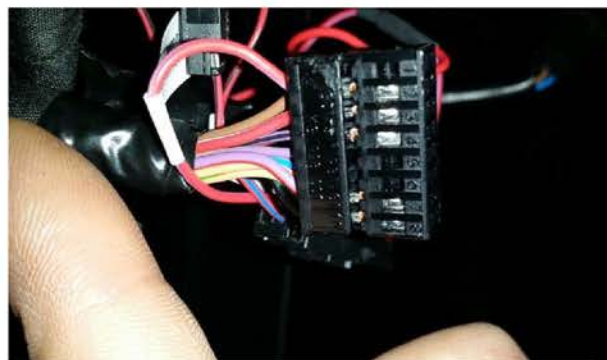

**Step 1:** Disconnect battery, Remove lower column cover, storage box and lower foot well trim panel.

**Step 2:** Remove terminal 8 out of connector and insulate if it is located in the connector. Insert the black wire into location 8. Remove the wire from location 12 and insert into location 1 of the supplied connector. Insert the red/black wire back into location 12. Remove the wire from location 2 and insert into location 1 of the supplied connector. Insert the red/violet wire into location 2.

## Head lamp switch



**Step 3:** Remove 8mm nut and add the brown ground wire to the steering column ground location.

**Step 4:** Remove terminal out of location 4 and insert into location 1 of supplied connector. Insert the black/violet wire back into location 4.



## BCM



**Step 5:** Remove and insulate wires in locations C31, B29.

**Step 6:** Move the wire from location C14 to B13 and from location B28 to A3.



**Step 7:** Insert the red/blue wire into location B14, Insert the black wire into location C31, Insert the red/white wire into location C34, Remove the wire from location C30 and insert into the supplied connector position 1 and connect to the violet/white wire connector.

**Step 8:** Mount new relay panel to the BCM and insert the new start relay in the connector. Remove and discard original starter relay.




### BCM connector configuration.




Black connector is connector A  
White connector is connector B  
Brown connector is connector C

### ECM

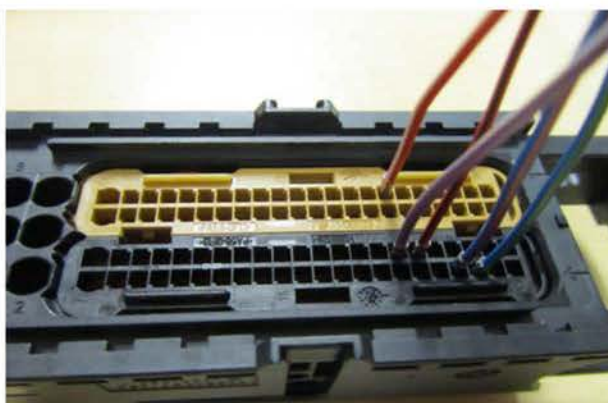

**Step 9:** : Insert the Red/Black wire in location K45 (Remove and insulate wire already in this location if applicable), Insert the Red/White wire in location K88, Insert the Blue/Red wire in location K25, insert the Blue/Green wire in location K26, insert the Violet/White wire in location K44.

### Starter Relay

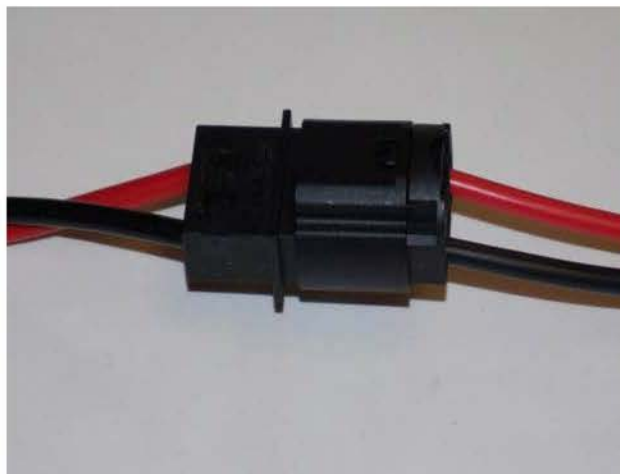

**Step 10:** Remove the red and black wire from starter relay connector and install in the new starter relay harness connector.


### Hood latch with micro switch



**Step 11:** Loosen the top relay carrier and push the 562 relay and carrier out on the far left. Remove the black wire from position 5.



## Starter

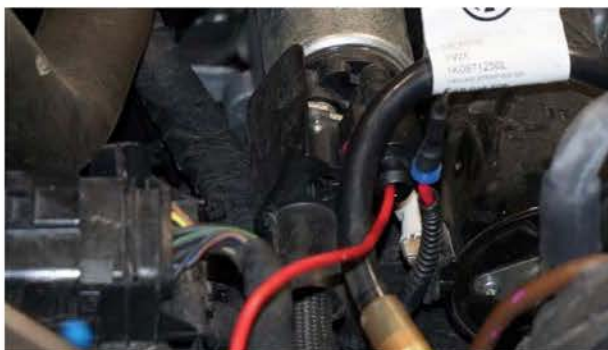

**Step 12:** Remove the red wire from the starter solenoid connector. Insert the red wire from the kit in the connector. Insulate the red wire

**Step 14:** Re-install all connectors and trim panels removed during work. Re-connect battery.

**Step 15:** Perform functionality test on remote start system.

## Hood latch with micro switch



**Step 13:** Check to see if hood latch micro switch is already installed. If so skip this step, If not remove hood latch and install the micro switch into the hood latch.

**Step 14:** Connect battery charger and scan tool. Perform GFF scan, Adapt all key(s), Adapt remotes. Under software version management select adapting software, perform conversion/retrofit (option 3) and use SVM code 3740D. . **Note** If BCM is replaced turn off factory mode, perform SVM then adapt remotes.