



# Quick tip

Version 1.3

April 21, 2016

Title: Passat TDI without Kessy

Part number: 561065760A




**Kit contents:** Relay panel with harness, connectors, micro switch's, cable ties, instructions.

**Additional parts required:** Key part number 561837202D INF. Vehicles without fog lights, **BCM MUST be replaced** refer to ETKA for part number



ver1.2

## J527 steering column control unit

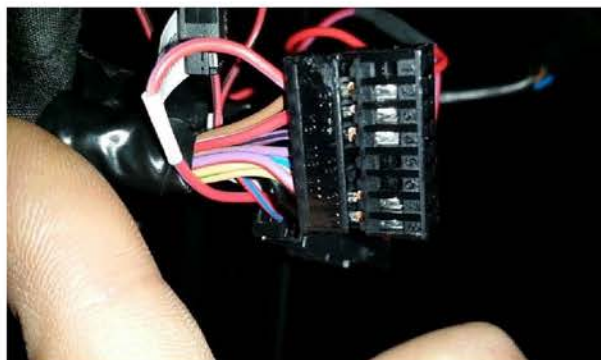

**Step 1:** Disconnect battery, Remove lower A14, column cover, storage box and lower foot well trim panel.

**Step 2:** Insert black wire in position remove wire from position A6 and insert into splice connector, Insert red/black wire into position A6, Remove the wire from position A1 and insert it into the splice connector, Insert the red/violet wire into position A1.

## Head lamp switch



**Step 3:** Remove 8mm nut and add the ground wire to the steering column and insert into location 1 of supplied ground location.

**Step 4:** Remove terminal out of location 4 brown connector. Insert the black/violet wire back into location 4.



**Step 5:** Remove and insulate wires in C31, B29. **Step 6:** Move the wire from location C14 to locations B13 and from location B28 to A3.



**Step 7:** Insert the red/blue wire into location B14, Insert the black wire into location C31, Insert the red/white wire into location C34, Remove the wire from location C30 and insert into the supplied connector position 1 and connect to the violet/white wire connector.

**Step 8:** Mount new relay panel to the BCM and insert the new start relay in the connector. Remove and discard original starter relay.



**BCM connector configuration. ECM**



**Step 10:** Remove the red and black wire



**Step 11:** Check to see if hood latch micro Violet/White wire in location K44.

**Starter Relay**

**Hood latch with micro switch**


from starter relay connector and install in the new starter relay harness connector.

switch is already installed. If so skip this step, If not remove hood latch and install the micro switch into the hood latch.



Black connector is connector A

White connector is connector B

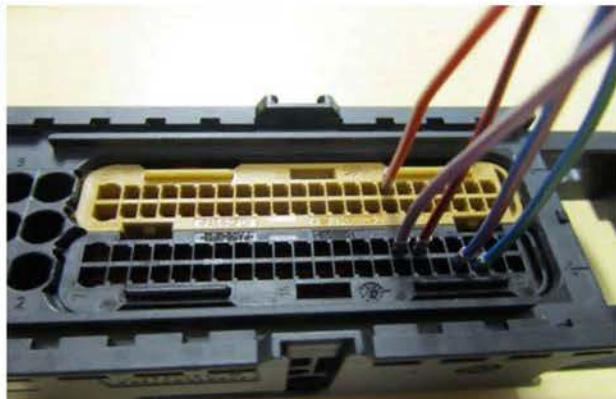

Brown connector is connector C **Step 9:** Insert the Red/Black wire in location K45



(Remove and insulate wire already in this location if applicable), Insert the Red/White wire in location K88, Insert the Blue/Red wire in location K25, insert the Blue/Green wire in location K26, insert the



**Step 12:** Re-install all connectors and trim panels removed during work. Re-connect battery.

**Step 14:** Perform functionality test on remote start system.

**Step 13:** Connect battery charger and scan tool. Perform GFF scan, Adapt all key(s), Adapt remotes. Under software version management select adapting software, perform conversion/retrofit (option 3) and use SVM code 3740D. **Note** If BCM is replaced turn off factory mode, perform SVM then adapt remotes.