

REFERENCE:	Nova Bus Manuals
SECTION:	19: Fire suppression system
RS N°:	MQR 7621-N/A
EFFECTIVE IN PROD.:	L993 (201SE)

APPLICATION DEADLINE: 2017DE31
CLAIM REFERENCE NUMBER: WB-3860

SUBJECT:	Fire suppression hose
JUSTIFICATION:	Fire suppression hose not certified.

LEVEL	DESCRIPTION	DIRECT CHARGES		TIME
		LABOUR	MATERIAL	
1	Replace the hose by a certified one.	Nova Bus	Nova Bus	1h
2	–	–	–	–

MATERIAL

QTY	PART N°	REV.	DESCRIPTION	REPLACES PART N°
LEVEL 1				
1	N95784-03	A	Hose assy fire suppression	–
LEVEL 2				
–	–	–	–	–

Materials will be available within 30 days once your order has been placed. To order, please contact Prevost Parts by phone at 1-800-771-6682, by fax at 1-888-668-2555 or by email at prevostparts.commandes@volvo.com. Specify document number, quantity of parts required and shipping address.

DISPOSAL OF PARTS

REMOVED PARTS ARE:	DISCARDED *	RETAINED	* Dispose of the unused parts and the defective parts in accordance with local environmental standards in effect.
	Yes	–	

REVISION HISTORY

REV.	DATE	CHANGE DESCRIPTION	WRITTEN BY
NR	2017NO22	Initial release	André Pelletier

APPROVED BY: Daniel Theriault

Digitally signed by Daniel Theriault
DN: cn=Daniel Theriault, o=Nova Bus, ou, email=daniel.theriault@volvo.com, c=CA
Date: 2016.11.24 10:49:49 -05'00'

CLIENT	ORDER	ROAD NUMBER		VIN (2NVY/4RKY...)		QTY
		FROM	TO	FROM	TO	
Ames Transportation Agency - Iowa	L904	6101	6104	S92J1G9775221	S92J7G9775224	4

**WARNING**

Follow your internal safety procedures.

PROCEDURE FOR THE HOSE REPLACEMENT

- 1.1. Remove the access panel on the curb side . See Figure 1.


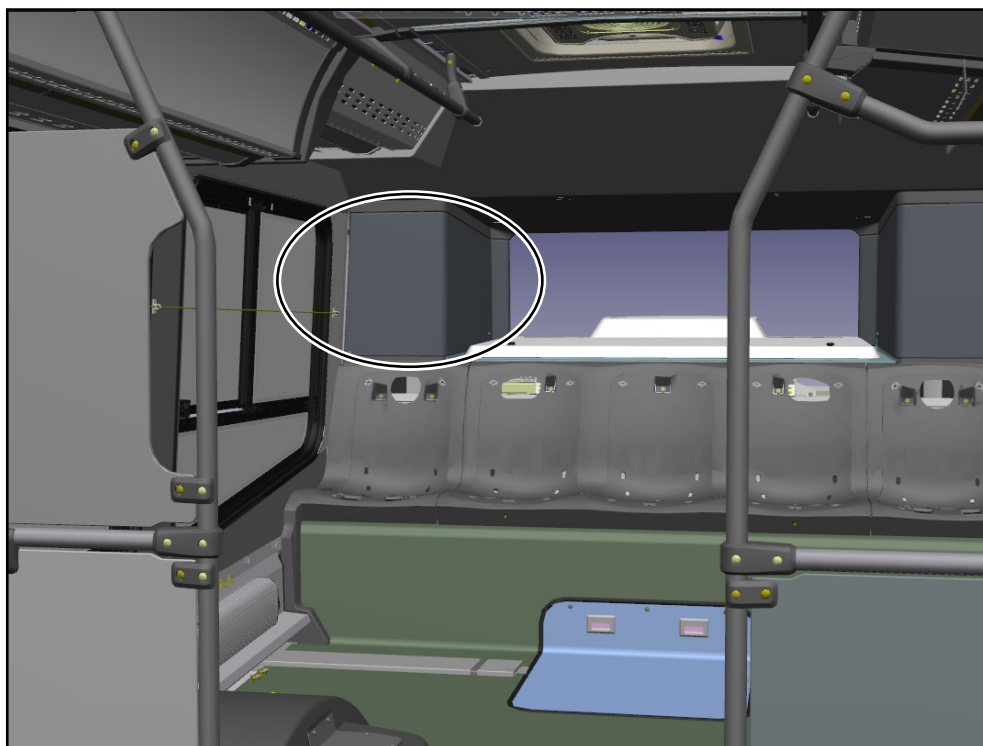


Figure 1 - Remove the Access Panel

**WARNING**

Important - In order to avoid accidental system discharge while replacing the hose, do not perform the repair if the yellow connector is connected to the agent cylinder.

- 1.2. Disconnect the electrical valve connection on the agent cylinder. See Figure 2.

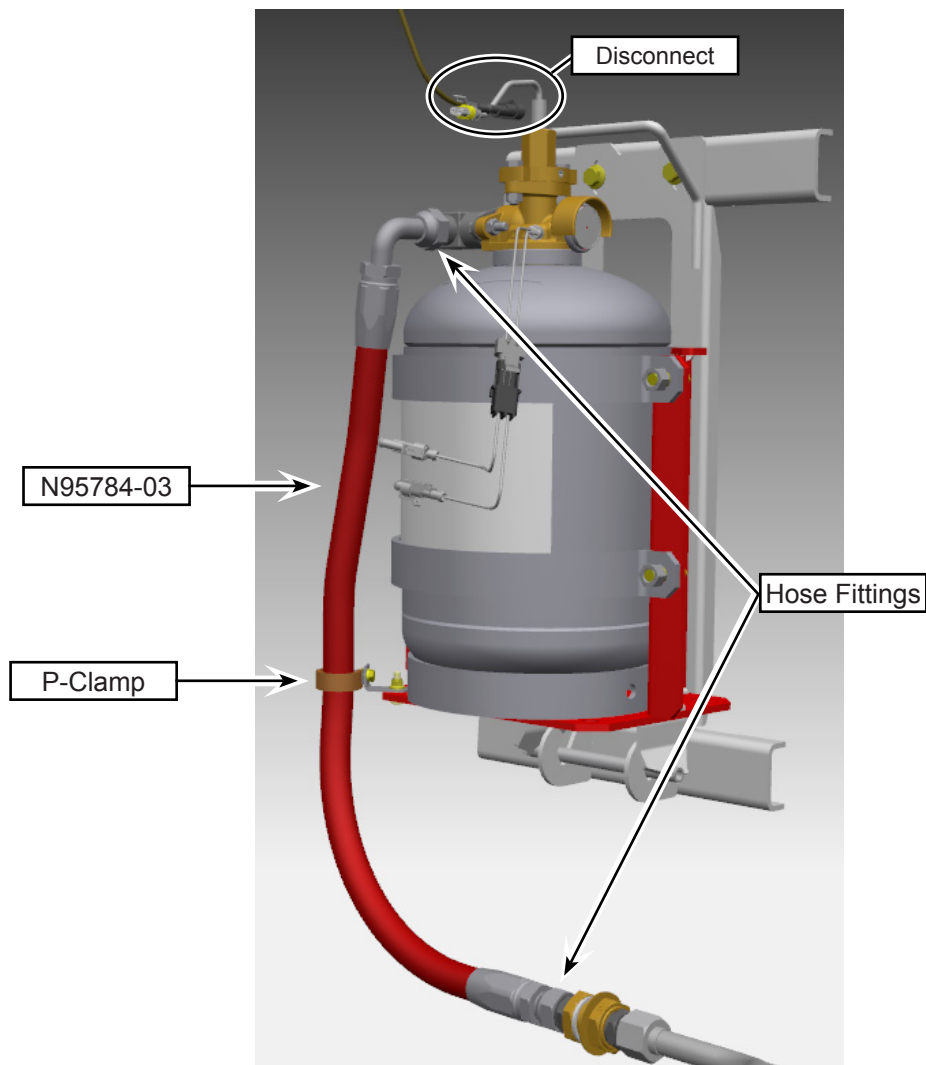

- 1.3. Remove and retain the P-clamp.
- 1.4. Remove and replace the hose by the new N95784-03. Torque the hose fittings to 79-87 lb-ft (108-119 N•m). Apply a new anti-tamper seal.
- 1.5. Install the P-clamp.
- 1.6. Reconnect the electrical valve connection on the agent cylinder.
- 1.7. Install the access panel.
- 1.8. Return the vehicle in service. ❖