



Service Bulletin

File in Section: -

Bulletin No.: 16-NA-309

Date: September, 2016

INFORMATION


Subject: Electric Charge Cord Velcro Strap Installation During Pre-Delivery Inspection (PDI)

Brand:	Model:	Model Year:		VIN:		Engine:	Transmission:
		from	to	from	to		
Chevrolet	Bolt EV	2017	2017			All	All

Involved Region or Country	North America and South Korea
Condition	In the trunk bag there is a velcro strap that needs to be installed to the tool stowage assembly during the PDI process to retain the electric charge cable when not in use.


Instructions

The following are instructions showing the assembly of the velcro strap in the trunk kit.

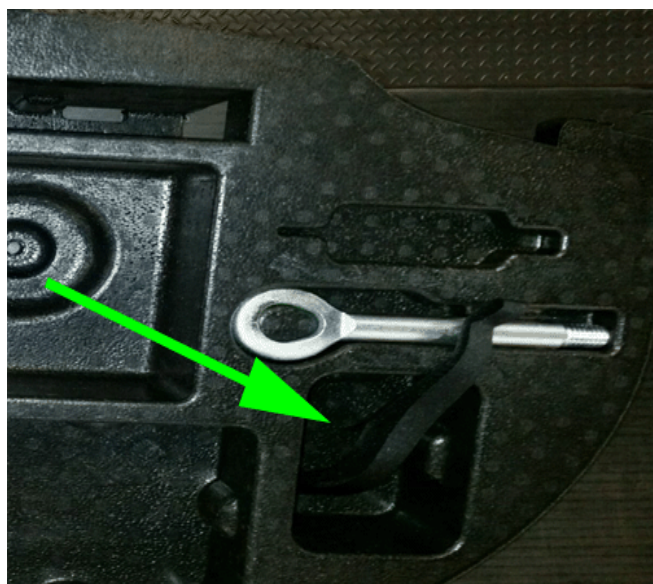


4584032

1. Remove the strap from the pocket.

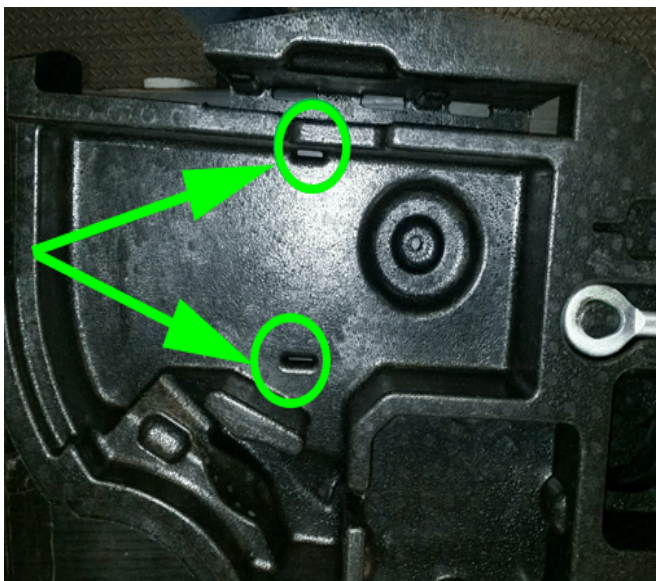

4584034

2. Insert the strap through the two holes illustrated above.

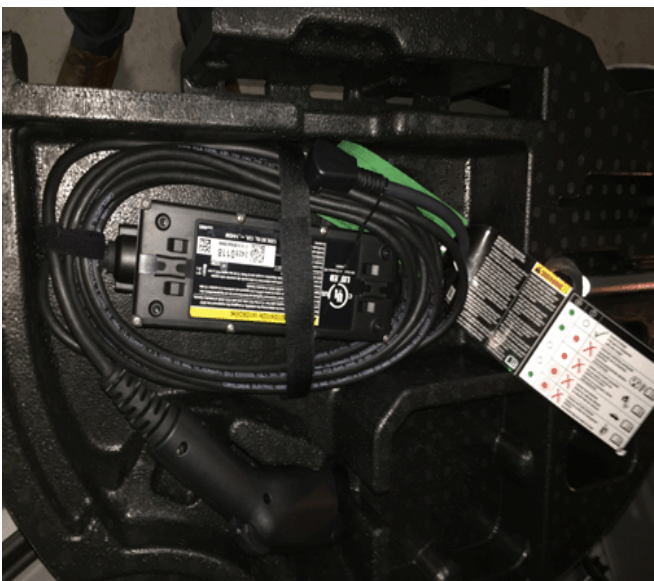

4584036

3. Once the velcro strap is installed, the electric charge cable can be placed in the middle of the straps location.

Version	1
Modified	