




# Quick tip

Version 1.5

October 25<sup>th</sup> 2016

Title: Passat TDI with without Kessy

Part number: 561065760A

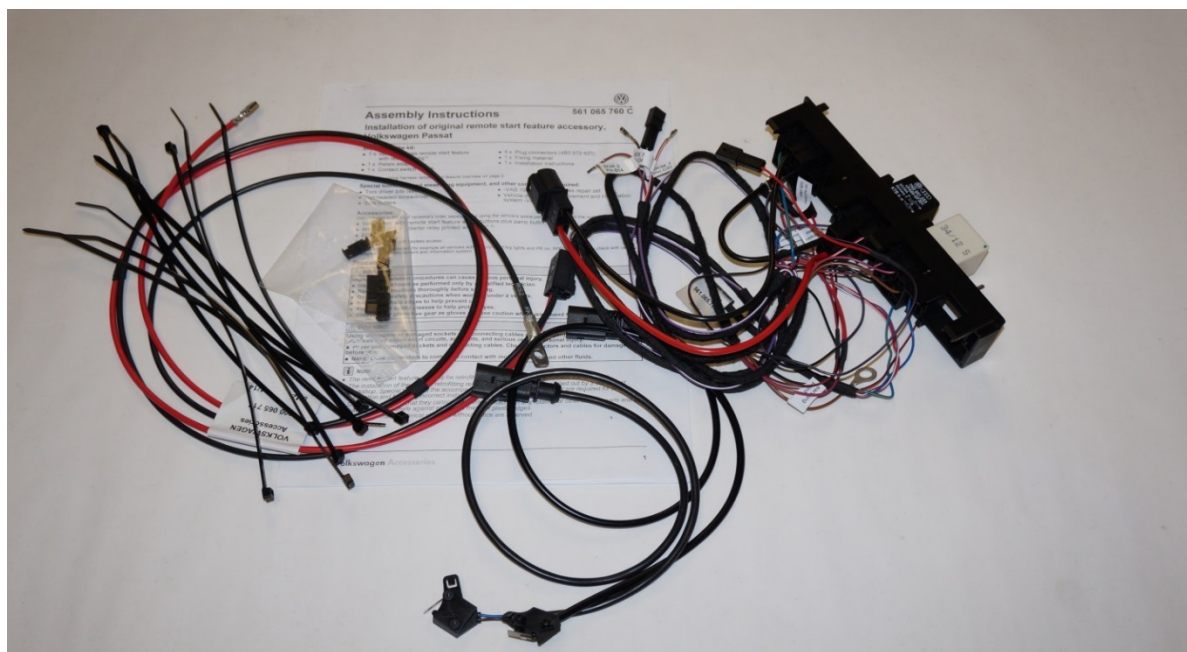


**Kit contents:** Relay panel with harness, connectors, micro switch's, cable ties, instructions.

**Additional parts required:** Key part number 561837202D INF. Vehicles without fog lights, **BCM MUST be replaced** refer to ETKA for part number



## J527 steering column control unit

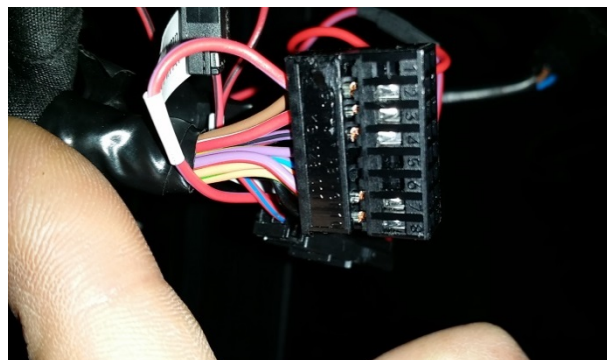

**Step 1:** Disconnect battery, Remove lower column cover, storage box and lower foot well trim panel.

**Step 2:** Insert black wire in position A14, remove wire from position A7 and insert into splice connector, Insert red/black wire into position A6, Remove the wire from position A1 and insert it into the splice connector, Insert the red/violet wire into position A1.

## Head lamp switch



**Step 3:** Remove 8mm nut and add the brown ground wire to the steering column ground location.

**Step 4:** Remove terminal out of location 4 and insert into location 1 of supplied connector. Insert the black/violet wire back into location 4.



## BCM




**Step 5:** Remove and insulate wires in locations C31, B29.



**Step 6:** Move the wire from location C14 to B13 and from location B28 to A3.



**Step 7:** Insert the red/blue wire into location B14, Insert the black wire into location C31, Insert the red/white wire into location C34, Remove the wire from location C30 and insert into the supplied connector position 1 and connect to the violet/white wire connector.

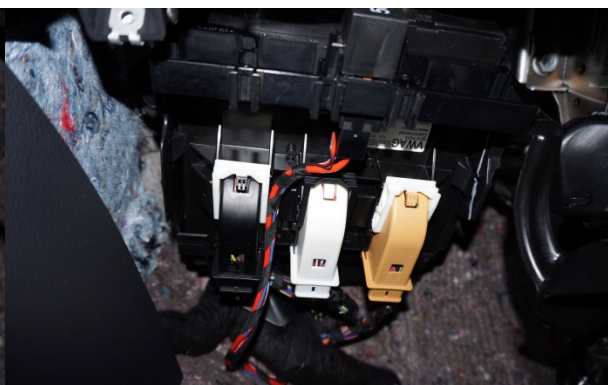


**Step 8:** Mount new relay panel to the BCM and insert the new start relay in the connector. Remove and discard original starter relay.





### BCM connector configuration.

### ECM

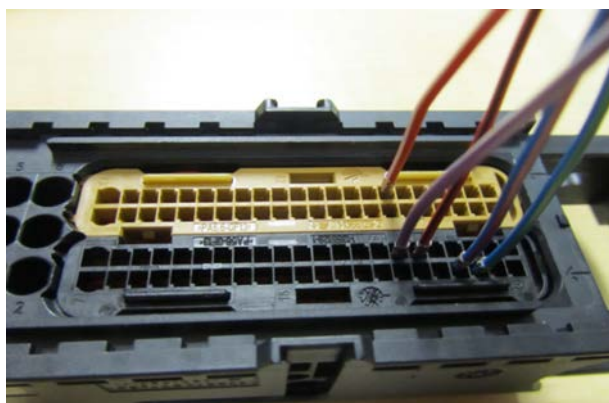

Black connector is connector A  
White connector is connector B  
Brown connector is connector C

**Step 9:** : Insert the Red/Black wire in location K45 (Remove and insulate wire already in this location if applicable), Insert the Red/White wire in location K88, Insert the Blue/Red wire in location K25, insert the Blue/Green wire in location K26, insert the Violet/White wire in location K44.

### Starter Relay

### Hood latch with micro switch



**Step 10:** Remove the red and black wire from starter relay connector and install in the new starter relay harness connector.

**Step 11:** Check to see if hood latch micro switch is already installed. If so skip this step, If not remove hood latch and install the micro switch into the hood latch.



**Step 12:** Re-install all connectors and trim panels removed during work. Re-connect battery.

**Step 14:** Perform functionality test on remote start system.

**Step 13:** Connect battery charger and scan tool. Perform GFF scan, Adapt all key(s), Adapt remotes. Under software version management select adapting software, perform conversion/retrofit (option 3) and use SVM code 3740D. . **Note** If BCM is replaced turn off factory mode, perform SVM then adapt remotes.