



WWW.SMITTYBILT.COM

SRC Cage Kit

Installation Instruction Supplement

Please read and understand this supplement before installing this product. This supplement would coincide with Step 16 in your instructions.

1. Before drilling any holes make sure front section is in the correct position. The front top cross bar should be as far forward as possible. It should be up against the weld of the O.E. cage corner (Fig A, B) This is to allow the top front mount hole on OE cage to be accessed in order to install top.



(Fig A)



(Fig B)

2. If re-installing door surrounds they will need to be cut down. (Fig C,D)



(Fig C)



(Fig D)

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220



WWW.SMITYBILT.COM

SRC Cage Kit

Installation Instruction Supplement

3. In order to get the front cross bar located in the proper location you may need to drill two holes or slot the current ones in the rear of your top front main plate. With the front cross bar in the correct position, loosely install the front and rear top main plates to see if the holes line up. (Fig E,F)



(Fig E)




(Fig F)

4. If they do not line up, slot the current holes in the front main plate back approx 10mm (Fig G) or mark and drill a new hole so that the holes in the front and rear main plates line up (Fig H)



(Fig G)

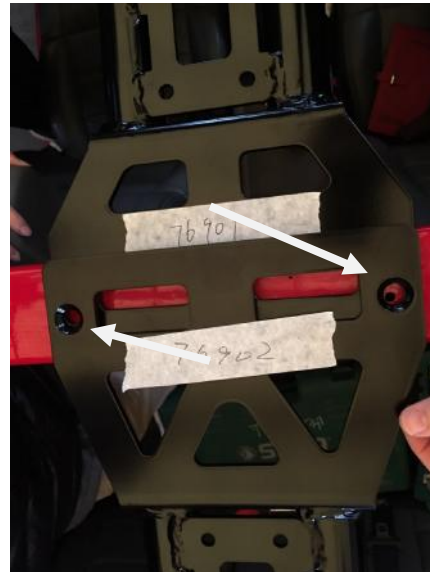

(Fig H)

5. Proceed with installing of cage kit with your main instruction sheet.

For Technical Support/Warranty Information please call 310-762-9944

Smittybilt, 400 West Artesia Blvd, Compton, CA 90220