

Date: March 9, 2016

SERVICE BULLETIN

Service Bulletin No.: 2016-0006

Product Models Affected:

Amerivan Dodge/Chrysler

Amerivan 10 Dodge/Chrysler

FORM Rev 2016-0216

Purpose:

Power Door Add - Program 4.00 requires 4 wiring changes in the black plug on the controller harness.

Tool(s) / Equipment Required:

N/A

Part(s) / Material Required:


N/A

Procedure:

Step 1: Unplug both the gray and the black plugs from the controller.

Step 2: Locate the red in cap or insert in the black plug. The red cap will need to be lift up **but** not removed from the plug. The blue arrow below indicates the taps that need to be **GENTLY** lifted while pulling up on the red cap.

Red Cap Closed:

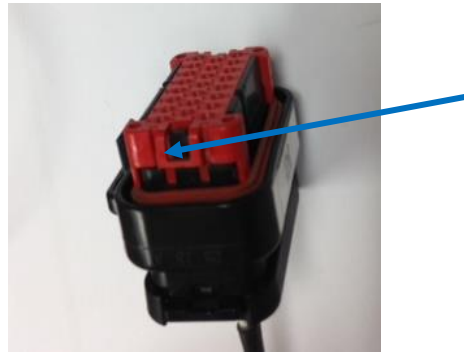

Red Cap Open:



Step 3: Reposition the following 4 wires in the black plug

- Pin 2, Yellow wire labeled “Door Ajar SW” needs moved to pin location 3
- Pin 3, White wire labeled “H-E Signal B” needs moved to pin location 2
- Pin 8, Yellow wire labeled “Stow SW” needs moved to pin location 9
- Pin 9, Yellow wire labeled “Handle SW” need moved to pin location 8

Step 4: Ensure pins are fully seated.

Step 5: Push the red cap back into the black plug.

Step 6: Gently pull on wires to ensure that connector is seated correctly.

Step 7: Plug in gray and black plugs into the controller.

Step 8: Function test power door add operation.

Contact Information:

David McMullen
EIDorado Mobility
Product Support Manager
800-955-9086 EXT 427