

2018 Odyssey Rear Entertainment System Display Inspection



TOOLS NEEDED - 10mm Socket, White Stick, Crows Foot, Gloves and Torque Wrench set at 10Nm. **Repair associate make sure no objects in back pockets during repair.**




Using white stick remove front and sides of display garnish first by pulling down.

Do not damage the headliner or garnish during removal. Ensure no dirt or smudges on Headliner or RES garnish from hands or tools during repair process.



Front and sides of display garnish removed.

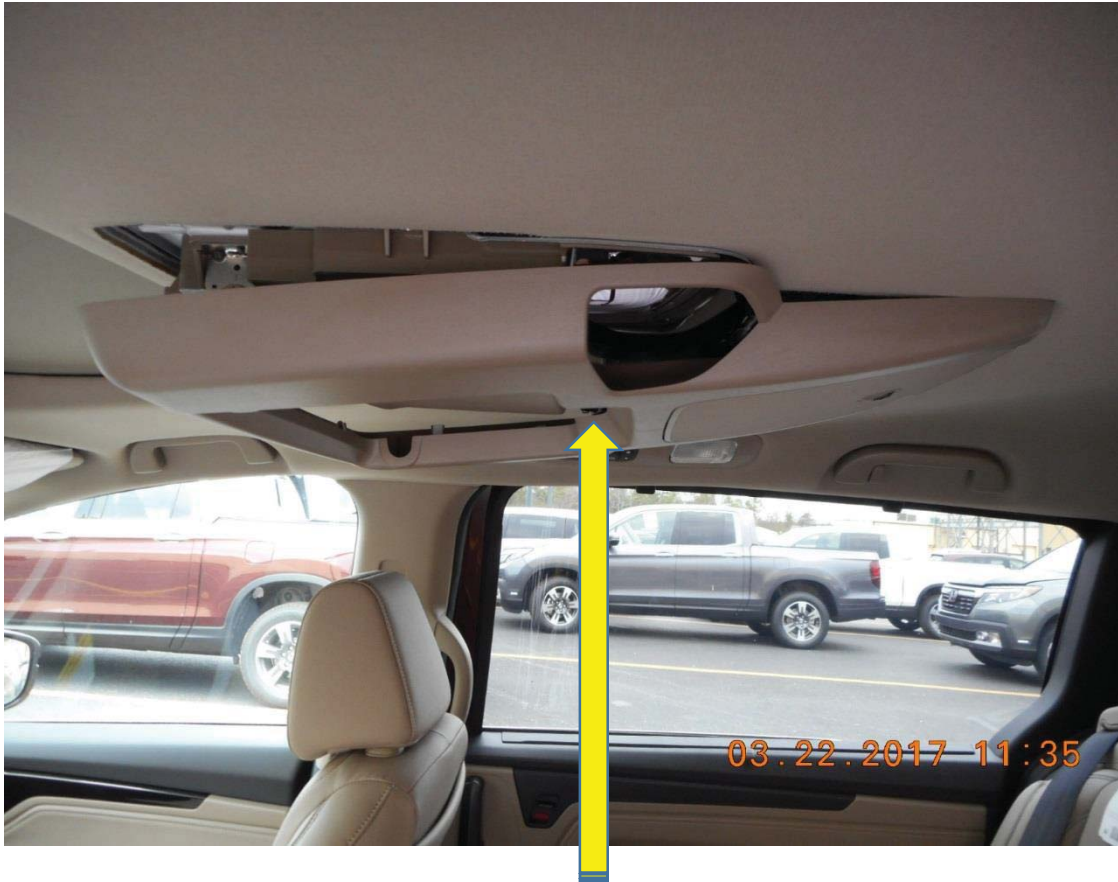

Grasp garnish here to pull down to remove rear clips.
Do not damage the headliner or garnish during removal.



Display garnish removed.




Remove two gray couplers




Two gray couplers removed



Using Crows Foot remove white harness clip

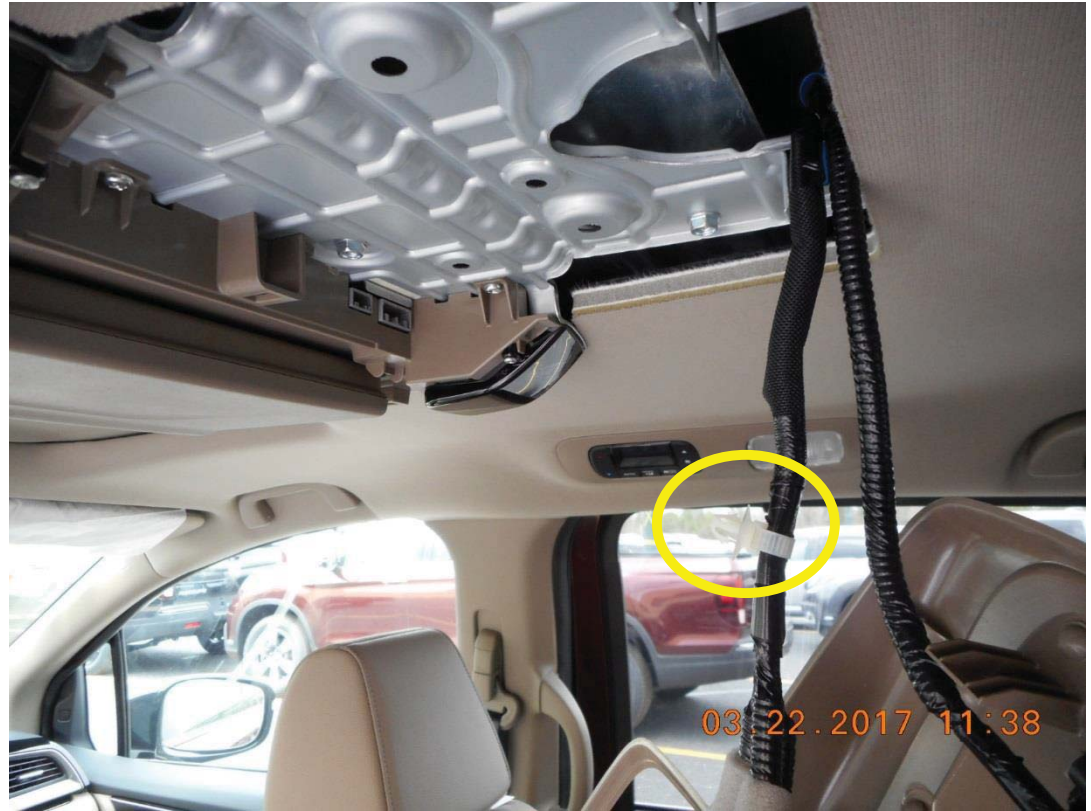

White harness clip removed

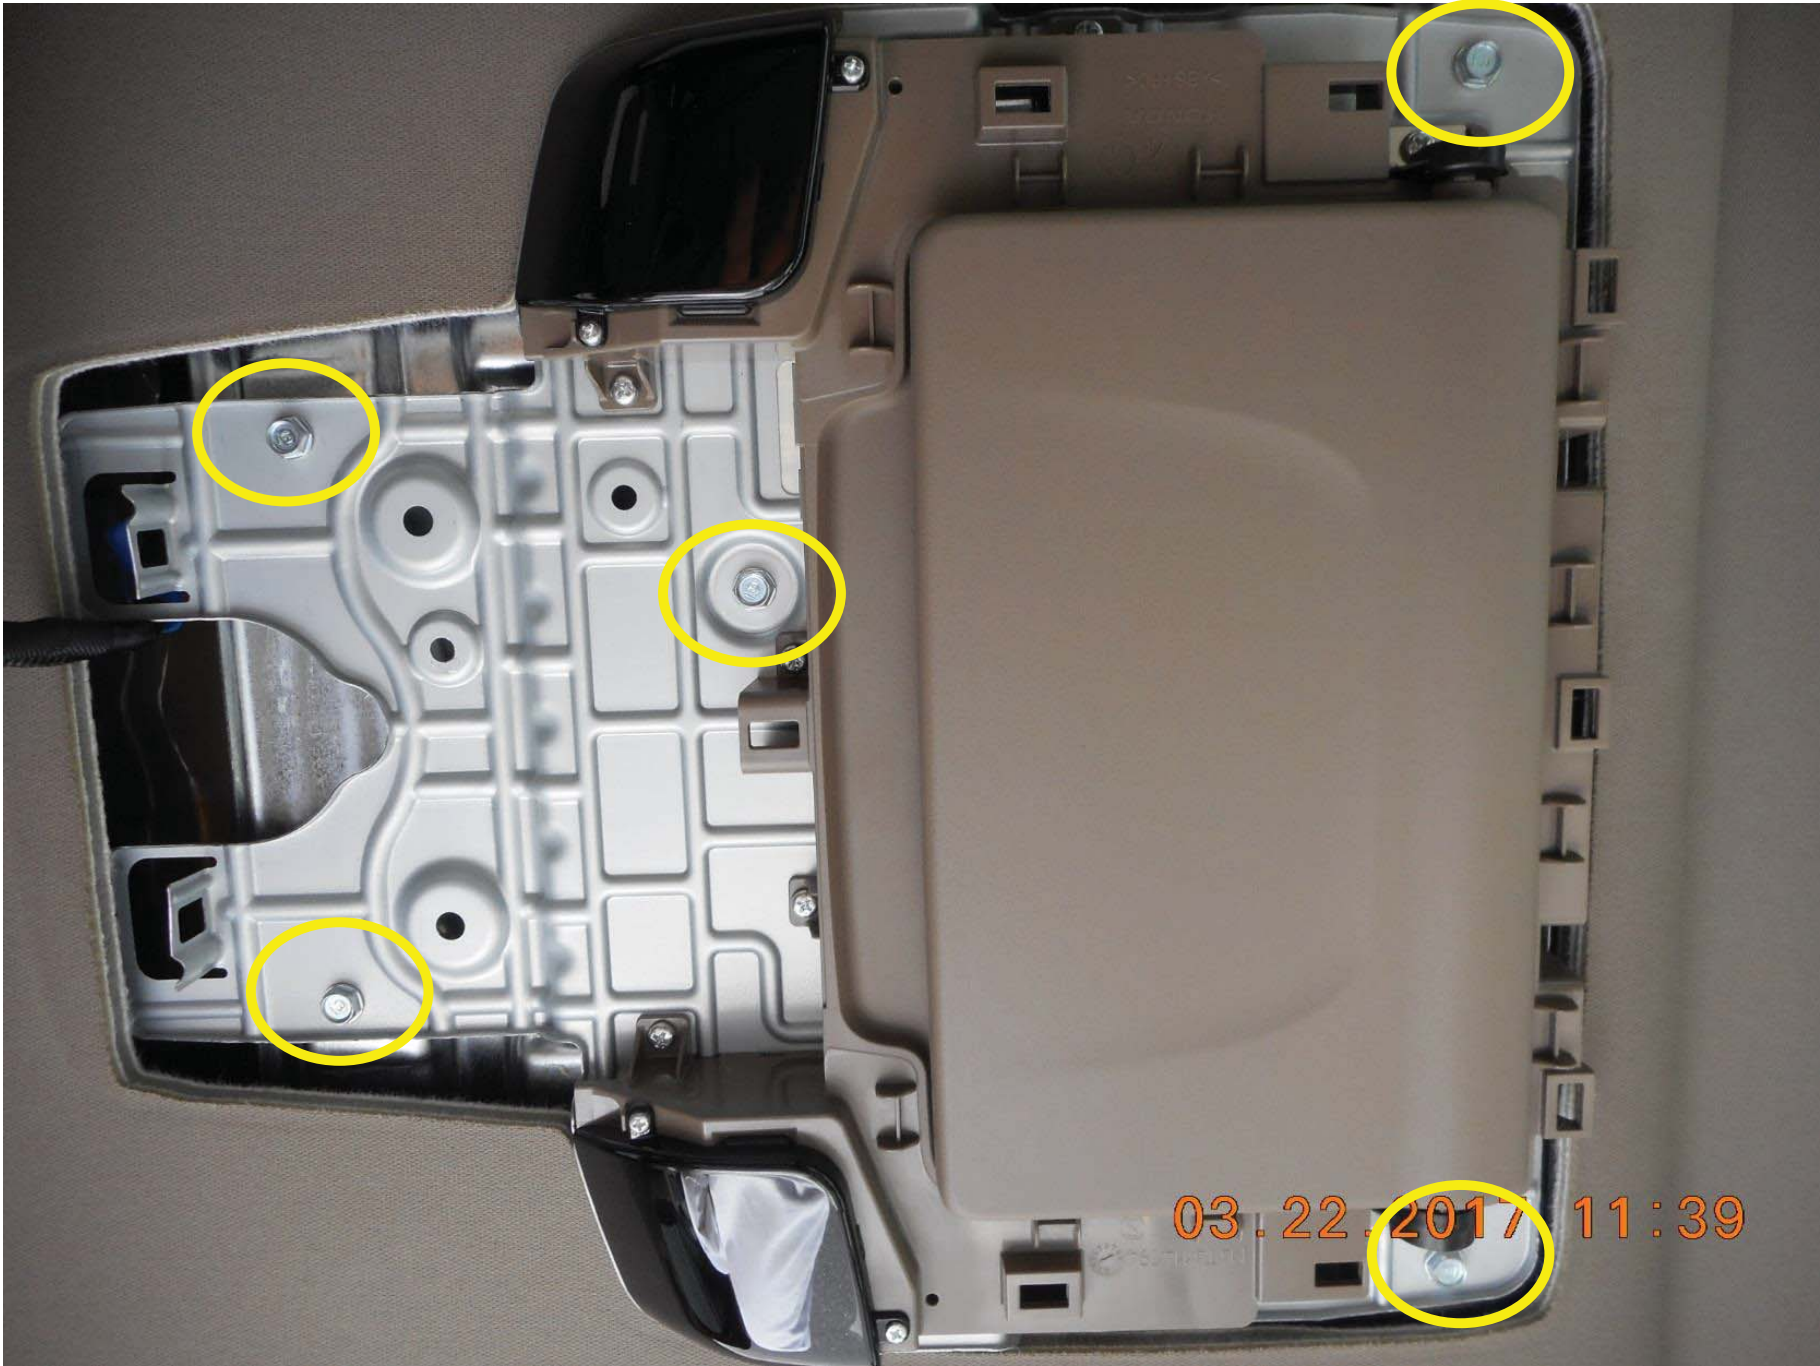

Locate 5 6x12 mm bolts



Using 10mm socket remove the five 6x12 mm bolts

Check serial number for all three conditions outlined below.
 N/G Gray List and N/G Beige List are attached below.

Double Click to Open Excel List

FOR GRAY RES SERIAL NUMBERS:

- 1) If the number 16105952 or higher it's good.
- 2) If the number is below 16105952 and is on the N/G Gray List attached it is bad.
- 3) If the number is below 16105952 and is not on the N/G Gray List it is good.




NH-836 (Gray) 978 NG										
16103009	16103047	16103078	16103115	16103155	16103273	16103302	16103332			
16103010	16103048	16103079	16103116	16103156	16103274	16103303	16103333			
16103011	16103049	16103081	16103117	16103173	16103275	16103304	16103334			
16103012	16103050	16103082	16103119	16103191	16103276	16103305	16103335			
16103013	16103084	16103083	16103118	16103190	16103277	16103307	16103336			
16103014	978 Grey NG						09308	16103337		
16103015	16103053	16103093	16103123	16103251	16103279	16103309	16103338			
16103016	16103054	16103094	16103124	16103253	16103280	16103310	16103339			
16103018	16103055	16103095	16103125	16103254	16103281	16103311	16103340			
16103020	16103056	16103096	16103126	16103255	16103282	16103312	16103341			
16103023	16103057	16103097	16103127	16103256	16103284	16103313	16103342			
16103025	16103058	16103098	16103128	16103257	16103285	16103314	16103343			
16103026	16103060	16103099	16103130	16103258	16103286	16103315	16103344			
YR-507L (Beige) 528 NG										
16103014	16103050	16103081	16103107	16103134	16103168	16103208	16103265			
16103015	16103051	16103082	16103108	16103135	16103169	16103211	16103266			
16103016	16103052	16103083	16103109	16103136	16103170	16103212	16103267			
16103017	16103053	16103084	16103110	16103137	16103171	16103213	16103268			
16103018	16103054	16103085	16103111	16103138	16103172	16103214	16103269			
16103020	16103056	16103087	16103113	16103141	16103174	16103216	16103272			
16103022	16103057	16103088	16103114	16103144	16103175	16103217	16103273			
16103023	16103058	16103089	16103115	16103152	16103176	16103218	16103273			
16103024	16103060	16103090	16103116	16103153	16103177	16103219	16103274			
16103025	16103061	16103091	16103117	16103154	16103178	16103220	16103275			
16103026	16103062	16103092	16103118	16103155	16103179	16103221	16103276			
16103029	16103063	16103093	16103119	16103156	16103180	16103223	16103277			
16103032	16103064	16103094	16103120	16103157	16103181	16103224	16103278			

FOR BEIGE RES SERIAL NUMBERS:

- 1) If the number 16104094 or higher it's good.
- 2) If the number is below 16104094 and is on the N/G Beige List attached it is bad.
- 3) If the number is below 16104094 and is not on the N/G Beige List it is good.



Use the Excel File to check the serial number below the values listed on the previous page.
If you have any questions, please contact Maria Higuera @ (310) 783-3523

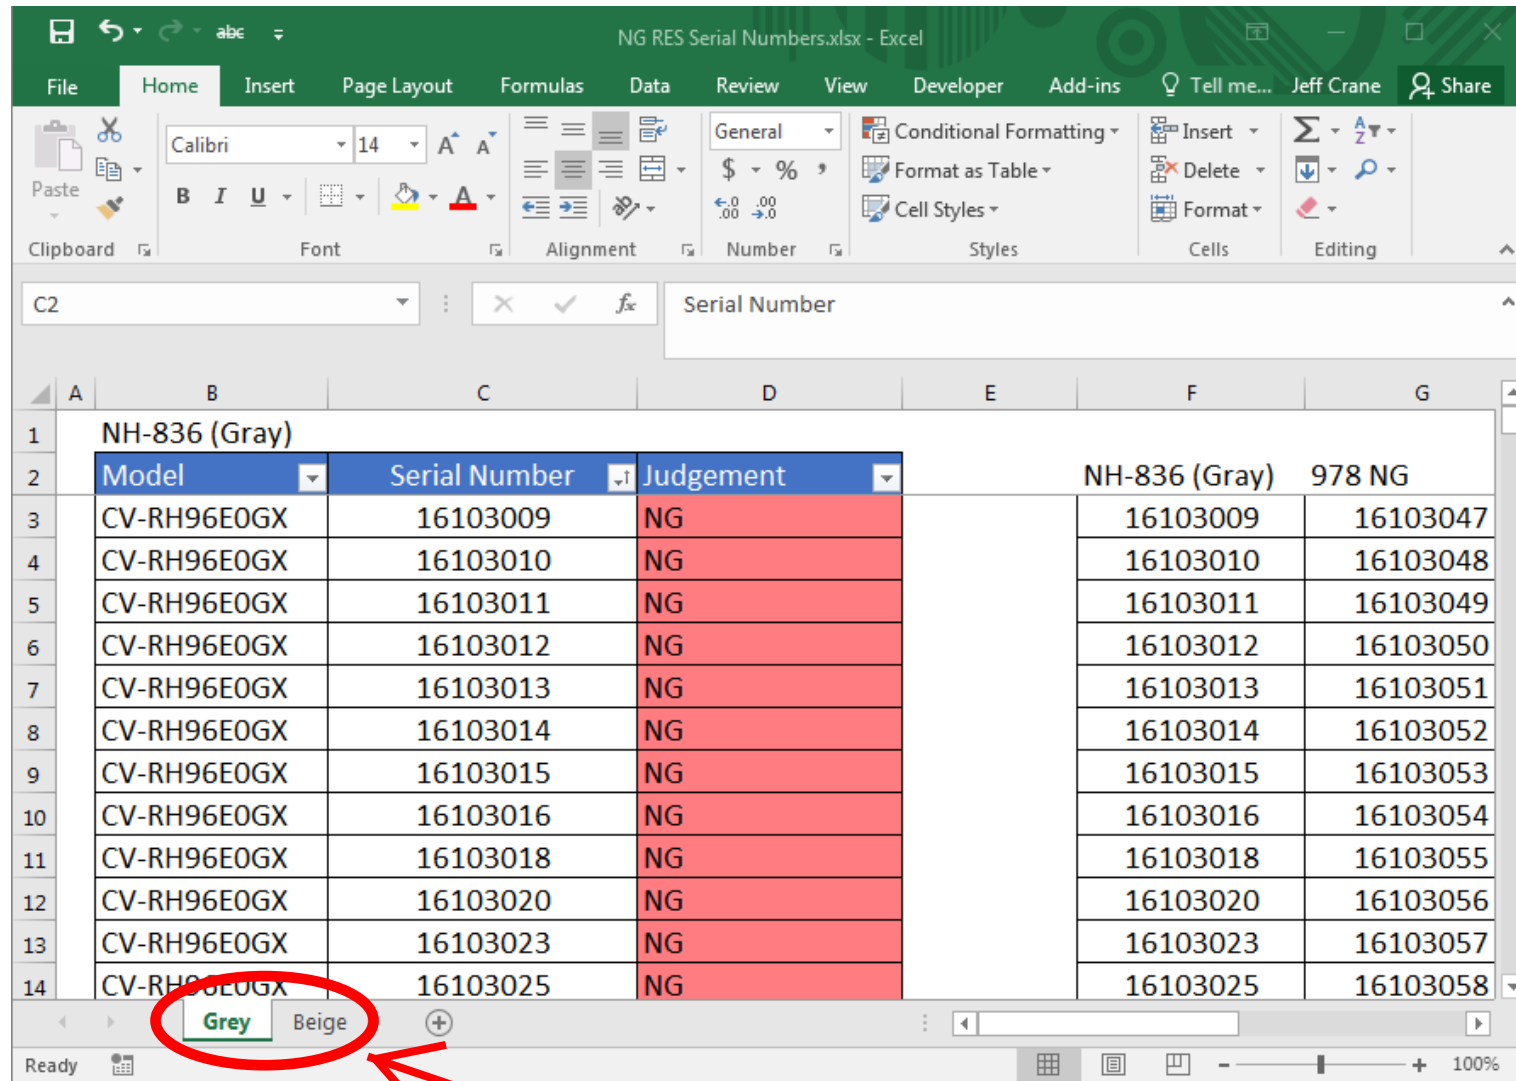

There are two tabs in the spreadsheet: Grey and Beige
Click on the appropriate color and search column "C" for the serial number



Confirm new RES Display is correct color for vehicle. Should be the same color as Headliner.



Using 10mm socket reinstall the five 6x12 mm bolts of the new RES Display



Using torque wrench set at 10Nm with 10mm socket confirm the torque of the five 6x12 mm bolts



Reinstall the two gray couplers



Confirm gray couplers installation by push-pull-push method.




Confirm speaker coupler, green grommets, black camera clip and black camera coupler are secure on display garnish.



Reinstall white harness clip. **Note**
clip hole is between two larger
mounting holes.



Line up front and side tabs push display garnish into place. **Do not damage headliner or display garnish during reinstall.**

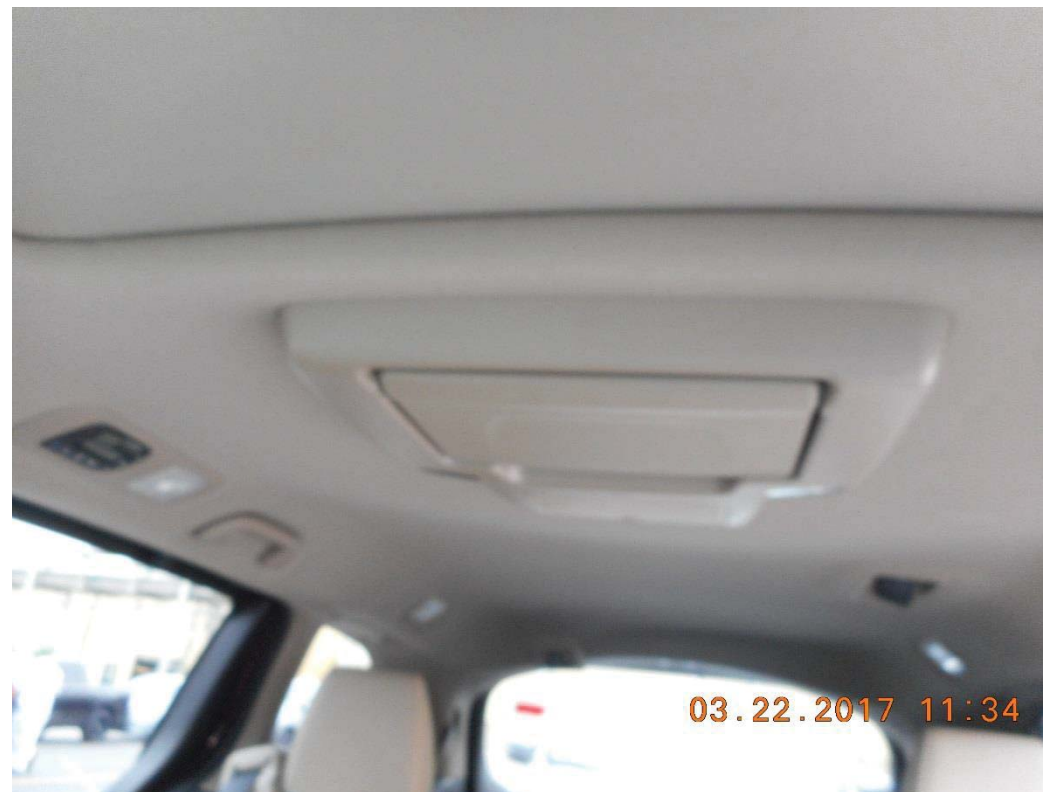

Confirm no gaps around edge between RES display garnish and Headliner. **Ensure Headliner and RES garnish area are clean no dirt no smudges.**





Open and close display screen ensure no rubbing or noise when functioning.

**Turn on Rear Display from Front Control Touch Screen Display
to ensure operation.**




Directions for turning on the RES

Go to IG2




Press Rear Entertainment App





Click ok for disclaimer



Turn Rear power on

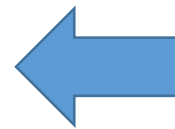

DA will show Rear is on

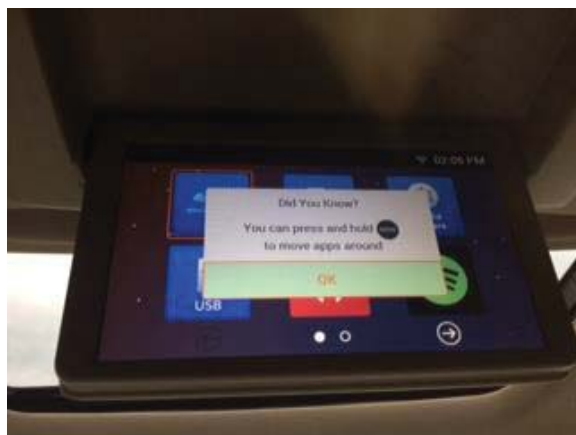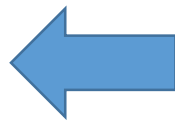

Confirm Rear Display is on and no distortion

Steps 19 and 20 are
not required for
Dealer Repairs
END