





Remove the shower door.




Remove the vertical Corian by prying it off or breaking it into pieces. This is just the outside Corian and not part of the shower wall.

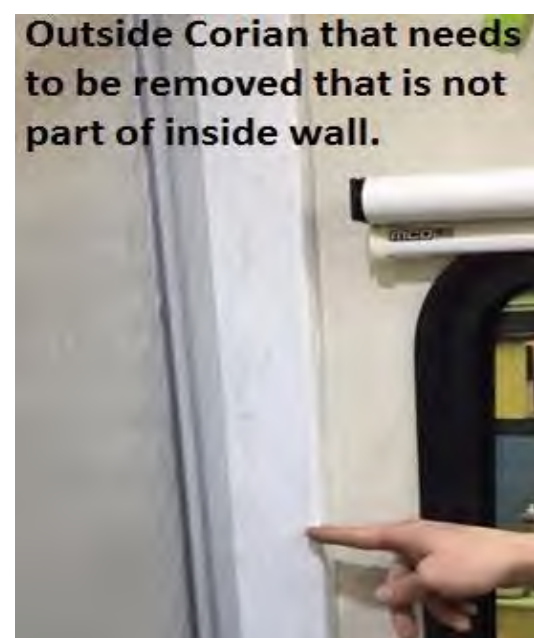


Outside Corian that needs to be removed that is not part of inside wall.

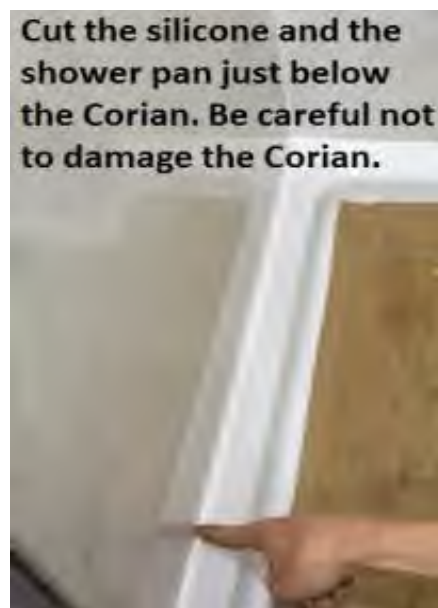

Cut the silicone and the shower pan just below the Corian. Be careful not to damage the Corian.

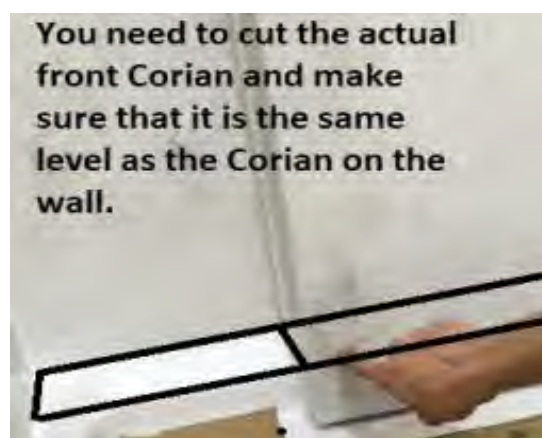

You need to cut the actual front Corian and make sure that it is the same level as the Corian on the wall.

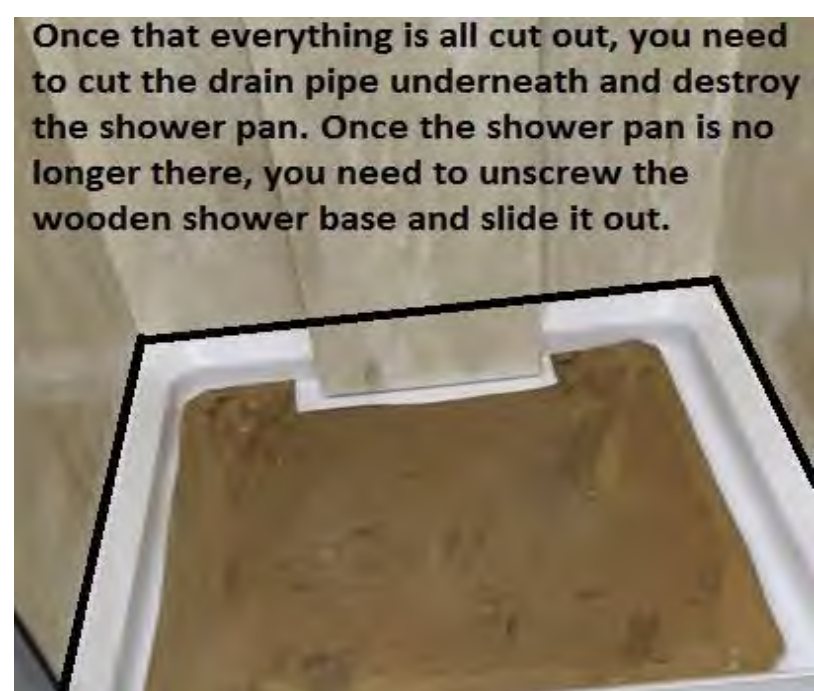

Once that everything is all cut out, you need to cut the drain pipe underneath and destroy the shower pan. Once the shower pan is no longer there, you need to unscrew the wooden shower base and slide it out.