

# Trailer Towing Quick Tip Atlas, Touareg, & Tiguan





Version 1.0 06/1/17

#### **Accessories - Atlas Towing**

#### With PR1D6 (Factory) With PR1M5 (Accessory) DIA & MDO (CW38) Max trailer weight: 5000lbs Trailer w/ brake Max trailer weight: 2000lbs Trailer w/ brake Max trailer weight: 1650lbs Trailer w/o brake Max trailer weight: 1650lbs Trailer w/o brake Max tongue weight: 500lb Max tongue weight: 220lbs 2" Receiver 2" Receiver Dealer accessories needed to be tow ready: <u>Dealer accessories needed to be tow ready:</u> Trailer Hitch eKit with 7-Way Adapter 2" Ball & Ball Mount P/N 3CN092730A (4way connector) To enable eBraking: Dealer assembled eBrake Controller 2" Ball & Ball Vas Coding Activation connector harness (open market) Mount Document

P/N 3CN092730



Version 1.0 06/1/17

#### Accessories - Atlas Towing (Important Locations)

#### With PR1D6 (Factory)

Blue (1) = Factory installed harness (part of body harness)

Yellow (2) = Trailer brake controller connection (under dead pedal on driver floor)

Green (3) = Trailer towing electrics module

Purple (4) = 7 pin trailer harness connector

#### With PR1M5 (Accessory) DIA & MDO (CW38)


Blue (1) = Factory installed harness (part of body harness)

Green (2) = Trailer electrics module

Red = (3) = eKit harness

Purple (4) = 4 way trailer harness connector

Included In 1 kit

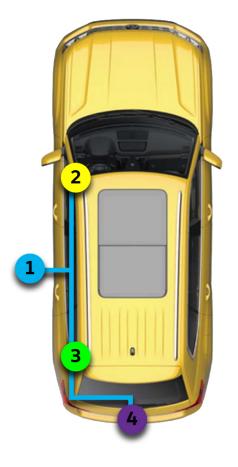





Version 1.0 06/1/17

#### Accessories - Touareg Towing MY 2011-2017

| With PR1D6 (Factory)  | With PR1DO (Accessory) DIA & MDO   |
|---|--|
| Max trailer weight: 7700lbs Trailer w/ brake Max trailer weight: 1650lbs Trailer w/o brake Max tongue weight: 617lb 2" Receiver | Max trailer weight: 7700lbs Trailer w/ brake Max trailer weight: 1650lbs Trailer w/o brake Max tongue weight: 617lbs 2" Receiver |
| Dealer accessories needed to be tow ready:  7-Way Adapter  2" Ball & Ball Mount   | Dealer accessories needed to be tow ready:  Trailer Hitch  eKit with   |
| To enable eBraking:  Dealer assembled connector harness eBrake Controller (open market)   | (7way connector)  2" Ball & Ball Mount  Vas Coding   |



Version 1.0 06/1/17

#### Accessories – Touareg Towing (Important Locations) MY 2011-2017

#### With PR1D6 (Factory)

Blue (1) = Factory installed harness (part of body harness)

Yellow (2) = Trailer brake controller connection (Behind left side fuse panel on dash)

Green (3) = Trailer towing electrics module

Purple (4) = 7 pin trailer harness connector

#### With PR1DO (Accessory) DIA & MDO (CW38)

Blue (1) = Factory installed harness (part of body harness)

Green (2) = Trailer electrics module

Red = (3) = eKit harness

Purple (4) = 7 way trailer harness connector

Included In 1 kit







Version 1.0 06/1/17

Accessories - Tiguan limited Towing MY 2008+





Version 1.0 06/1/17

Title: Accessories - Tiguan limited Towing (Important Locations) MY 2008+

#### With PR1M5 (Accessory) DIA & MDO (CW38)

Blue (1) = Factory installed harness (Part of body harness)

Yellow (2) = Can bus splice connector

Green = (3) = Trailer electrics module

Purple (4) = 4 way trailer harness connector

Included In 1 kit

