



How to Install a Trailer Brake Controller Quick Tip

Touareg and Atlas



Volkswagen



Volkswagen

Quick tip

Version 1.0

06/1/17

Atlas Trailer Brake Controller Harness. Vehicles with PR Code 1D6 only

Blue = Factory installed harness and connector (part of body harness)

Yellow = Dealer made harness and aftermarket trailer brake controller (under dead pedal on driver floor)

Green = Trailer electrics module

Dark Blue = 7 pin trailer harness connector



Location 1) Under dead pedal on driver floor.




Location 2) behind lower A-pillar trim



Image shown is for representation purposes only.

Actual product may be different on open market.

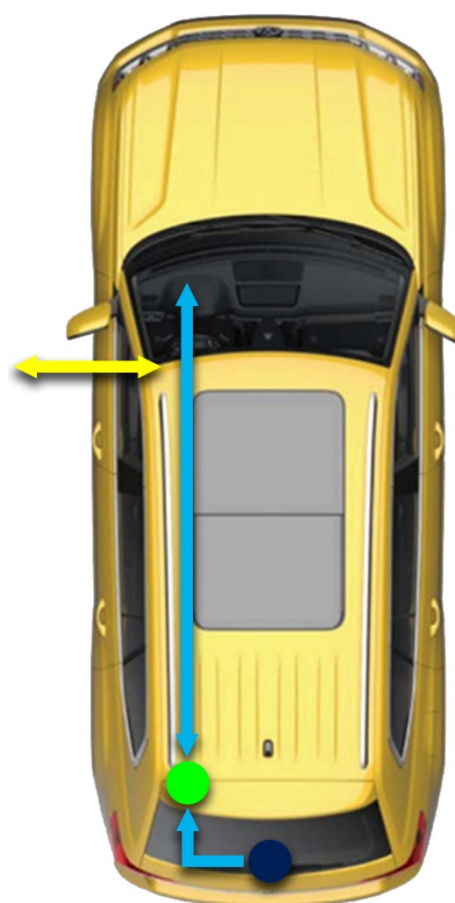



Volkswagen

Quick tip

Version 1.0

06/1/17

Touareg Trailer Brake Controller and Harness

Blue = Factory installed harness and connector (part of body harness)

Yellow = Dealer made harness and aftermarket trailer brake controller (behind SC fuse panel in main body harness)

Green = Trailer electrics module

Dark Blue = 7 pin trailer harness connector



4 pin connector is wrapped in foam near the vehicle electrics module.



Image shown is for representation purposes only.

Actual product may be different on open market.



Volkswagen

Quick tip

Version 1.0

06/1/17

Dealer created Adapter Harness Required for trailer brake controller.



Connector Part Number
1J0972782





Terminal Part Number
000979228E X2



Splice Connector Part Number
000979943 X4

1. The blue wire (pin 4) is the trailer brake output from the brake controller back to the 7 pin connector.
2. The red/white wire (pin 2) is power for the brake controller.
3. The brown wire (pin 1) is ground for the brake controller.
4. The red/black (pin 3) is the brake light switch signal to the brake controller.

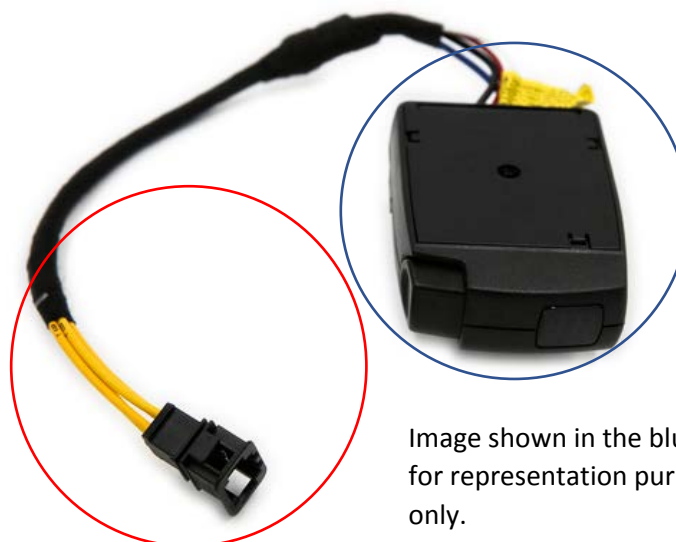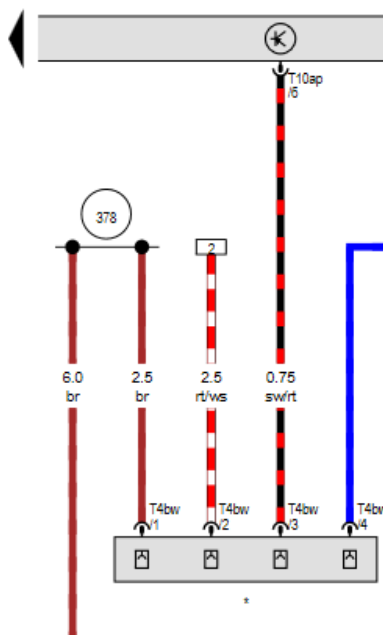

The area circled in red is the dealer assembled harness.

Image shown in the blue is for representation purposes only.

Actual product may be different on open market.