

PREVOST

Instruction Sheet

IS-14136A CO-21

ADDITION OF 2 ALUMINUM SUN VISORS TO FRONT WINDSHIELD

(Change Order 21, Production Cut In: Bus #36, DOB2525)

REVISION: A	THIS INSTRUCTION SHEET SUPERSEDES PREVIOUS VERSION.
23-01-2017	Material: Item 406 removed. Item 405 (5001839) qty was 2, is 4.

MATERIAL

Kit #409459


Lv	Item	Component no.	Object description	Qty (CUn)
1	0000	D400279	TOILE PARE-SOLEIL AVANT INST.	1.000
1	0400	409457	ALUMINIUM SHIELD LEFT DRIVER	1.000
1	0401	409458	ALUMINIUM SHIELD CENTER DRIVER	1.000
1	0402	500914	WSH LO SPT N500 .193X.334X.047	4.000
1	0403	500855	WSH FL N500 .188X.438X.049	4.000
1	0404	502820	WSH FL RUB BK .187X1.0X.125	4.000
1	0405	5001839	SCR S-DRILLING TRUSS PH BK #8X1"	4.000

PROCEDURE



DANGER

Park vehicle safely, apply parking brake, stop engine and set battery master switch(es) to the OFF position prior to working on the vehicle.

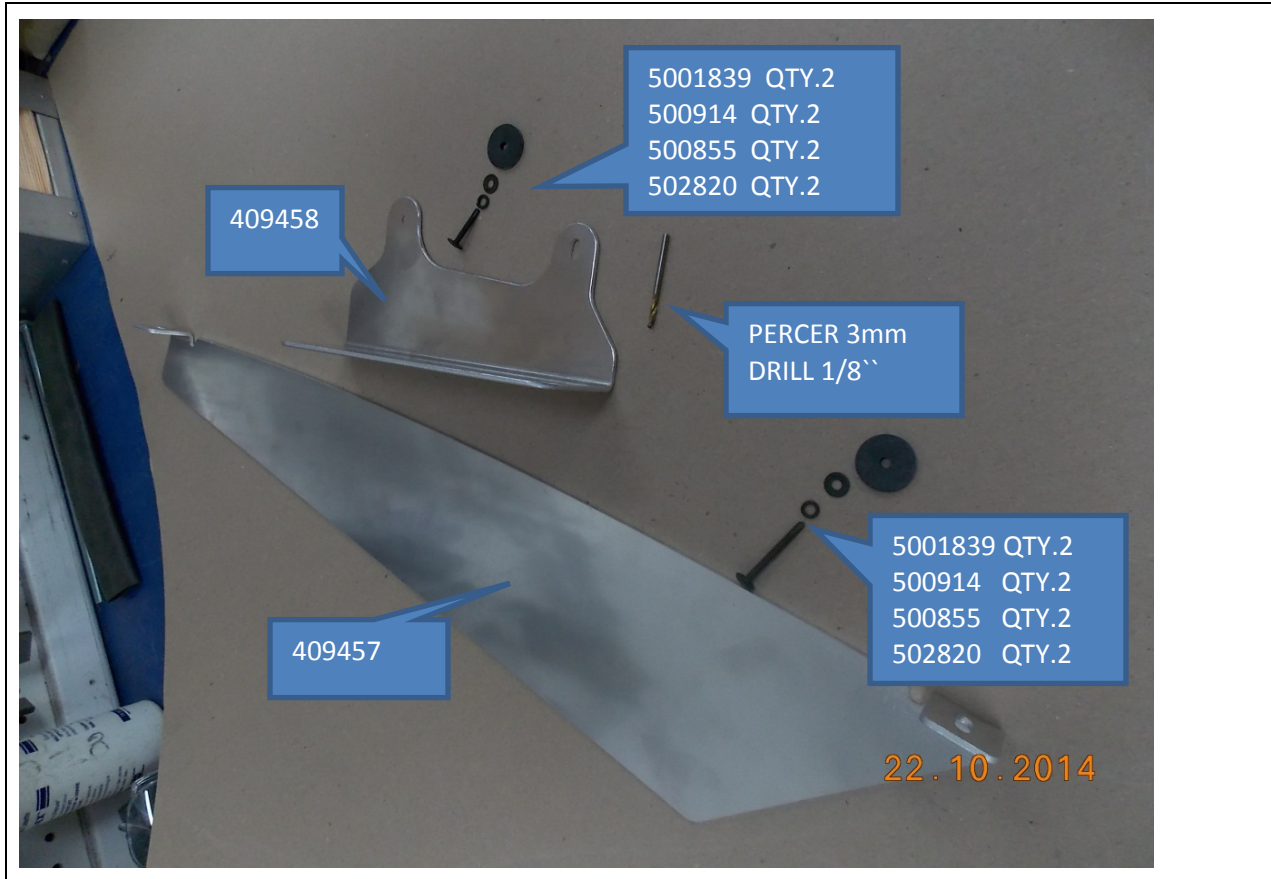



PARTS / WASTE DISPOSAL

Discard waste according to applicable environmental regulations (Municipal/State[Prov.]/ Federal)