



Mitsubishi Motors North America, Inc.

6400 Katella Avenue
Cypress, CA 90630
Telephone: 714-372-6000
www.mitsubishicars.com

Date: August 20, 2018

**To: All California Mitsubishi Dealer Principals
All California Mitsubishi Dealership Service Managers
All California Mitsubishi Dealership Parts Managers**

Subject: State of California Proposition 65 Warning Label

The new California Proposition 65 safe harbor language requires that by Aug 30, 2018, warnings for exposures to chemicals that cause cancer and birth defects or other reproductive harm that occur during the operation, service, and maintenance of a passenger vehicle must be provided.

One of these notices is:

- a warning label attached to the driver's door window

MMNA will be shipping an initial supply of warning labels to all California dealers beginning the week of August 20th. Additional labels can be ordered through normal parts channels – part number PROP65WL (roll of 50 labels).

Beginning August 30, 2018, dealers must install this label during Pre- Delivery Inspection (PDI). Please see attached instructions for proper placement of the label. Failure to install the label at PDI may result in partial or full chargeback of the PDI claim.

Labels do NOT need to be applied on vehicles that have already been PDI'd.

Dealers will be automatically reimbursed dealer net plus applicable mark-up for the label cost – see Warranty Bulletin 2019-002 for additional details.

To ensure compliance with the requirements of California Proposition 65, it critical that these warning labels are properly installed during PDI.

Please contact your District Parts and Service Manager with any questions.

Sincerely,


Mitsubishi Motors North America, Inc.




DEALER INSTALLATION INSTRUCTIONS

Product Name: Prop 65 Label
Part Number: PROP65WL

APPLICATION

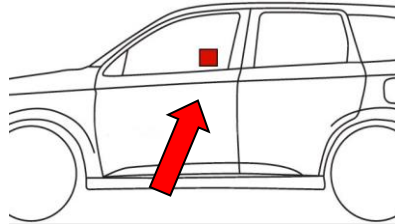

TOOLS REQUIRED

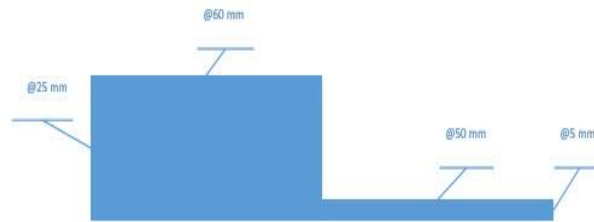

TEMPLATE

1. Prepare (paper) template (see page 3)
Position template on the outside of the driver's side window with the bottom along the rubber strip and the right-hand edge at the B-pillar corner

(Hold in place with tape if needed)



2. Clean the label application area on the inside of the driver's side window (if needed)



3. Apply label as shown. Label should be parallel to the bottom of the window (@5mm above the rubber) and not cover any part of the DOT information etched into the glass

Gently push out any trapped air bubbles
- note the label can be removed and re-applied if necessary



4. END



TEMPLATE (PROP 65 LABEL)

