

L62X-  
A.07.18

To: Official After Sales Network  
Subject: BoSe wire rework  
Date: 16 November 2018  
Pages: 10



**Campaign code.**  
L62X-A.07.18

**Campaign description.**  
BoSe wire rework

**Model.**  
Huracàn

**Model year.**  
From My '15 to My '18

**Special or Limited Versions.**  
Performante and STD with comfort seat

**Markets.**  
For Huracàn STD with comfort seat: Only Australia and NAR

For Huracàn Performante with comfort seats: All markets

**VIN identification**  
From FLA00526 to JLA09046

**Warning:** before starting with the repair, log to the Warranty portal and check through VIN Info:

- The vehicle is effectively involved by these bulletin instructions; some cars may not be included even when they are in the VIN range.
- The procedure is identified by a letter (e.g. A, B or C...etc. whose differences are explained below in this bulletin), taking care to order and use the parts corresponding to the assigned procedure.

**Example**

The screenshot shows a table with columns: VIN, Model, Warranty Start Date, and Warranty End Date. Below it, there are sections for 'Total days of workshop repairs: 0', 'Prior activated CPO list', and 'Available Campaigns'. The 'Available Campaigns' table has columns: Campaign Code, Campaign Type, Procedures, Campaign Description, Campaign Starting Date, PDF, and AV. The 'Procedures' column is circled in red.



**Note**  
Procedure A will be available only when the instructions require to carry out a preliminary control to determine whether or not a vehicle needs to be updated.

**Information to the field**

As a result of continuous product monitoring, Automobili Lamborghini Spa found that the Body Sense cable under the passenger's seat gets pinched in some cases and causes a cable wear due to lack of protection and bulging edges.

**Operations:**

The instructions herein provided include 3 operations:

- Operation A: only for cars in the presence of airbag warning light on
- Operation B: Coupé
- Operation C: Spyder

**Field solution**

Rework the BoSe wiring following the instructions specific for Coupè and Spyder. **Operation A is only for cars in the presence of airbag warning light on.**

**Spare parts.**

Order the following part number which are connected to the operation required:

- Operation B: Coupé version
- Operation C: Spyder version

P/N	Description	Q
4T0971381	Body Sense cable repair kit: 4T0971381  Kit content: - Twist tube 520 mm (1x) - Coroplast 800 (1x) - Strip (6x)	1

**Replaced parts management.**

Store properly and tagged the parts replaced with bar code form for their identification during Area Manager visits.

**Labour time**

- Operation A – 0.10 hours
- Operation B – 0.95 hours
- Operation C – 0.97 hours

**Substituted former Bulletins.**

None.

L62X-  
A.07.18


To: **Official After Sales Network**  
Subject: **BoSe wire rework**  
Date: **16 November 2018**  
Pages: **10**



**Warranty Claim instructions**

To claim the reimbursement log into the warranty system management on the Lamborghini Portal and consults the manual “W.Claim “ available on the portal for the download .

Select the desired campaign and go on with the claim insertion, read carefully the windows message content and choose the option button corresponding to the operation performed .

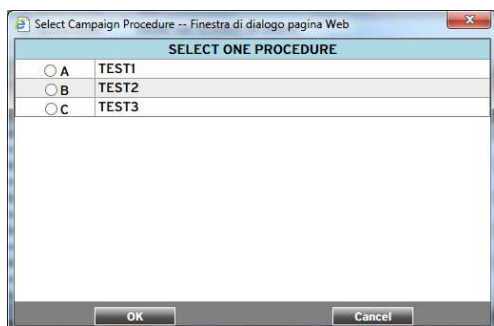

On the base of the chosen option the reimbursement will be:

- **OPTION A – All versions**  
manpower: 0.10 hours  
spare parts: N/A
  
- OPTION B – Coupé version*  
manpower: 0.95 hours  
spare parts: 4T0971381
  
- **OPTION C – Spyder version**  
manpower: 0.97 hours  
spare parts: 4T0971381



**ATTENTION!**

Attach all documents produced during the vehicle visit that show evidence of the work performed such as repair order, software protocols or acquisitions...etc.; the lack of one or more of those, may deny the reimbursement.

Remember to fill all data in the section “Service and Recall Campaign” in the Warranty booklet of the vehicle as shown below.

**Necessary tools/material.**

P/N	Description	Q
/	/	/

Rev.01

The information and procedures published below are strictly confidential and intended exclusively for authorized operators and individuals. All copyrights are the property of Automobili Lamborghini S.p.A based on copyright law. The company reserves the right to make updates and modifications. The reprinting, reproduction, forwarding to unauthorized people and/or to third parties and partial or entire translation thereof are prohibited without written authorization from Automobili Lamborghini S.p.A.

2/10  
doc. nr: L/V6\_M06 Rev.[04]




**Instructions A : All versions**


***In the presence of Airbag warning light ON:*** contact technical support for further guidance through a warranty request.

**Instructions B : Coupé**

1. Unhook pattern and open it.

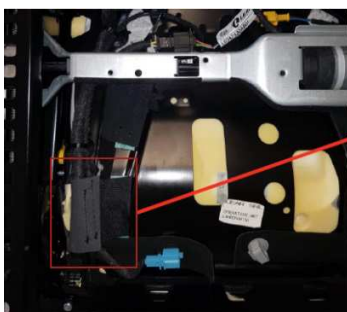


2. Use clamp to cut tie strip #1.

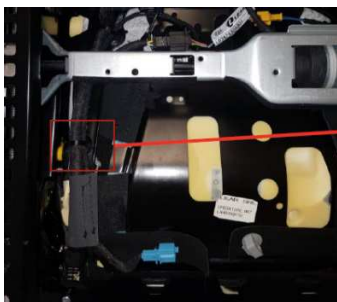

**Warning: Pay attention not to damage wiring harness.**

3. Use clamp to cut tie strip #2.

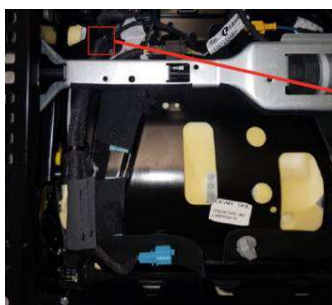

**Warning: Pay attention not to damage wiring harness.**

4. Use torque wrench/screwdriver to remove bolt #1.

5. Remove bolt #2.



6. Remove ECU.




7. Use fork to unplug the Body sense connector and extend wiring.






8. Use clamp to cut pin bulging edges.

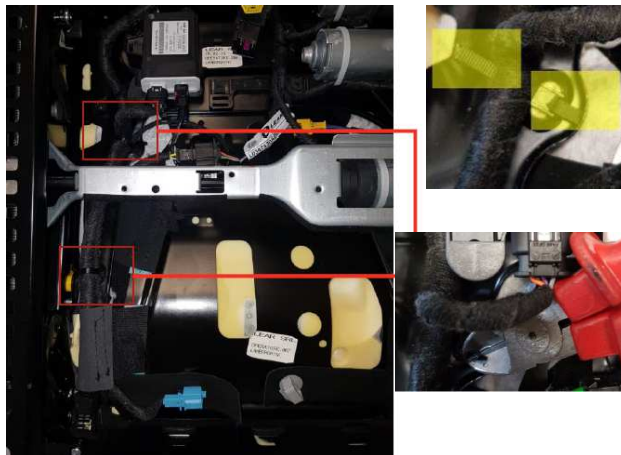


**Warning:** Pay attention not to damage wiring harness.


9. Wrap Body sense wiring with TwistTube and push tube according to image 2 until reach wire extremity as shown in figure (A).

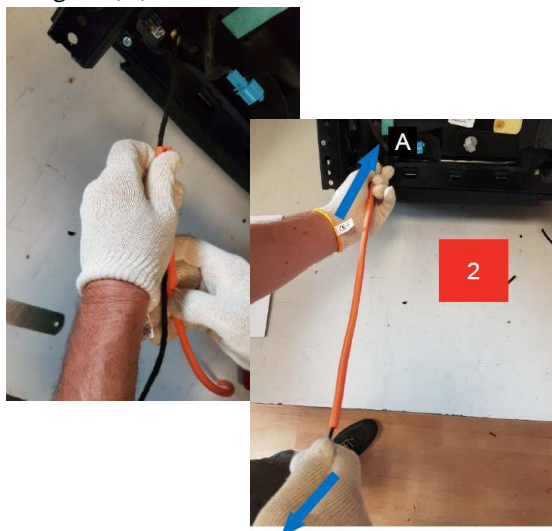

10. Wrap 80 mm Coroplast 800 to fix TwistTube on connector side.

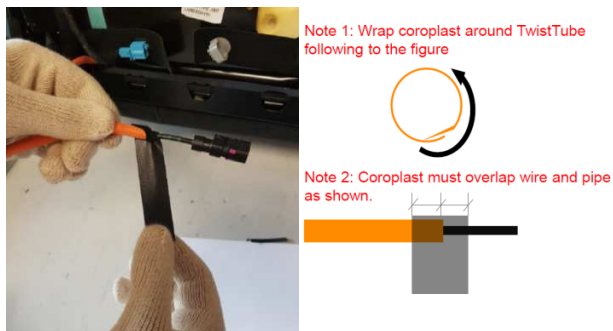


11. Add 2 protection points spaced 200 mm.

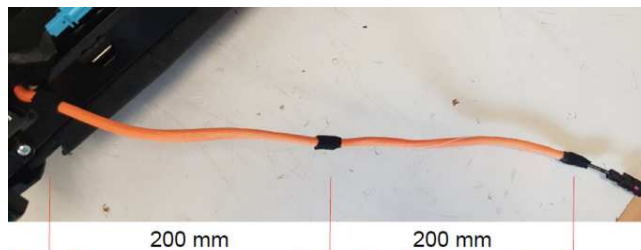

Note: Wrap coroplast around TwistTube following to the figure



12. Remove wire connector.

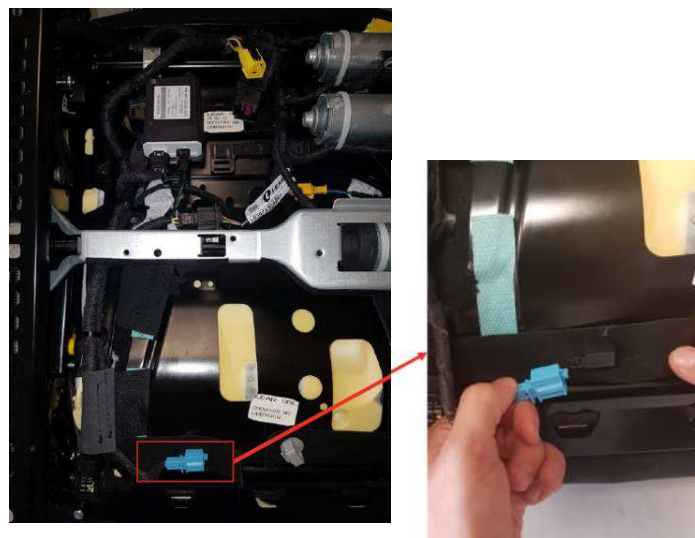

Note: Pay attention not to remove the clip.



13. Detach pattern.



Note: Pay attention not to remove the clip.



14. Add 80 mm Coroplast 800 to protect metal pan portion shown in figure 2.

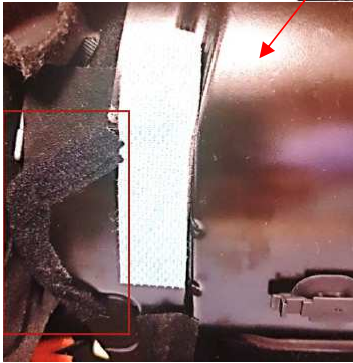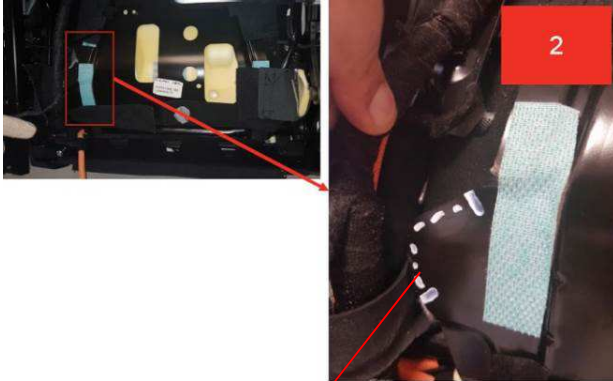


15. Close the pattern and insert the pin following the arrow.




Note: Pay attention not to remove the clip.


16. Relocate Body Sense wire.

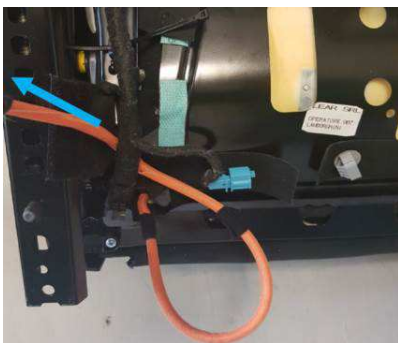

17. Fix and pull strip #1.

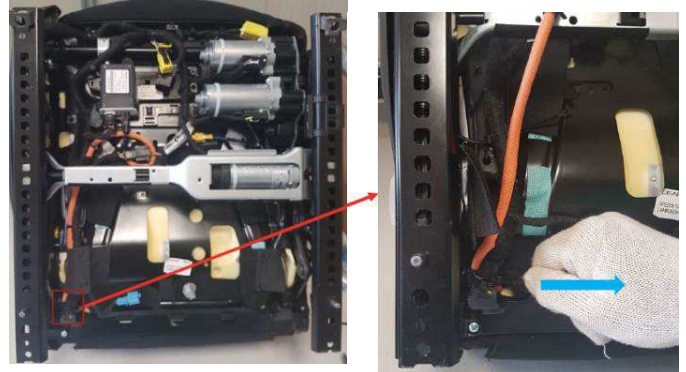


18. Put strip #2 through previous plastic pin cavity.

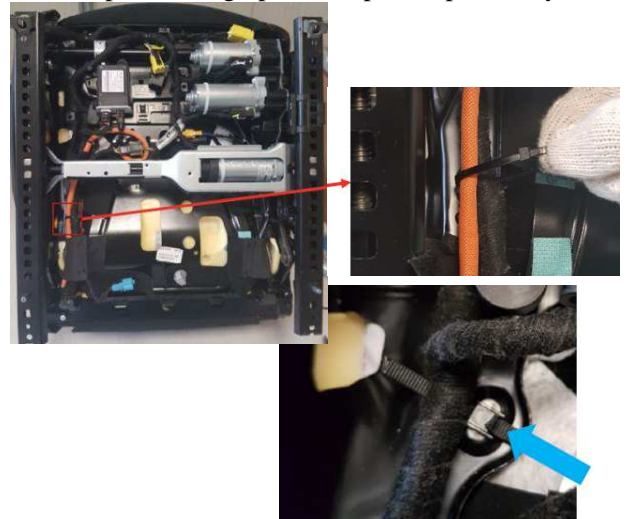

Note: Only slightly close the strip, do not tighten it completely.

19. Put strip #3 through previous plastic pin cavity.

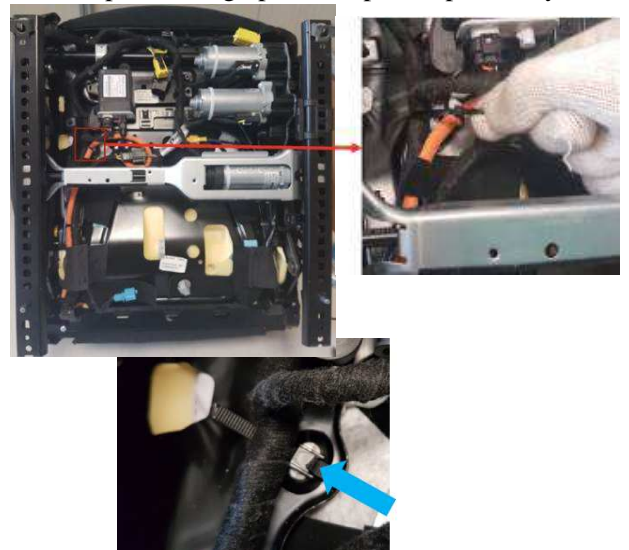




Note: Only slightly close the strip, do not tighten it completely.

20. Relocate wiring and plug Body sense connector.




Note: Wiring must have the path shown in figure 2.

21. Pull strips.

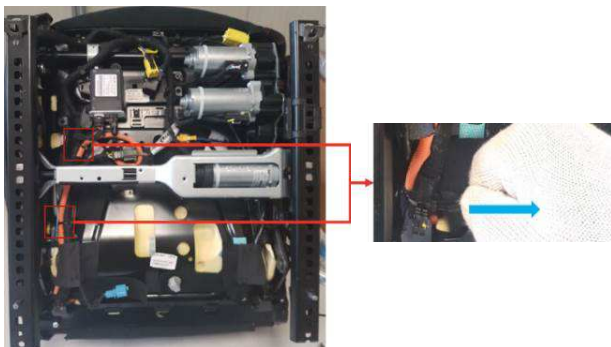


22. Cut leftover strip portion as shown.

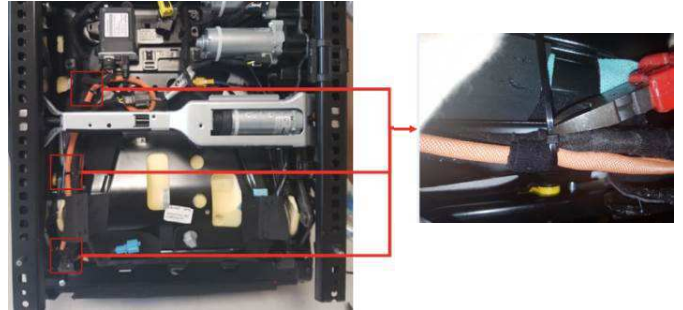


**Warning:** Pay attention not to damage wiring harness.


23. Mount ECU.

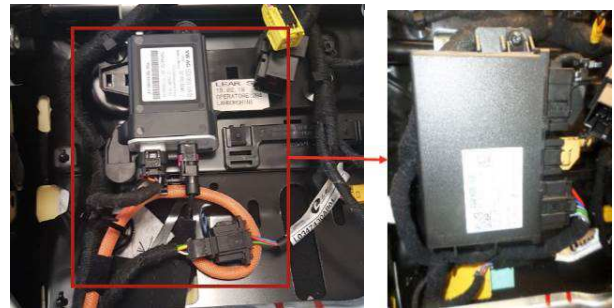

24. Install and tighten ECU bolts with torque wrench to 2.5 Nm .

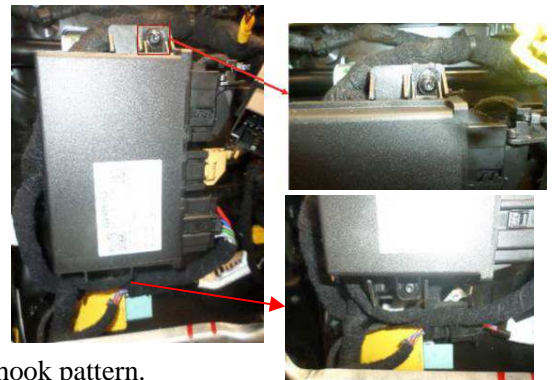


25. Close hook pattern.

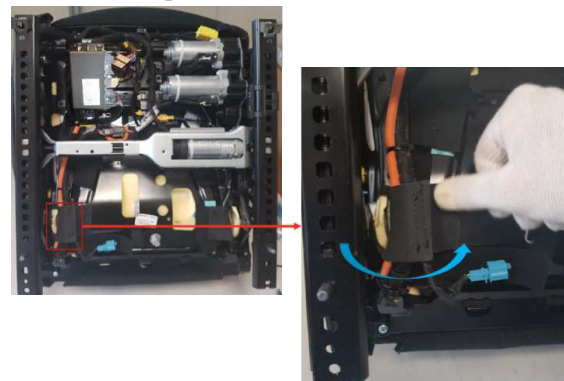




**Instructions C : Spyder**

1. Unhook pattern and open it.

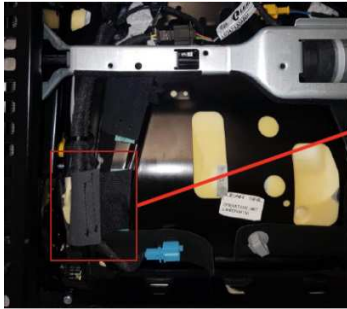


2. Use clamp to cut tie strip #1.

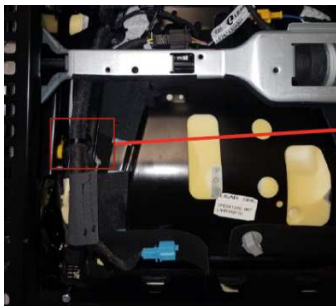

**Warning: Pay attention not to damage wiring harness.**

3. Use clamp to cut tie strip #2.

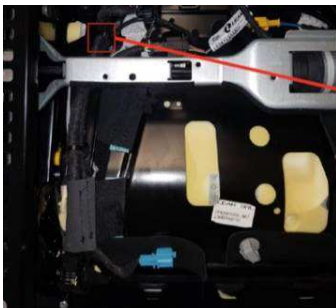


**Warning: Pay attention not to damage wiring harness.**

4. Use fork to unplug the Body Sense connector and extend wiring.



5. Use clamp to cut pin bulging edges.

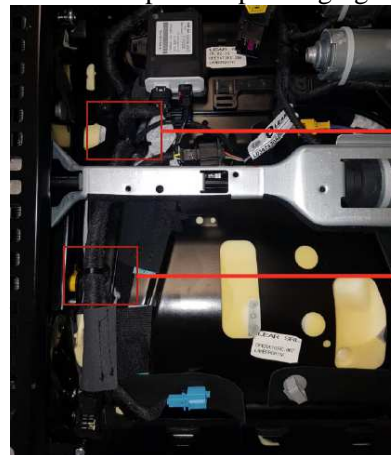


L62X-  
A.07.18

To:  
Subject:  
Date:  
Pages


Official After Sales Network  
BoSe wire rework  
16 November 2018  
10




6. Wrap Body sense wiring with TwistTube and push tube according to image 2 until reach wire extremity as shown in figure (A)

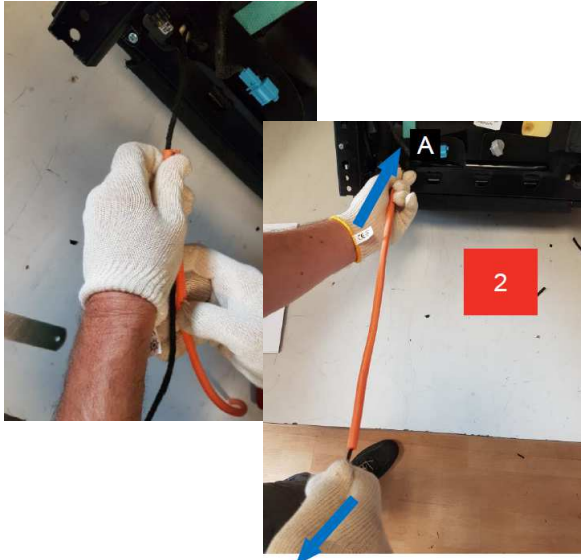


7. Wrap 80 mm Coroplast 800 to fix TwistTube on connector side.

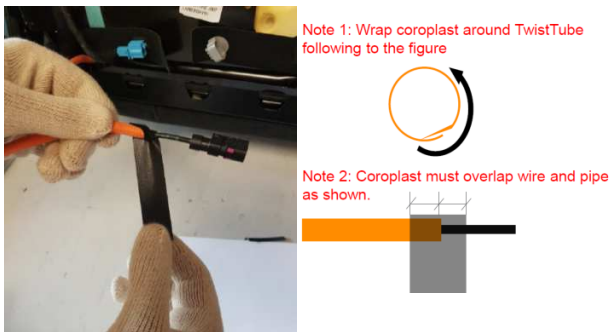

8. Add 2 protection points spaced 200 mm.

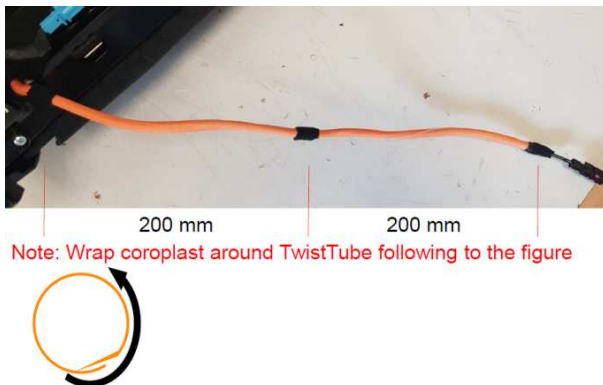

9. Remove wire connector.

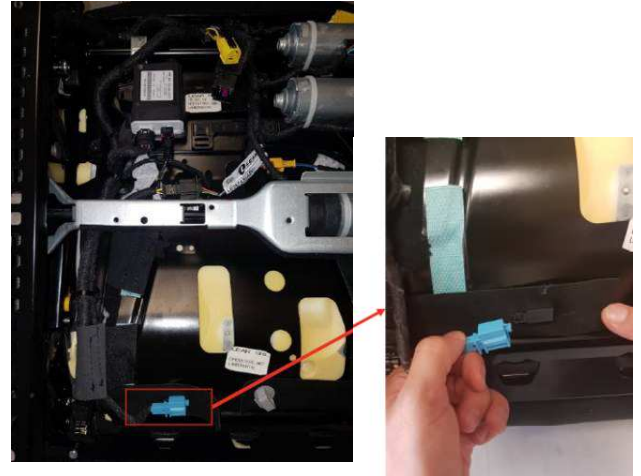


Note: Pay attention not to remove the clip.

10. Detach pattern.



Note: Pay attention not to remove the clip.

11. Add 80 mm Coroplast 800 to protect metal pan portion shown in figure 2.

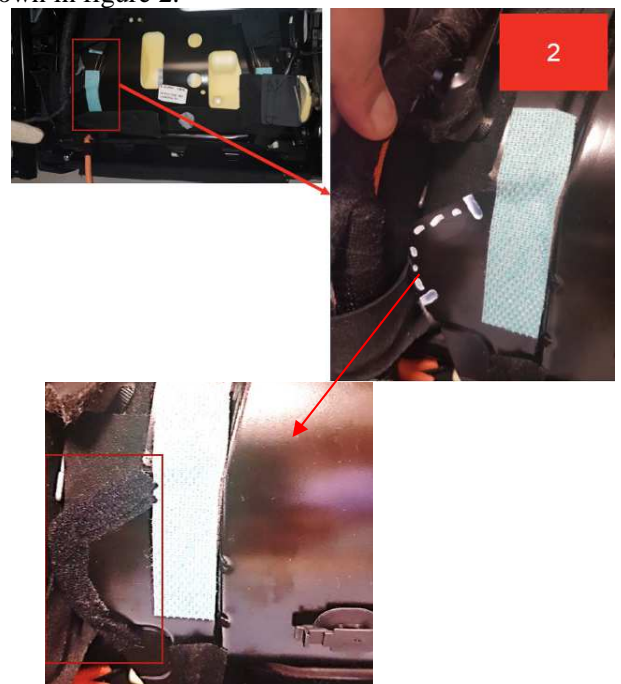

Rev.01

The information and procedures published below are strictly confidential and intended exclusively for authorized operators and individuals. All copyrights are the property of Automobili Lamborghini S.p.A based on copyright law. The company reserves the right to make updates and modifications. The reprinting, reproduction, forwarding to unauthorized people and/or to third parties and partial or entire translation thereof are prohibited without written authorization from Automobili Lamborghini S.p.A.

doc. nr: L/V6\_M06 Rev.[04]

8/10




12. Close the pattern and insert the pin following the arrow.




Note: Pay attention not to remove the clip.



13. Relocate Body Sense wire.

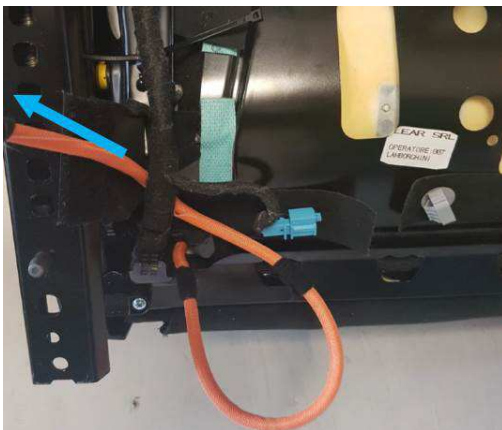

14. Fix and pull strip #1.


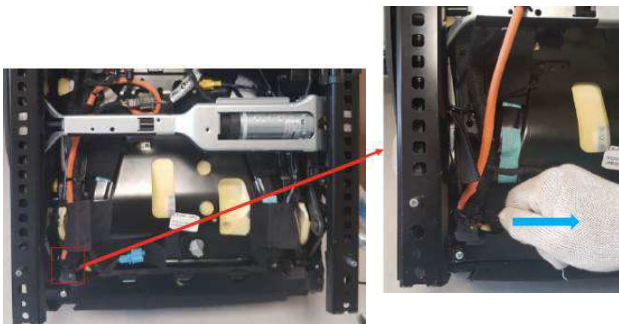


15. Put strip #2 through previous plastic pin cavity.

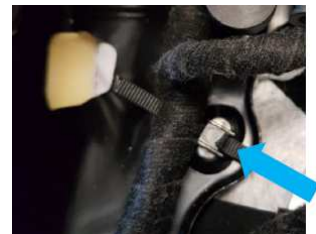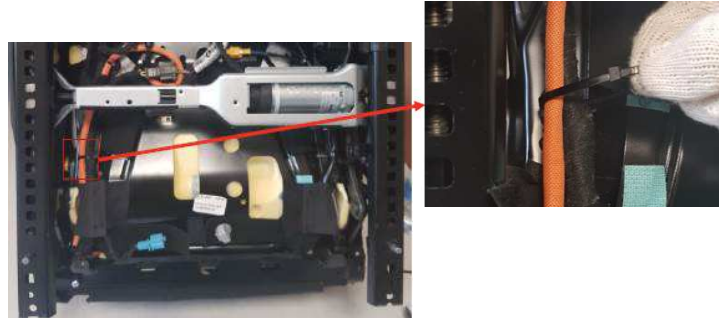

Note: Only slightly close the strip, do not tighten it completely.

16. Put strip #3 through previous plastic pin cavity.

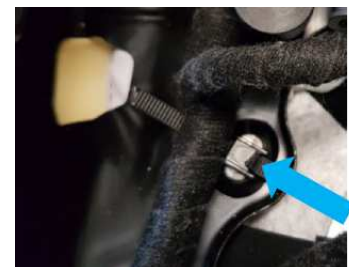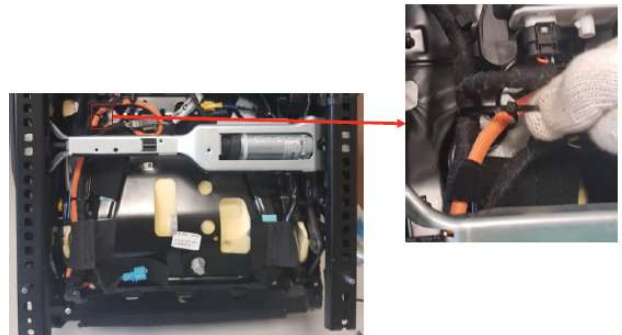

Note: Only slightly close the strip, do not tighten it completely.




17. Relocate wiring and plug Body sense connector.




Note: Wiring must have the path shown in figure 2.


18. Pull strips.

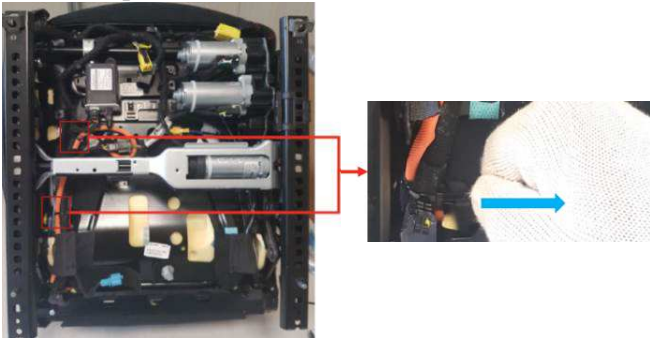

19. Cut leftover strip portion as shown.

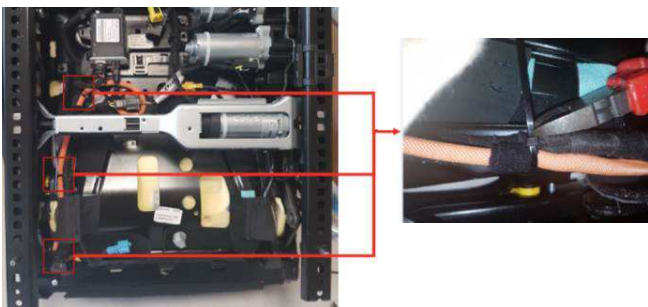

20. Close hook pattern.

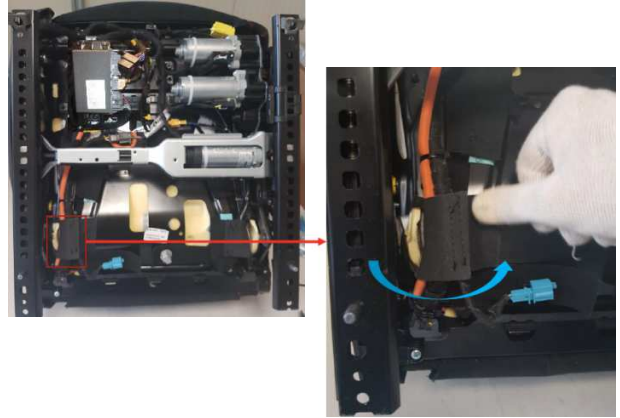

For any further information do not hesitate to contact the Technical Support.