



LEISURE
TRAVEL VANS

January 24, 2018



Campaign Update CA#8895

Triple E Recreational Vehicles
A Division of Triple E Canada Ltd.

P: 204 325 4361
F: 204 325 5241

301 Roblin Blvd.
P.O. Box 1230
Winkler, Manitoba CA
R6W 4C4

U.S. Mailing:
P.O. Box 68
Walhalla, ND 58282

LEISUREVANS.COM
TRIPLEERV.COM

«First_Name»
«Address_Line_1»
«Address_Line_2»
«City», «State» «ZIP_Code»

Stock Unit: «Unit», «Chassis_Serial_Number»
«Coach_Serial_Number»

Subject: Locking Hinge on the Bed Base
Affects certain 2018 Wonder W24FTB

Our in-house inspections have confirmed the screws fastening the locking hinge to the bed base are incorrect. The screw type to use is a machine screw, as provided in this mailing.

Correction:

To correct this situation, please follow the SOP included.

Please claim the labour to perform this campaign update on a warranty claim. The parts required are included for this Campaign

Labour to perform this Campaign Update: 0.7 hrs

Thank you for your anticipated support in correcting this concern.

Sincerely,

Brad Wall
Customer Relations / Warranty Manager

BW/wcw

Enclosures



QAAR 8895

Service Bulletin: WFTB Bed Lid Hinge Fasteners

Department: Service
 People Required: 1
 Time to Complete: 10min
 Date Created: Jan. 25, 2018
 Date Revised:
 Created by Initial: GK
 Rev #: Verified:

Tools needed to complete this process.



Robertson (Square) No. 2 hand driver.



A 9mm Wrench




16 #8-32 X1 1/4" machine screws (141-0188)
 16 #8-32 lock nuts (141-2662)
 32 #8 plain steel washers (141-3630)

1



In each of the predrilled holes on the lids, insert a #8X1.25" machine screw (141-0188) and washer (141-3630).

5

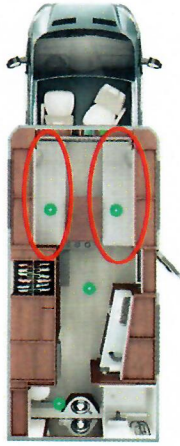


Locate the 2 locking hinges on the underside of each bunk bed lid.

2



From underneath the lid, place the adjustable arm (130-0383) over the machine screws placed, along with a washer (141-3630) and nut (141-2662)

6

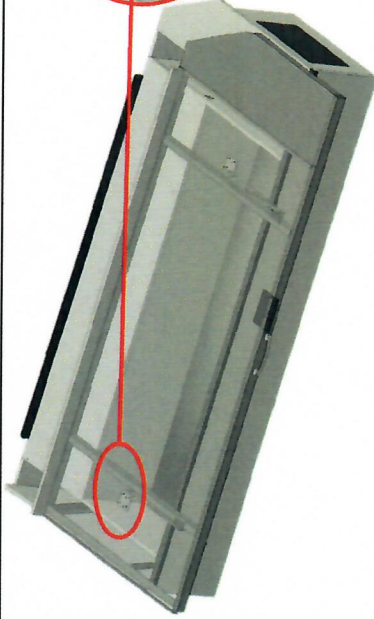

Remove each of the #8 X 3/8" pan head screws from the underside of the bed lid.

3



Use the 9mm wrench to hold the nut and tighten the machine screw and nut so it fits snug. Be careful not to overtighten.

7

8