



Preliminary Information

PIT5282E Procedure for Installation of an Aftermarket Trailer Brake Controller or In Lieu of Factory Trailer Brake Controller

Models

Brand:	Model:	Model Years:	VIN:		Engine:	Transmissions:
			from	to		
Cadillac	Escalade	2015 - 2019	All	All	All	All
Chevrolet	Silverado 1500	2014	All	All	All	All
Chevrolet	Silverado	2015 - 2018	All	All	All	All
Chevrolet	Silverado LD	2019	All	All	All	All
Chevrolet	Silverado 2500/3500	2019	All	All	All	All
Chevrolet	Suburban	2015 - 2019	All	All	All	All
Chevrolet	Tahoe	2015 - 2019	All	All	All	All
GMC	Sierra 1500	2014	All	All	All	All
GMC	Sierra	2015 - 2018	All	All	All	All
GMC	Sierra Limited	2019	All	All	All	All
GMC	Sierra 2500/3500	2019	All	All	All	All
GMC	Yukon Models	2015 - 2019	All	All	All	All

Supersession Statement

This PI was superseded to add the 2019 models. Please discard PIT5282D.

Condition / Concern


Some customers may request to have an aftermarket trailer brake controller added to their vehicle, OR an aftermarket trailer brake controller added in lieu of the factory integrated trailer brake controller (ITBC) (RPO JL1).

Recommendations / Instructions

- 1. Obtain a trailer brake controller harness, GM Part # 23184088, as shown below.**



2. Connect the harness to the MID-BEC (X61A). The MID-BEC is located under the I/P to the left of the steering column. The harness connection point (1) is illustrated below.

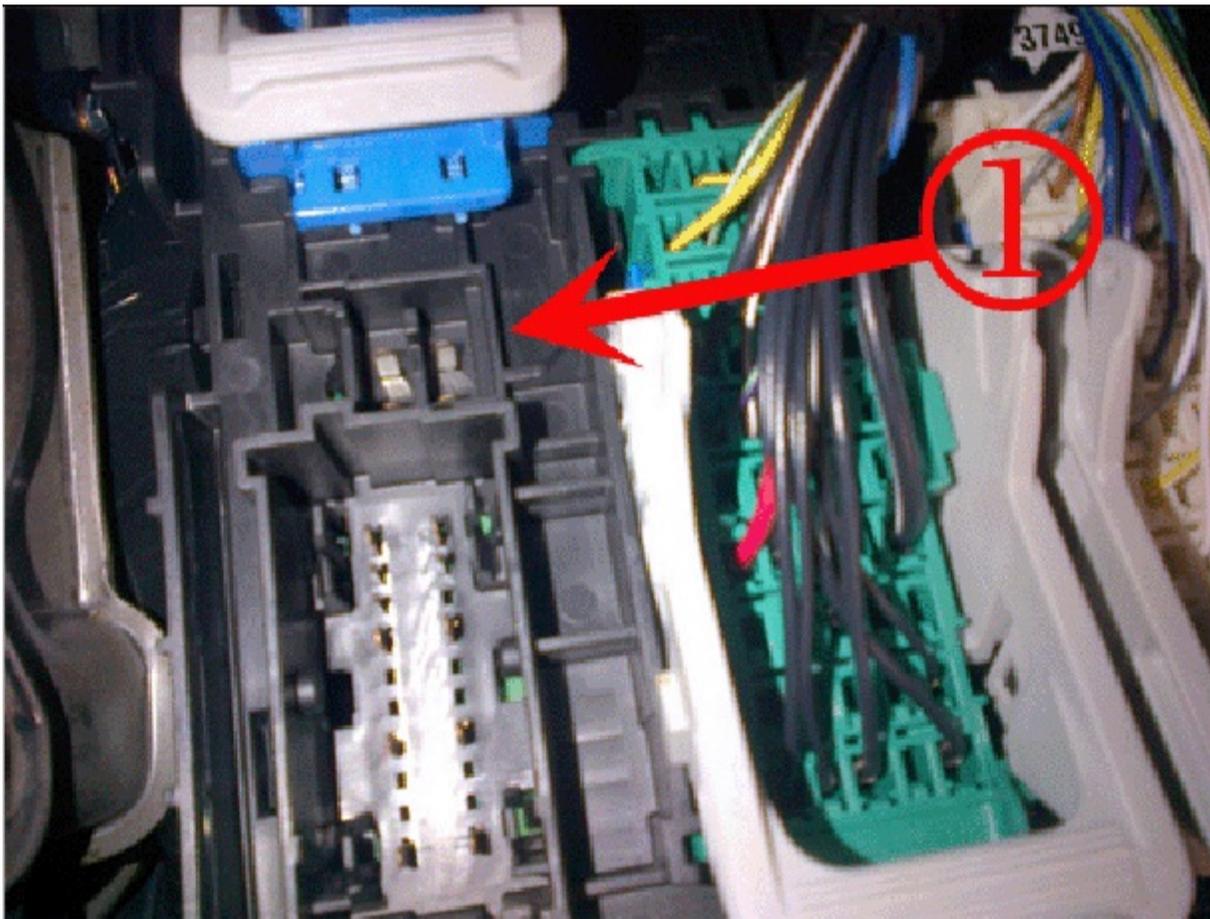

3. The trailer brake controller harness consist of 4 blunt cut wires and a label that calls out the wire colors and each wire's function, also shown below. Use these 4 blunt cut wires to connect to the aftermarket trailer brake control.

Four Blunt Cut Wires		
Dark Blue	Circuit 47	Brake Output To Trailer
Red/Green	Circuit 242	Battery Power (30 AMP)
White/Blue	Circuit 3691	Brake Signal

Black

Circuit 1050

Ground

4. Perform this step **ONLY** if equipped with RPO J11 where the customer is requesting the factory trailer brake system be bypassed to add an aftermarket trailer brake controller. Locate connector X185 Or X138 (varies with vehicle build; refer to SI), which is near the underhood fuse block, terminal 32. Circuit 47 ends at the body harness side of X185 or X138 terminal 32, which comes from the X61A junction block. Obtain enough Dark Blue 12 gauge wire to run from X185 or X138 to the 7-way trailer connector at the bumper. Attach terminated lead part number 13327155 to one end of the Dark Blue and insert into the chassis harness side of the X185 or X138 connector terminal 32. Run the Dark Blue wire in its own conduit along the frame to the 7-way trailer connector at the bumper. Remove circuit 47 from the 7-way trailer connector terminal "C" and tape the bare terminal and attach to the harness. Attach terminal part number 12110853, located in Delphi Tray 4, to the other end of the Dark Blue wire, with the correct weather pack seal, and insert it into the 7-way trailer connector terminal "C."

Parts Information

Part Number	Description	Qty
23184088	Trailer Brake Controller Harness	1

Warranty Information

If the customer wishes to have an aftermarket brake controller installed in their vehicle, it would be considered as a Customer Pay option.



GENERAL MOTORS

© 2019 General Motors. All Rights Reserved.