


1. Please check first the your bypass valve for the water heater. The water heater bypass valves are located inside the vehicle in the lowest cabinet under the front closet on the driver side. The valves should be on summer mode, the red line and blue line valves should be OPEN or parallel to the line. BUT, where the blue and red line meets, the valve should be CLOSED or forming a "T" against the line.



2. Please see attached procedure on how to remove the Corian pillar on bathroom shower. Check the adjustment valves there for the cold and hot line or if the cold line is clogged.

Removing the Corian face from Shower

- 1) Remove the Corian face by cutting the silicone where the face plate meets the side channel pieces of Corian. Cut the silicone from the bottom up.

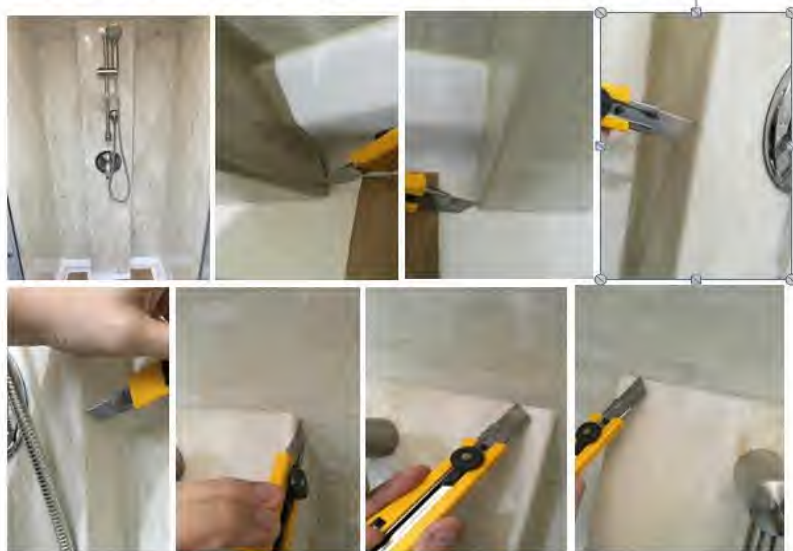

- 1) Pull the Corian face down away from the top angled piece of Corian.
- 2) With the Corian face pulled away from the back panel check the water connection fittings on the back of the shower tap. Pressurise the water system to check the water fittings connected to the shower tap.
- 3) Tighten these connections as needed. Re pressure check the water fittings.
- 4) Reinstall the Corian face using clear silicone. Using painters tape, tape the Corian face in place until the silicone sets up.

If the shower valve needs to be replaced, please contact a Pleasure-Way dealer to order the part.