



Triple E Recreational Vehicles
A Division of Triple E Canada Ltd.

P: 204 325 4361
F: 204 325 5241

301 Roblin Blvd.
P.O. Box 1230
Winkler, Manitoba CA
R6W 4C4

U.S. Mailing:
P.O. Box 68
Walhalla, ND 58282

LEISUREVANS.COM
TRIPLEERV.COM

April 29, 2019

Campaign Update CA#9277

«First_Name»
«Address_Line_1»
«City», «State» «ZIP_Code»

VIN #
Coach Serial #

Subject: Equalizer Leveling System
Affects certain 2019 Unity Motorhomes

The Equalizer leveling system front jack mounts have an expansion fit BoxBolt that requires it to be torqued to 140 ft. lbs.

Correction:

To correct this situation, please follow the included SOP01956. Please claim the labour to perform the campaign update on a warranty claim.

Labour to perform this Campaign Update: 0.2 hrs

Thank you for your anticipated support in correcting this concern.

Sincerely,

Brad Wall
Customer Service / Warranty Manager

BW/wcw

Enclosure



LEISURE
TRAVEL VANS



TRIPLE E
RECREATIONAL VEHICLES

Triple E Recreational Vehicles
A Division of Triple E Canada Ltd.

P: 204 325 4361
F: 204 325 5241

301 Roblin Blvd.
P.O. Box 1230
Winkler, Manitoba CA
R6W 4C4

U.S. Mailing:
P.O. Box 68
Walhalla, ND 58282

LEISUREVANS.COM
TRIPLEERV.COM

April 29, 2019

Campaign Update CA#9277

«Owner_Name»
«Owner_Addr1»
«Owner_Addr2»
«Owner_City», «Owner_Prov» «Owner_Postal_Code»

«Unit», «Chassis_Serial_Number»
«Coach_Serial_Number»

Subject: Equalizer Leveling System
Affects certain 2019 Unity Motorhomes

The Equalizer leveling system front jack mounts have an expansion fit BoxBolt that requires it to be torqued to 140 ft. lbs.

Correction:

To correct this situation, please follow the included SOP01956. Or you may contact your selling dealer to have this Campaign Update performed. It will be performed at no charge to you.

Thank you for your anticipated support in correcting this concern. We sincerely apologize for creating this inconvenience.

Sincerely,

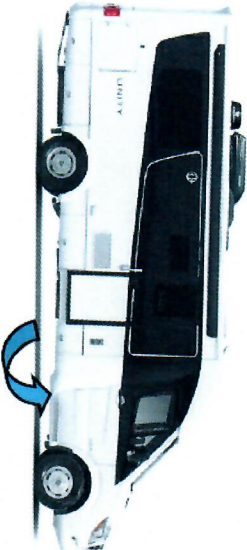
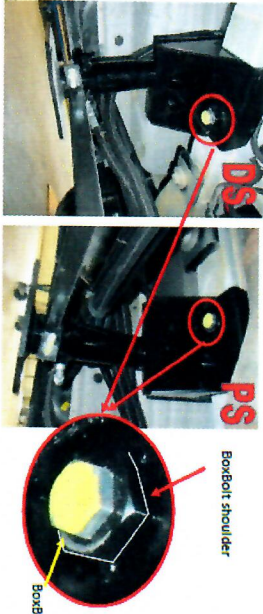
Brad Wall
Customer Service / Warranty Manager

BW/wcw

Enclosure

SOP01956
GAAR 9277 Tighten Front
Leveling Jack BoxBolt

Department: 17
People Required: 1
Time to Complete: 10min
Date Created: Apr. 3, 2019
Date Revised:
Created by Initial: GK 806 Verified: DP

 1 Locate the front leveling jacks under the coach just rear of the cab doors.	 2 BoxBolt shoulder Locate the BoxBolt expansion bolt. BoxBolt head.
 3 Set torque wrench set to 140ft.lbs. with a 15/16" socket.	 4 Hold the hexagon shoulder of the BoxBolt with a open ended wrench. Place the socket on the BoxBolt head.
 5 Tighten bolt clockwise until the torque wrench feature activates. (usually a click)	6 Repeat for the other side.