



Precautions for the assembly of the front mudguard extension part no.56410801B

Multistrada 1200 MY 2010-2018 (all model versions)

Multistrada 1260 MY 2018-2019 (all model versions)

Service Repair Bulletin SRV-SRB-19-027

Date: June 25, 2019
To: Dealer Principal, General Manager, Service Manager, North American Dealer Network
From: Richard Kenton, Technical Director
Eric Bradley, Technical Training and Publications Manager


Dear Dealers,

Reports have been received identifying the incorrect installation of the front mudguard extension during the pre-delivery phase of the above-indicated models (excluding Enduro and Multistrada 950).



Caution:

If the brake hose that connects the two front brake calipers is not installed correctly and fixed to the mudguard, the mudguard may touch the tire

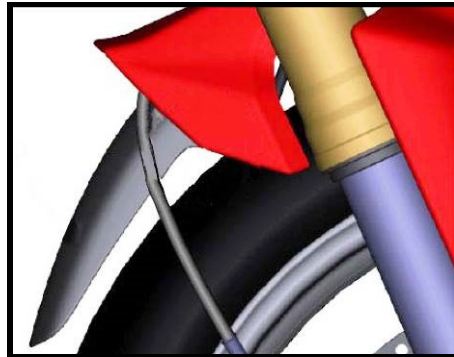

When installing the front mudguard extension part no. 56410801B, follow the instructions provided below and in the workshop manual exactly. It is also important to inform Customers that the installation of such component must be performed exclusively at a Ducati Service workshop.



NOTE

Front mudguard extension part no. 56410801B cannot be installed on models equipped with carbon mudguard (version Pikes Peak or Ducati Performance accessory).



Precautions for the assembly of the front mudguard extension part no.56410801B


Multistrada 1200 MY 2010-2018 (all model versions)

Multistrada 1260 MY 2018-2019 (all model versions)


Service Repair Bulletin SRV-SRB-19-027

Installation Instructions

1. Remove the **button tie (1)** L.62 mm
2. Remove the **2 screws M5x14 (2)** securing **bracket (3)** to the front mudguard

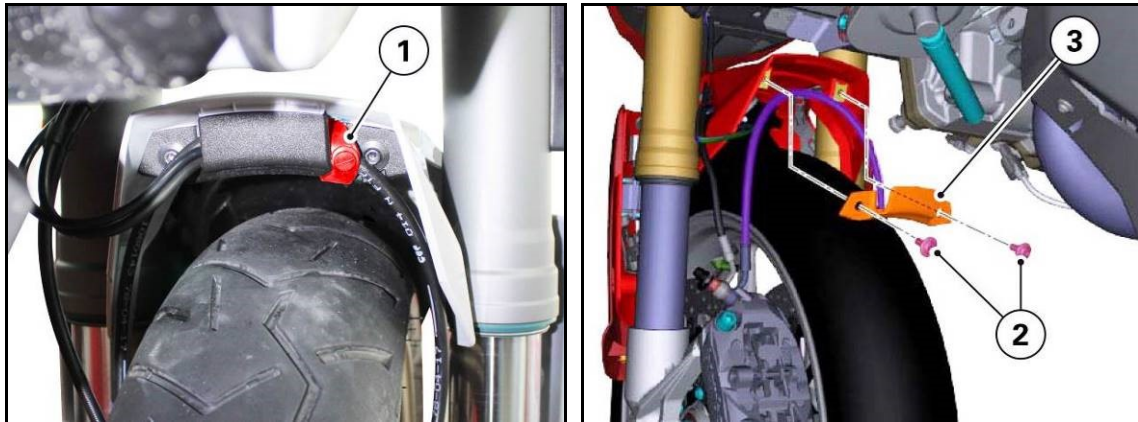

3. Fit the front mudguard **extension (4)** aiming front brake caliper hoses as shown in the figure

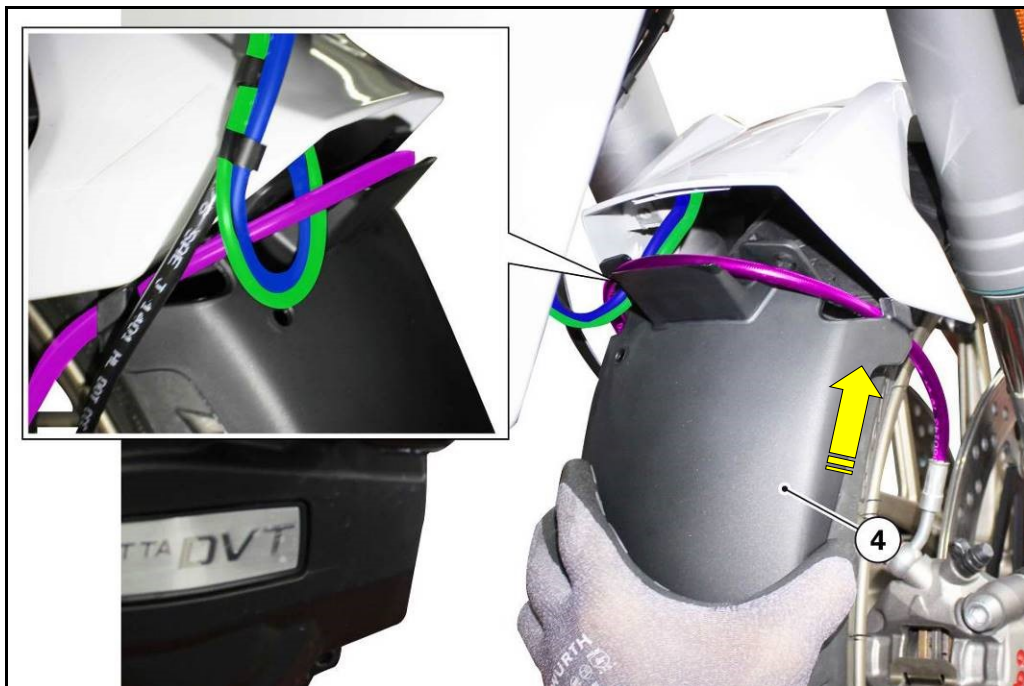



Precautions for the assembly of the front mudguard extension part no.56410801B

Multistrada 1200 MY 2010-2018 (all model versions)


Multistrada 1260 MY 2018-2019 (all model versions)

Service Repair Bulletin SRV-SRB-19-027




NOTE

Make sure that the **2 tabs (5)** of front mudguard extension are positioned between the **tabs (6)** of the front mudguard.

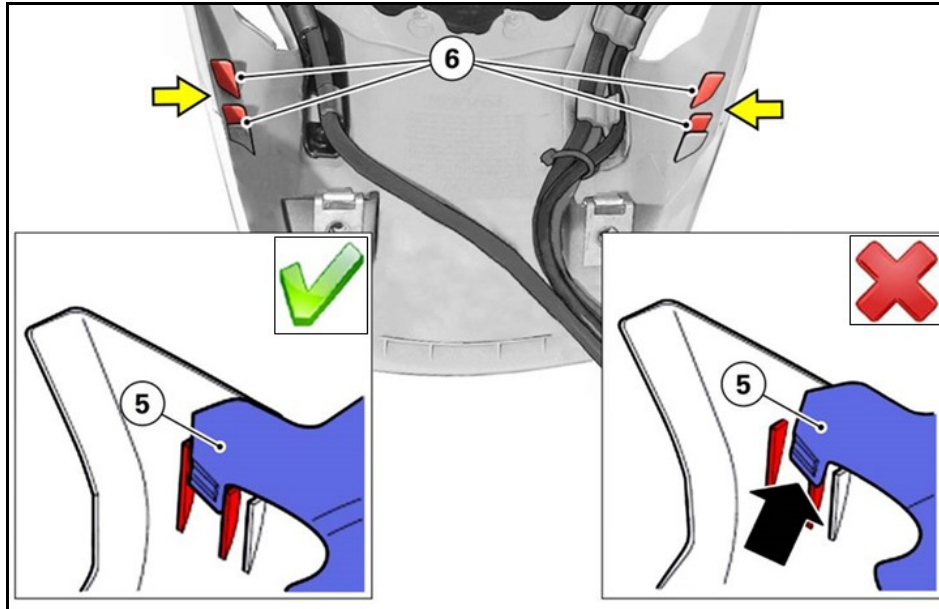

4. Tighten the 2 screws M5x14 (2) to 3.5 Nm ± 10%.

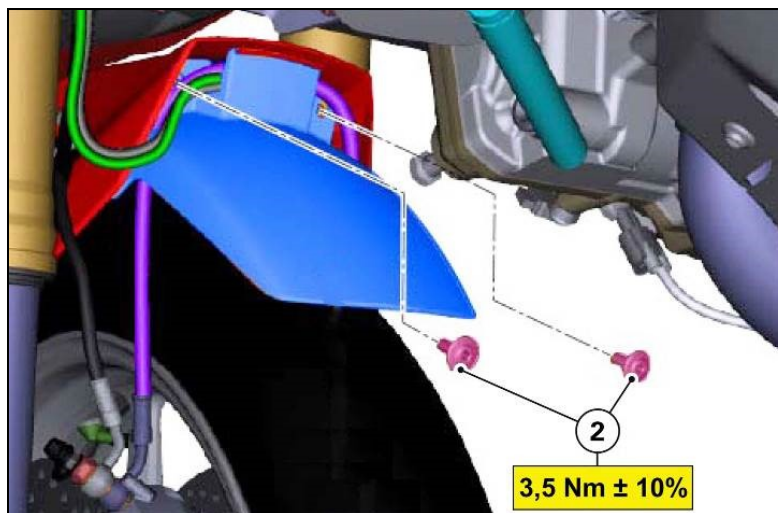



Precautions for the assembly of the front mudguard extension part no.56410801B

Multistrada 1200 MY 2010-2018 (all model versions)

Multistrada 1260 MY 2018-2019 (all model versions)

Service Repair Bulletin SRV-SRB-19-027




NOTE

Make sure that front mudguard profiles are aligned as shown in the figure.



NOTE

Check that the distance between front tire and front mudguard extension (4) is equal to 10 mm.

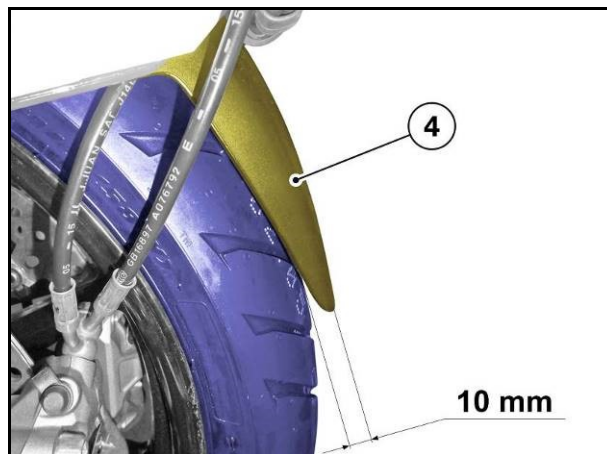



Precautions for the assembly of the front mudguard extension part no.56410801B

Multistrada 1200 MY 2010-2018 (all model versions)

Multistrada 1260 MY 2018-2019 (all model versions)


Service Repair Bulletin SRV-SRB-19-027



NOTE

The Enduro and Multistrada 950 versions are produced with the front mudguard extension already installed.

The images below define the positioning of the **hose (1)** that connects the front brake calipers.

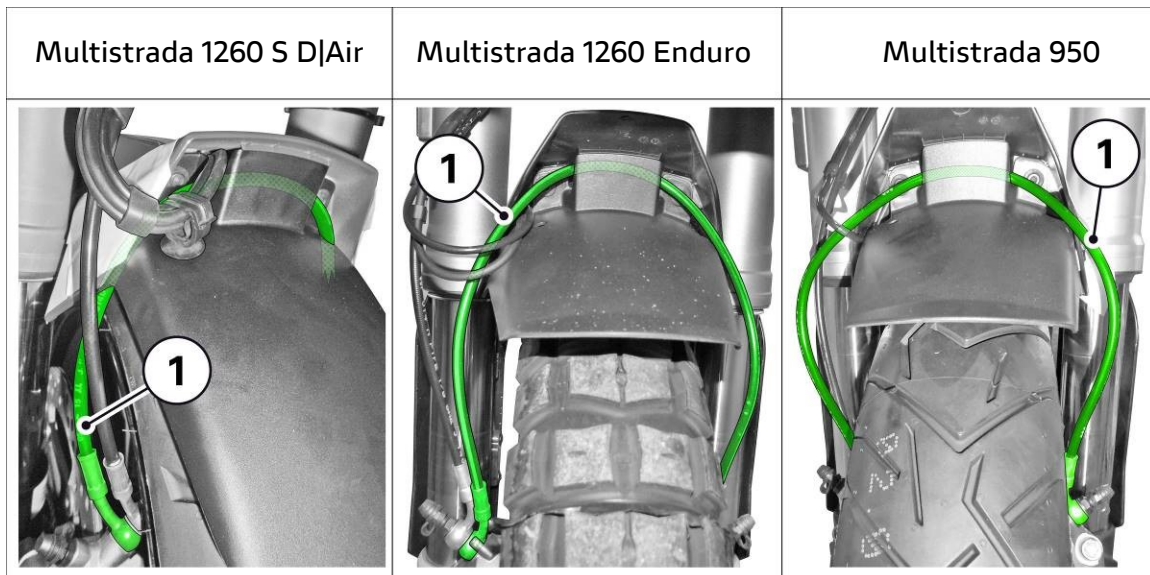

For questions about this Service Bulletin,
please contact your Service Area Manager.