



Highland
RIDGE RV

STARCRAFT

LP Tank Door Shim

Bulletin Type:	SRP	Publication Date:	August 2019
Bulletin #(s):	19-024	Make(s):	Jayco Towable
Job Code(s):	**	Model(s):	Eagle
Flat Rate(s):	**	Model Year(s):	2016-2019
<i>** If affected unit has warranty remaining, submit your claim following the normal process.</i>			

Incident:	Certain compartments are too narrow – LP tanks push on the door.		
Affected Units:	2016-2019 Jayco Eagle units		
Parts:	1 – kit, door shim, plastic, 4 pcs (0723004)	 Door Shim pieces	
Misc. Tools & Supplies:	• Screwgun with #2 square drive bit • Caulk gun • Putty stick tool • 1 tube - MH 2300 sealant (or equivalent) • Foam window tape (6ft)		

INSTRUCTIONS

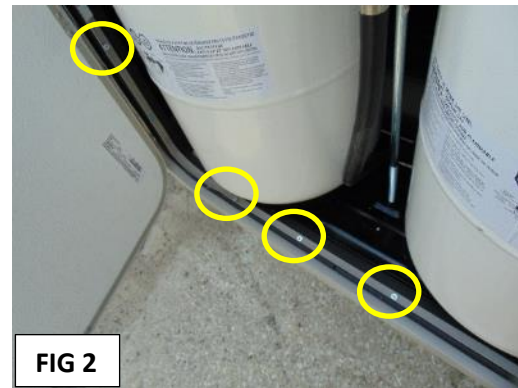
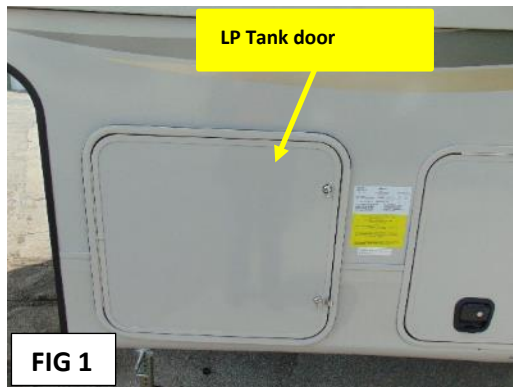


FIG 1:

- Shim needs to be added to the LP Tank door on Off Door Side at front of the trailer.

FIG 2:

- Remove all the screws holding the LP tank door to the sidewall (4 of them circled).
- There are 12 screws holding the door in place. (Save the screws)
- There will be foam or sealant left around the door opening after removing the door.
- Use a plastic putty tool to scrape away as much of the sealant as possible.
- **DO NOT USE A SHARP TOOL LIKE A METAL PUTTY KNIFE TO REMOVE OLD SEALANT.**

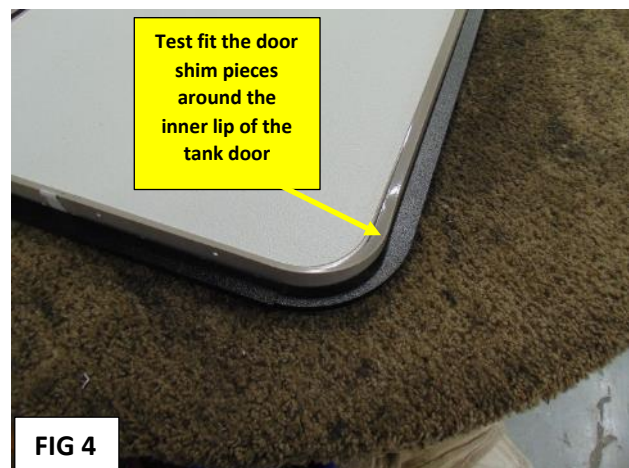


FIG 3:

- Place the door on a carpeted bench or table with the back side facing up as shown.

FIG 4:

- Test fit the black plastic door shim pieces around the inner lip of the tank door.
- All pieces should butt against each other with no gaps between the pieces.
- Since the door is not square, the pieces will only fit a certain way.
- After test fitting, remove the shim pieces and lay them out next to the door so you don't have to pull them out of the sealant later to rearrange them.

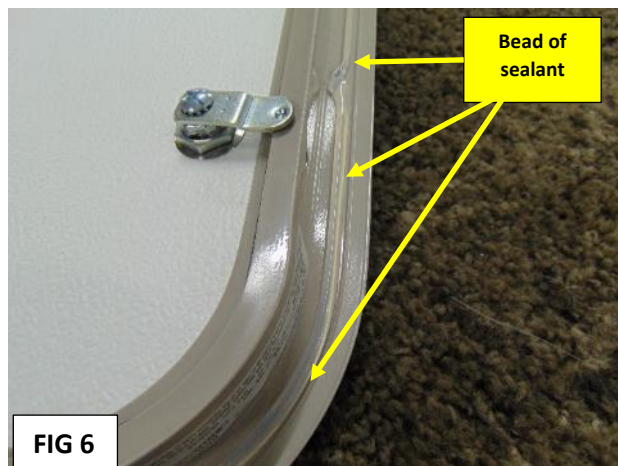
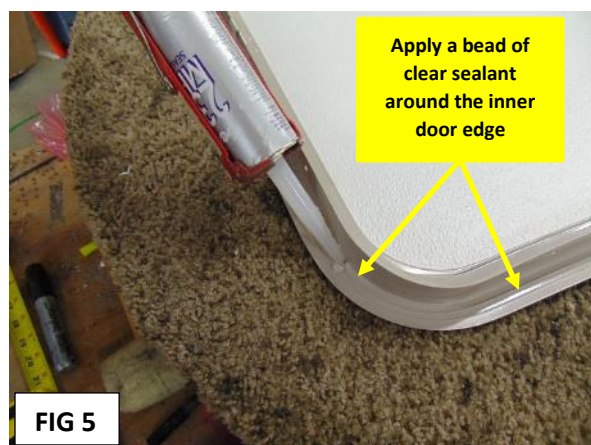


FIG 5:

- Apply a continuous bead of clear sealant (MH2300 or equivalent) around the inner door edge as shown.
- Bead size should be approximately ¼ inch diameter.

FIG 6:

- Shows the clear bead of sealant on the inner edge of the tank door.

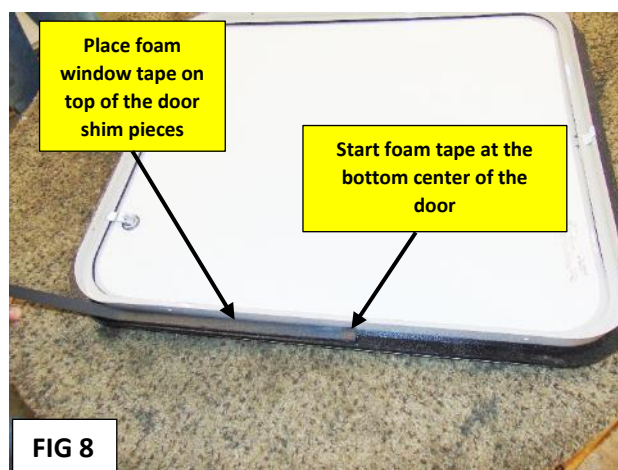


FIG 7:

- Place the four door shim pieces on the inner door edge as shown.

FIG 8:

- Install self-adhesive foam window tape on top of the plastic door shim pieces.
- Begin at the bottom center of the door (on the back side).
- Stick window tape completely around the perimeter of the door on top of the shim pieces.

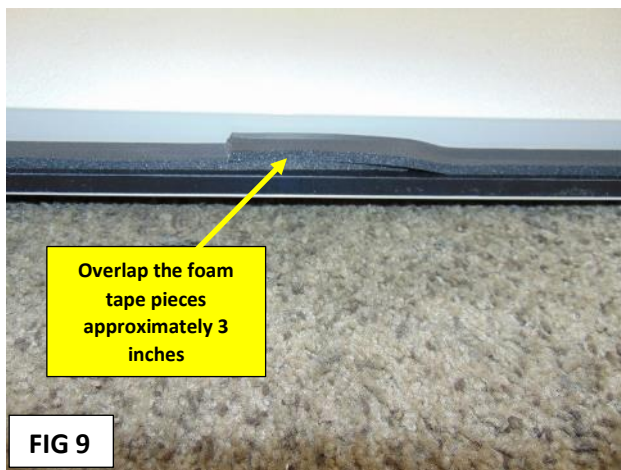


FIG 9:

- When you get back around to the bottom center of the door, overlap the foam tape approximately 3 inches.

FIG 10:

- Reinstall the completed door on the trailer.
- Reinstall the 12 screws removed previously.

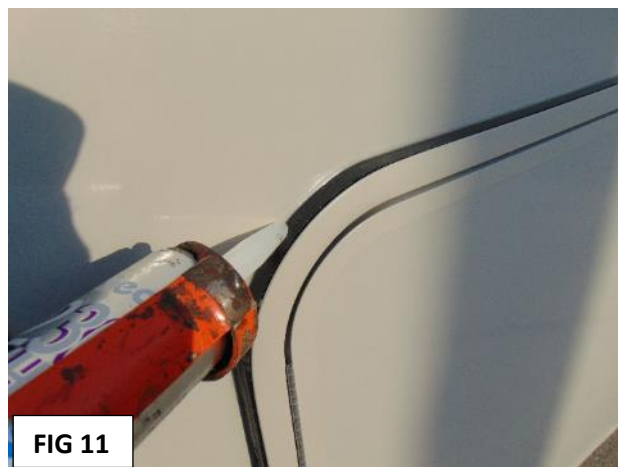


FIG 11:

- Run a bead of the clear sealant around the perimeter of the door shim after re-installing the door.
- Using a latex or nitrile glove, wet a gloved finger and smooth out the bead of sealant.

Jayco's sole obligation under our limited warranty is to repair or replace defective materials and/or workmanship deemed our responsibility as determined by Jayco at our sole discretion. Jayco reserves the right to use new and/or remanufactured parts or materials of similar quality to complete any work, and to make parts and/or design changes as appropriate without notice to anyone. Jayco designs and/or materials changes are done without obligation to incorporate such changes in previously manufactured product. Jayco makes every reasonable effort to ensure field remedies will not adversely affect performance and/or safety of the unit. This field remedy is not intended to extend to future performance of this RV, or any of its materials, components or parts beyond the standard warranty period. The RV owner's obligation to notify Jayco, or one of its independent, authorized dealers, of a claimed defect does not modify any obligation placed on the RV owner to contact Jayco directly when attempting to pursue remedies under state or federal law.

903 South Main Street • P.O. Box 460 • Middlebury, IN 46540 • (574) 825-0608 • Fax: (574) 825-0572