

SERVICE BULLETIN

UTILITY TRAILER MANUFACTURING CO.



SB-14-015


September 06, 2019

REEFER FLOOR DRAIN KAZOO | SPECIFICATION FOR PRESSURE RELIEF SLIT

Whenever replacing floor drain kazoops in the field, use a sharp razor blade to add one 1" wide slit, located 1/4" below the bottom edge of the drain pipe and centered in the flat section of the kazoo as shown in the illustration. With a 3/4" overlap of the kazoo to the drain pipe, this works out to be 1" down from the top edge of the kazoo.

A shift in temperature of a Utility reefer unit can cause pressure change within the tightly sealed trailer box if the kazoops freeze or become clogged. The slit added to the drain kazoo acts as a pressure relief valve, allowing the pressure inside the trailer to equalize with the pressure outside the trailer.

Any further questions may be directed to the Field Service Department at 1 (800) 423-6591.

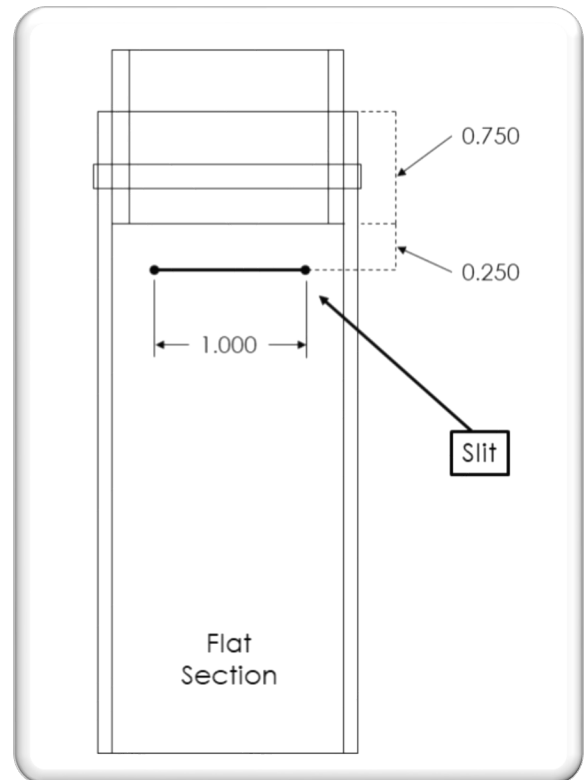

Field Service Department
UTILITY TRAILER MANUFACTURING COMPANY