

October 30, 2019


Version 1

Center Console Trim Piece Comes Loose**AFFECTED VEHICLES**

Year	Model	Trim	VIN Range
2016-17	Accord	ALL	ALL

SYMPTOM

One of the center console trim pieces pops out and/or comes loose.

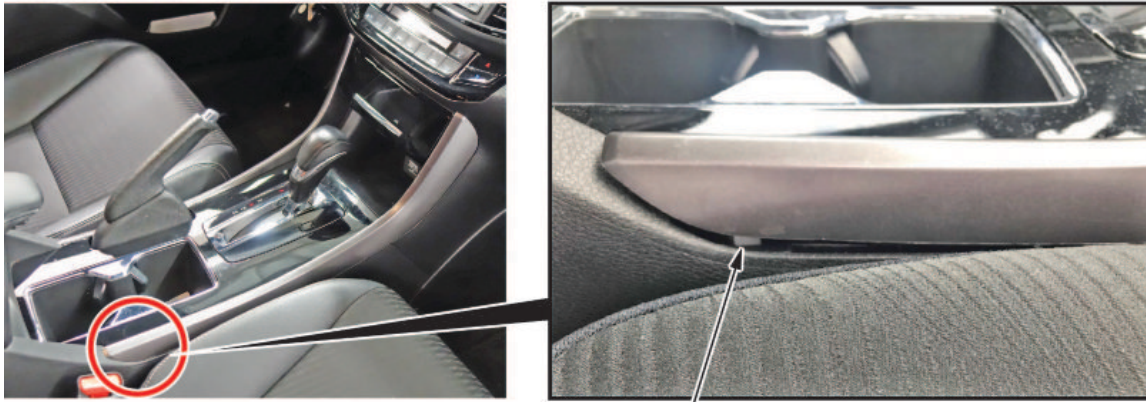

Clip is not set.

PROBABLE CAUSE

A clip on one of the center console trim pieces is not fully engaged.

CORRECTIVE ACTION

Remove the affected center console trim piece, modify it, then install it.

TOOL INFORMATION

Part Name	Part Number	Quantity
Needle Metal File (Width: less than 3 mm, Thickness: 1 mm)	Commercially Available	1

CUSTOMER INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

WARRANTY CLAIM INFORMATION

The normal warranty applies.

Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
8410E0	Remove the center console trim piece, modify it, then install it.	0.3 hr	06201	03217	A19110A	83420-T2F-A11ZA

Skill Level: Repair Technician

REPAIR PROCEDURE

NOTE

Passenger side is shown; driver side is similar.

1. Inspect both center console trim pieces to determine which side needs repair.

NOTE

Only one side will need repair.

2. Remove the trim piece using a plastic trim tool.




3. Remove the white clip from the trim's rear post as shown.

NOTES

- Gently pry both sides of the clip at the same time with a small screwdriver or plastic trim tool.
- Improper handling and removal of the trim may cause the clip to break. If it does, replace it. (P/N 90666-SDA-A01)



4. Insert the file into the clip cutout as shown.

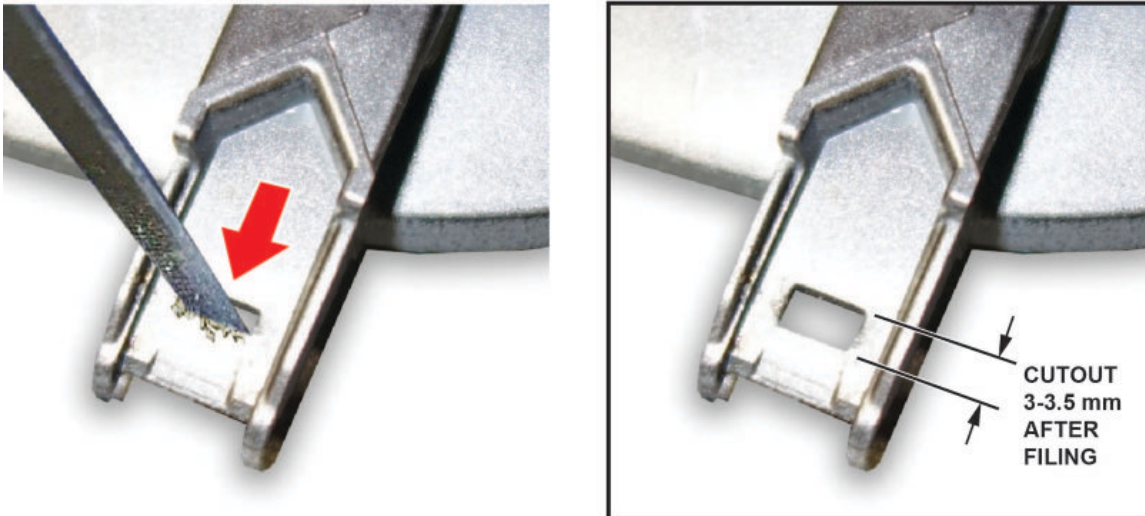


- File off **1 to 1.5 mm** of material so the cutout is **3 to 3.5 mm** wide.
- Install the white clip.



- Install the trim. Starting from the top, push towards the front of the vehicle, and gradually work your way back. When you get to the final clip, use two hands and press firmly right above the clip until you hear a click.

NOTE

If the clip will not fully engage, file off a bit more material from the cutout. Be sure not to remove more than **2 mm** of material. The cutout must not be larger than **4 mm**.

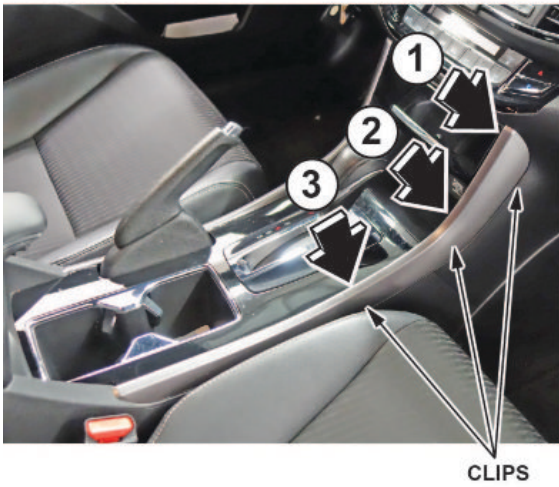

- Make sure the clip is fully engaged by tugging on the trim, then pressing down on it again.

END