



42 DL

SIDEWALL RE-ENFORCEMENT



TOOLS USED FOR REPAIRS





PARTS NEEDED





STEP #1

Open slide room so wall and slide out header is in a relaxed position.



STEP #2

REMOVE 3 PIECES OF CEILING TRIM ABOVE BOTH SLIDE
OUTS.




STEP #3

MARK TRIM WITH BRACKET AND CUT OUT.
(YOU CAN PULL TRIM FROM WALL IF YOU CHOOSE)





ONCE TRIM IS CUT, MAKE SURE BRACKET HOLES ARE LINED UP WITH CEILING TRACK.

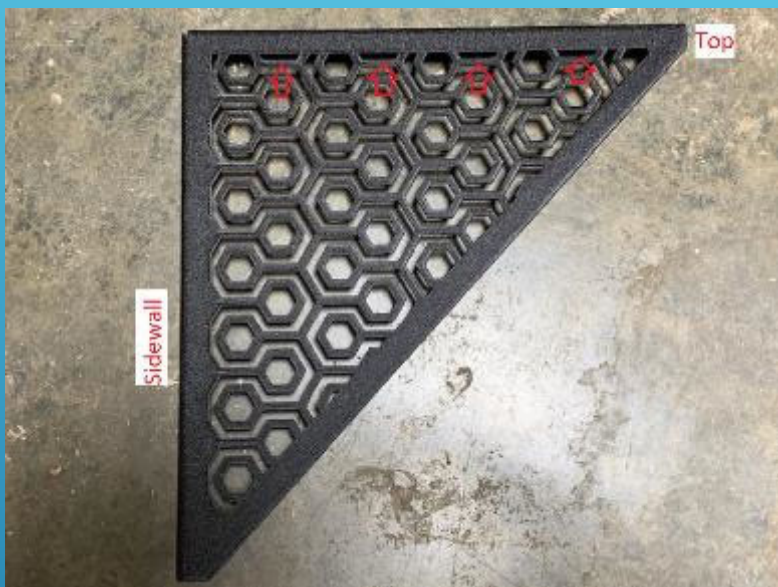

STEP #4

SECURE BRACKET TO CEILING AND SIDEWALL. PLEASE NOTE BRACKET HAS SMALL SLITS AT TOP. THERE IS A LEFT AND RIGHT BRACKET. FLAT SIDE SHOULD ALWAYS FACE TOWARDS REAR OF UNIT.

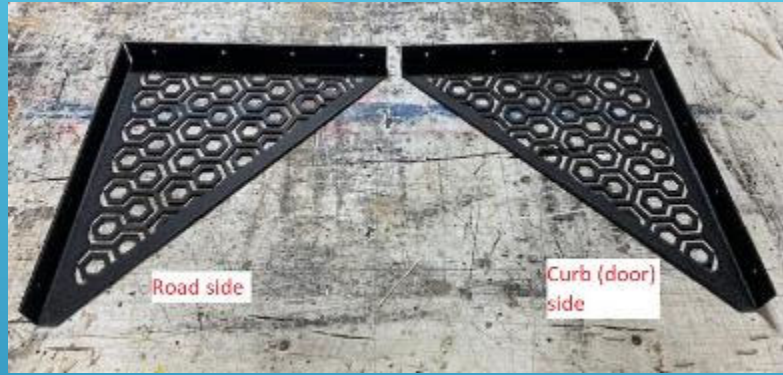

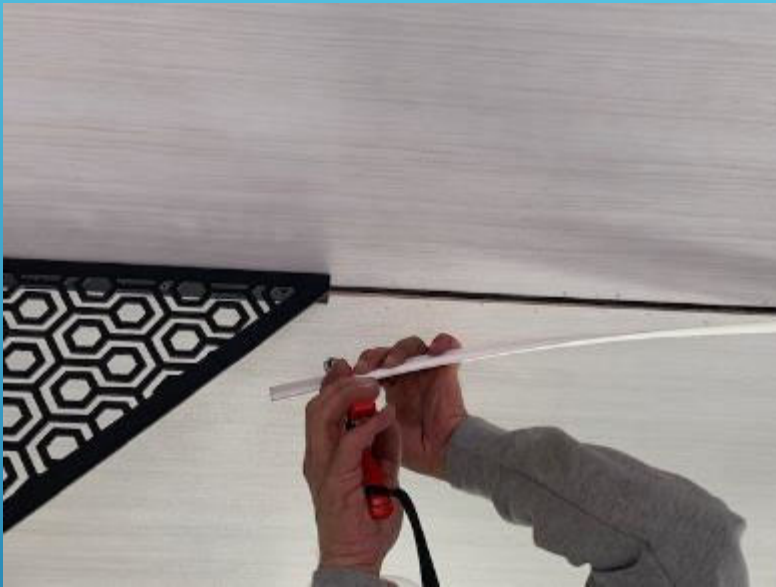

STEP #5

ONCE BRACKETS ARE INSTALLED, REPLACE AND INSTALL CEILING TRIM TO SIZE.



STEP #6

CLEAN UP UNIT!

**MAKE SURE NO DEBRIS IS LEFT
ON FLOOR..**

