



# Quick tip

Version 1.2

February 18, 2020

Title: 2018+ Tiguan trailer hitch,


For vehicles built before 01/05/2020 only.

Part numbers: 5NN.055.203, 5NA.092.135, N 91154801 x4,  
5QF803461, N 10684701 x2, N 91137101 x2

## With PR1D8 (Accessory) DIA & MDO 2018

Max trailer weight: 1500lbs Trailer without brakes  
Max tongue weight: 220lbs  
1-1/4" Receiver & 1-7/8" Ball


### Dealer accessories needed to be tow ready:

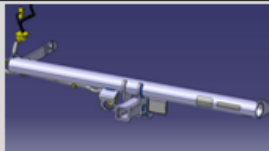

Trailer Hitch



ekit harness

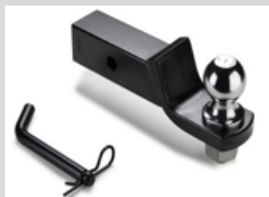

1-7/8" Ball & Ball Mount



Vas Coding



Step 1) Remove bumper cover, Loosen left rear quarter trim in order to gain access to the module mounting location. Remove inner bumper support bar.



Step 2) Install module, make the ground connection at the ground point, pass the trailer harness through the body (through the rear most body plug area).



Step 3) Install trailer hitch receiver.



Step 4) Mount the 4 pin electrical connector.  
**Note:** It might be necessary to drill the 4 holes out from the 4mm hole to a 5 mm hole. Use touch up paint or primer to seal the metal after drilling to prevent rust.



Step 5) Install bracket in front of the spare tire.



Step 6) Re-install bumper cover and all other trim panels loosened or removed previously.



Step 7) Connect the can bus splice connectors located behind glove box near the lower A-pillar.

Step 8) Connect scan tool, scan vehicle, Select special functions, Adaption, selection option 4 (Perform conversion retrofit with protection license).

Step 9) Perform function test of trailer electrics