



1. Remove rear A/C to access Dometic A/C Control Module.

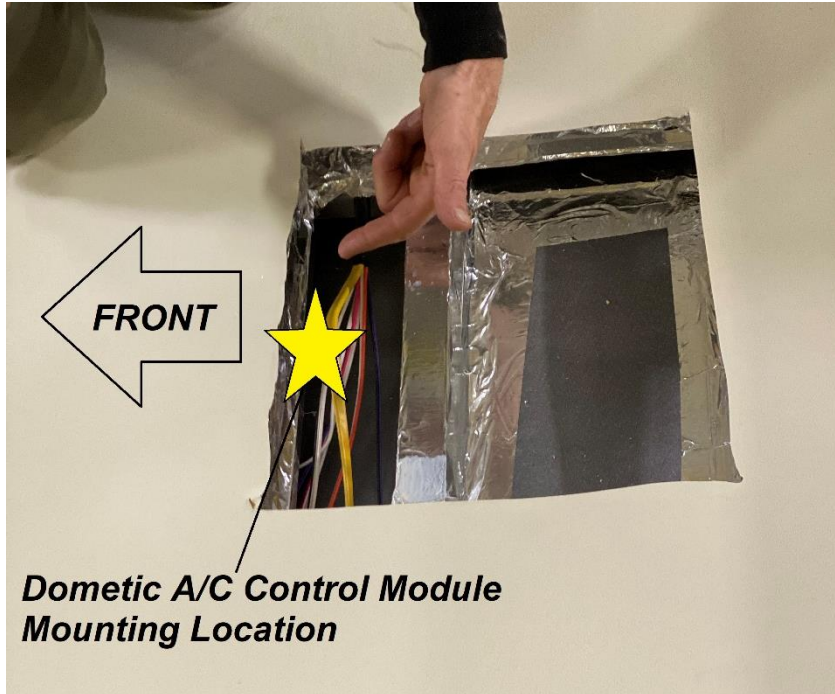


2. Find the wire harness connected to rear A/C.
 - 2.1 Unlatch wago connectors at blue wires and cap the wires.
 - 2.2 Connect a new wire to be ran to middle A/C in the slots where blue wires were.

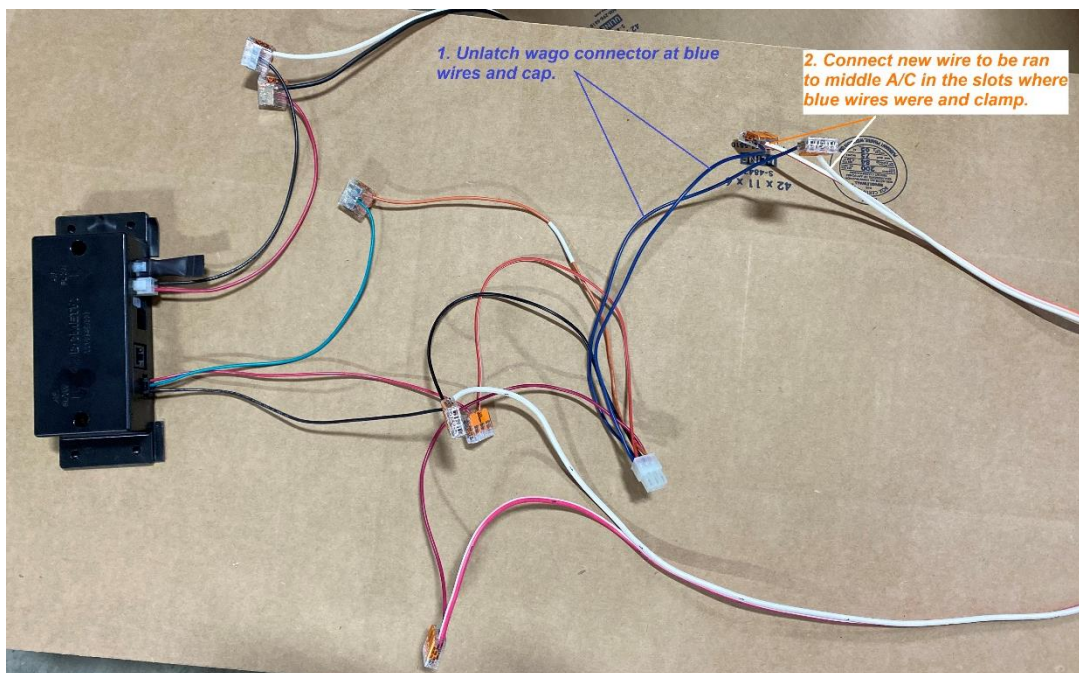

3. Remove interior vent covers and run new wire, connected to the orange and white wire, through the duct from rear A/C to middle A/C.



4. Connect new wires to the blue wires on the harness connected to the Middle A/C.

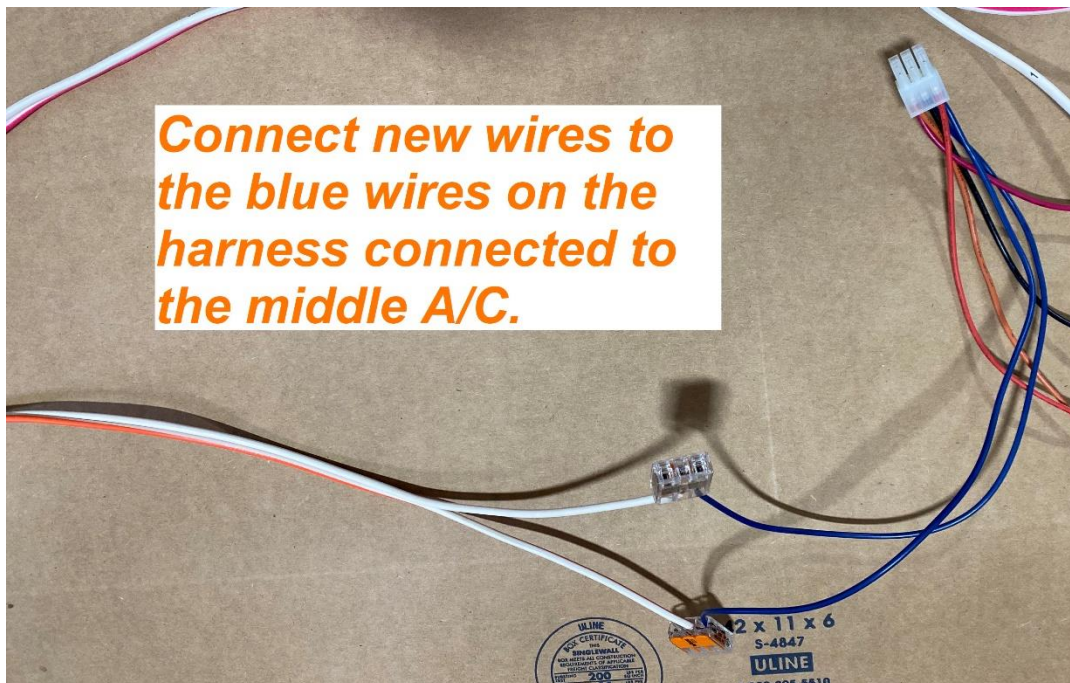



5. On the MyRV display screen, reconfigure A/C #1 furnace configuration to “None” and A/C #2 furnace configuration to “Gas”.

Step by step instructions (exactly what you’ll see) can be found at the following link.

<https://www.dropbox.com/s/f1sbcumefhpvunf/How%20to%20Change%20Zone%20for%20Furnace.mov?dl=0>